

CAR IDENTIFICATION RECORD

OWNER'S NAME: _____

ADDRESS: _____

SELLING DEALER CODE: _____

DATE OF DELIVERY: _____

DATE OF REGISTRATION: _____

REGISTRATION NO.: _____

CHASSIS NO.: _____

ENGINE NO.: _____

TRANSAXLE NO.: _____

BATTERY MAKE: _____

BATTERY SR. NO.: _____

BATTERY CODE: _____

KEY NO.: _____

**THE WARRANTY ON THIS VEHICLE IS VALID ONLY IF THE DETAILS ARE
FILLED, SIGNED AND STAMPED BY THE SELLING DEALER**

**Following items are provided with
your vehicle:**

1. Owner's Manual
2. Battery Warranty Card
(if applicable)
3. First Aid Kit
4. Advance Warning Triangle
5. Jack
6. Spare Fuses (Provided in
fuse box)
7. Tool Kit

DEALERS SIGNATURE AND STAMP



ALTROZ BS VI

OWNER'S MANUAL



TATA MOTORS

Rev07 / MAR 24

CUSTOMER ASSISTANCE

In our constant endeavour to provide assistance and complete service backup, TATA MOTORS has established an all India customer assistance centre.

In case you have a query regarding any aspect of your vehicle, our Customer Assistance Centre will be glad to assist you on our Toll Free no. **1800 209 8282**

You can also approach nearest TATA MOTORS dealer.

For updated information related to Dealer Network refer link <https://cars.tatamotors.com/dealer-locator.html>

TATA MOTORS 24X7 Roadside Assistance Program offers technical help in the event of a breakdown. Call the toll-free Road-side Assistance.

For additional information, refer to "24X7 Roadside Assistance" section in the Owner's manual.



Dear Customer,

Welcome to the TATA MOTORS family,

Thank you on the purchase of TATA MOTORS vehicle.

As a global Indian automobile manufacturer, we focus on innovation, technology and build high quality products with exceeding values of "Connecting Aspirations".

The Owner's Manual will familiarize you with the operations, equipment description, features that are either as standard or optional on your vehicle. It is requested you read this manual carefully and follow the instructions and recommendations as mentioned.

You are advised to carry out service, maintenance and repairs at TATA MOTORS Dealers and Authorized service centers through out the life of your vehicle. Always use genuine parts for continued performance of your vehicle. Avoid modification, non-genuine accessories fitment on your vehicle. TATA MOTORS does not carry any liability arising due to it. Always keep this manual in the vehicle.

You can contact our dealer or Customer Assistance toll free no.(1800 209 8282) in case of any query or support required.

Information provided in this Owner's Manual is explicit at the time of publication. However, as TATA MOTORS continues to make changes and improve products, it reserves the right to make changes in this manual or any product at any time, without notice and without any obligations.

We look forward for your continued association with us for many years to come.

Wishing you a Safe and pleasant driving experience.

TATA MOTORS PASSENGER VEHICLES LTD.

Floor 3, 4, Plot-18, Nanavati Mahalaya,Mudhana Shetty Marg, BSE, Fort,
Mumbai, (MH) - 400 001,India

CONTENTS

01. SAFETY

Important Information	1
Seats	2
Seat Belts	4
Supplementary Restraint System (SRS) (Airbags) (if equipped)	9
Children On Board	16
Child Lock (if equipped)	23
Anti-theft Device Immobilizer / PEPS	24
Electronic Stability Program (ESP)	25
Brake Sway Control (BSC)	28

02. OPENING AND CLOSING

Keys	29
Doors	31
Smart Key Features	32
Windows	34
Tail Gate Opening	37
Fuel Lid	38
Power Sunroof (if equipped)	39

03. DASHBOARD AND FEATURES

Cockpit	45
Instrument Cluster (TFT Screen) (if equipped)	46
Instrument Cluster (LCD Screen) (If equipped)	62
Instrument Cluster 7" (If equipped)	75
Tell Tales	92
Audio Reminder (If equipped)	100
Combi Switch (RH Stalk) (if equipped)	101
Head Lamp Leveling Rotary Switch	102
Combi-switch (LH Stalk) (If equipped)	103
Dashboard Controls (If equipped)	105
Head Up Display (HUD) (If equipped)	106
Steering Mounted Controls (LHS) (If equipped)	109
Steering Mounted Controls (RHS) (if equipped)	109
Mic	111
Infotainment System Display (If equipped)	111
Speakers & Tweeter (If equipped)	113
USB Port (if equipped)	113
Power Socket (If equipped)	114
Antenna	114

CONTENTS

Roof Grab Handle	115
Roof Lamp	116
Boot Lamp (If equipped)	117
Side Indicator Lamp	117
Front Lamp	117
Tail Lamp	118
iRA (iNTELLIGENT Real-time Assist) Connected Car Service	118
Wireless Power Charging	119

04. STOWAGE COMPARTMENT

Stowage Compartment	125
Hooks (If equipped)	129

05. CLIMATE CONTROL

Air Distribution	131
Air Vent	132
Rear AC Vents (If equipped)	132
HVAC Controls (If equipped)	133
Electronic Temperature Control (ETC) (if	137

equipped)

Fully Automatic Temperature Control (FATC) (if equipped)	139
Cabin Air Purification	145

06. STARTING AND DRIVING

Pre Driving Checks	147
Driving Tips	148
Seat Adjustments	152
Rear View Mirrors	156
ORVM Folding (If equipped)	158
Sun Visors (if equipped)	159
Electric Power Assisted Steering (EPAS)	159
Steering Wheel Adjustment	160
Steering Lock And Ignition Switch (if equipped)	161
Starting And Stopping (without PEPS)	162
Starting And Stopping (PEPS) (if equipped)	163
Engine Passive Start - Conditions	164
Engine Passive Stop - Conditions	165
Gear Shifting	166

CONTENTS

Reverse Gear	174
Driving	174
Starting the Engine	175
Braking	175
Drive Mode (If equipped)	176
Center Lock Unlock (If equipped)	177
Current Gear Indication	177
Gear Recommendation	178
Idle Stop Start (ISS) (if equipped)	178
Parking Brake	182
Vehicle Parking	183
Reverse Park Assist With Sensor (if equipped)	184
Rear View Camera (if equipped)	186
Surround View System (SVS) (If equipped)	192
07. EMERGENCY AND BREAKDOWN ASSISTANCE	
Emergency Equipment	203
Spare Wheel Removal Process	204
In Case Of Flat Tyre	205
Jump Starting Your Car	208
Towing	210
Fuses	213
Bulb Specification	221
24 X 7 Roadside Assistance	224
08. MAINTENANCE	
Maintenance And Service	235
Engine Compartment - Diesel	236
Engine Compartment- Petrol (NA Engine)	237
Engine Compartment - Petrol (TC Engine)	238
Engine Oil Level	239
Brake Fluid Level	240
Engine Coolant Level	241
Windshield Washer Fluid Level	242
Battery	243
Spark Plug (Petrol)	244
Tyres	245
Smart Key Battery Replacement (for PEPS variant)	248
On Board Diagnostic (OBDII) System	249

CONTENTS

Service Instructions	250
Service Schedule	251
Vehicle Parking For Long Duration (non-use Maintenance)	258
Park Regeneration Procedure	258
09. TECHNICAL INFORMATION	
Fuel Specification	261
Lubricant Specification	262
Technical Information	264
Vehicle Dimensions	268
Aggregate Identification Numbers	269
10. VEHICLE CARE AND VALUE ADDED SERVICES	
Car Care	271
Value Care - AMC	275
Value Added Services	278
Vehicle Interior Enrichment	280
Vehicle Exterior Enrichment	281

11. ENVIRONMENT PROTECTION

Environment Protection	283
Emission Affected Components	284

12. WARRANTY

Warranty: Terms And Conditions	285
--------------------------------	-----

13. EXTENDED WARRANTY

Extended Warranty: Terms & Conditions	287
---------------------------------------	-----

IMPORTANT INFORMATION

In this Owner's Manual, you will find the text under the heading "WARNING" and "NOTE" which highlights important information. Pay particular attention to these highlighted messages. The Images / Illustrations in this owner's manual are only for reference. It may defer with actual vehicle.

NOTE

Indicates additional information that will assist you in gaining the optimum benefit and care for your vehicle.

WARNING

Indicates procedures or information that must be followed precisely in order to avoid the possibility of severe personal injury and serious damage to the vehicle.

CAUTION

It indicates to be careful. You are capable of doing something that might result

in damage to equipment.

Safe Driving

Safety consciousness not only ensures your safety and the safety of other road users, but it also helps to reduce the wear and tear on your vehicle.

Safe driving depends on:

- How quickly you make decisions to avoid an accident.
- Your ability to concentrate.
- How well you can see and judge objects.
- How well familiar you are with your vehicle controls and its capabilities

Safety Tips

- Always take into account the road conditions, weather conditions, vehicle speed in order to prevent accidents.
- Turn 'ON' the side indicators at least 30 meters before taking a turn or changing the lane.
- Decelerate to a safe speed before taking turn. Do not apply brakes during cornering.

SAFETY

While Handling Hot Parts

- Never remove the coolant cap when the engine is hot. The engine coolant is under high pressure and could splash on to skin/eyes causing severe burns.
- Stay rod becomes hot enough after vehicle running, be careful while using it. Touch only rubber part available on stay rod.
- Never touch engine exhaust after vehicle running as it will cause severe injury.
- Do not touch tyre and wheel rim when it is hot after a long journey it may cause burn injury.

SEATS

Your vehicle is provided with good seating comfort. To make your journey more safe and enjoyable we recommend you to follow below warnings and cautions.

Driver's seat

⚠ WARNING

- Do not adjust seat while driving / vehicle is moving. Doing so could result in loss of control, and an accident causing death, serious injury, or property damage.
- Always sit as far back as possible from the steering wheel while maintaining comfortable control of the vehicle. Fitment of seat covers on driver seat with airbags is strictly prohibited.
- Do not keep any sitting cushion on seats. This may result in serious or fatal injury in the event of accident.
- After adjusting the seat make sure it is securely locked by pushing it forward and backwards without using

lock release lever. Sudden or unexpected movement of the driver's seat could cause to lose control of the vehicle resulting in an accident.

- All passengers must be seated in seats and restrained with seat belt properly while riding in vehicle
- If there are occupants in the rear seats, be careful while adjusting the front seat position.

Front Passenger Seat

⚠ WARNING

Never ride in a vehicle with a front seat-back fully reclined. This may lead to serious injuries. Fitment of seat covers on front passenger seat with airbags is strictly prohibited.

Rear Seat Back

⚠ WARNING

The rear seatback must be securely latched. If not, passengers and objects

could throw forward resulting in serious injury in the event of a sudden stop or collision. Luggage and other objects in boot should be kept flat. If large, heavy, or piled they must be secured properly. No passenger should ride in the boot area or sit or lie on folded seatbacks while the vehicle is in motion.

Applicable for Hatchback/SUV

⚠ WARNING

- Under no circumstances should objects be piled higher than the seatbacks. Failure to follow these warnings could result in serious injury in the event of a sudden stop or collision. Ensure that objects are securely fastened.
- Storing items against seatback or in any other way interfering with proper locking of a seatback could result in serious or fatal injury in a sudden stop or collision. After resetting the seatback to its seating position make sure it is securely latched

by pushing it forward and backwards

⚠ CAUTION

Your hands might cut or injure by the sharp edges of the seats mechanism during looking for small objects trapped under the seats or between the seat and the center console.


Head Restraint

Front Seat



Adjust the head restraint so that it is as

close to the head as possible and the center of the head restraint supports the back of the head at eye level.

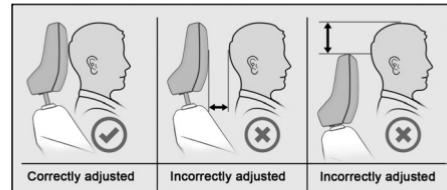

⚠ WARNING

Do not drive the vehicle without the seat head restraints. Head restraints are intended to help reduce injuries during an accident.

SAFETY

Rear Seat (if Equipped)

Adjust the head restraint so that it is as close to the head as possible and the center of the head restraint supports the back of the head at eye level.




SEAT BELTS

This section describes your Vehicle's Seat belts, Airbags and Child restraints system. Please read and follow all these instructions carefully to minimize risk of severe injury or death.

- Seat belts are the primary restraints system in the vehicle. All occupants, including the driver, should always wear seat belts. Your vehicle is equipped with three point seat belts for all occupants.
- Sit back and adjust the driver seat. Make sure that your seat is adjusted to a good driving position and the back of the seat is upright.

Buckling the Shoulder Seat Belt

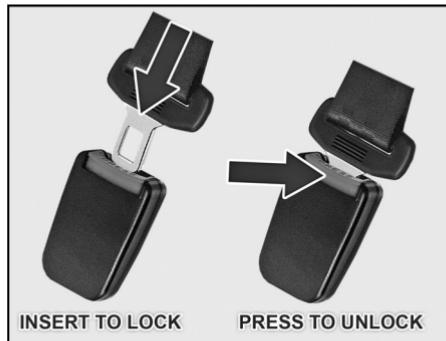

- Grasp the tongue then slowly pull out the seat belt over the shoulder and across the chest. When the seat belt is long enough to fit, insert the tongue into the lock buckle until you hear a "CLICK" which indicates that the seat-belt is securely locked. (Refer "INSERT TO LOCK" image)
- Position the lap portion of seat belt across your pelvic bone, below your abdomen. To remove slack, pull up a bit on the shoulder seat belt. To loosen

the lap portion seat belt if it is too tight, tilt the tongue and pull on the lap seat belt. A snug seat belt reduces the risk of sliding under the seat belt in a collision. Ensure that the seat belt running over the body (shoulder segment and lap segment) does not have any twist. Twisted seat belt may not offer effective protection when required.

- Ensure that the seat belt webbing is straight and not twisted. Twisted seat belts may not work properly in case of collision.

NOTE

It is not advised by TATA MOTORS to remove the mini tongue from small buckle, located at rear middle seat .

Releasing the Seat Belt

To release the seat belt, push the red button on the lock buckle (refer “PRESS TO UNLOCK” image). Ensure to hold seat belt during unlocking and release it slowly to

wards the seat belt mounting. The seat belt will automatically retract to its stowed position. If necessary, slide the tongue down the webbing to allow the seat belt to retract fully.

WARNING

Due to retractor reversal action if you leave the seat belt from the unlock position it may hit you or parts like glass in the way which may cause injury to you or damage to the vehicle.


WARNING

- Each seating position and seat belt assembly must be used by one occupant.
- Be careful not to damage or tamper the seat belt webbing or hardware. Inspect the seat belt system periodically, checking for cuts, frays, or loose parts. A frayed or torn seatbelt could rip apart in a collision and leave you with no protection.
- If the seat belt webbing or hardware is damaged, get it replaced immediately at TATA Motors Authorized service centre.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt will not work properly.
- Do not wear seat belts over hard, sharp or fragile items in clothing, such as pens, keys, spectacles etc.

SAFETY

- Do not wear seat belts over hard, sharp or fragile items in clothing, such as pens, keys, spectacles etc.
- Do not use any accessories on seat belts or modify in any way the seat-belt system. Devices claiming to improve occupant comfort or repositioning the seat belt, can reduce the protection provided by the seat belt and increase the chance of serious injury in a collision.

Seat Belt Height Adjustments (if Equipped)

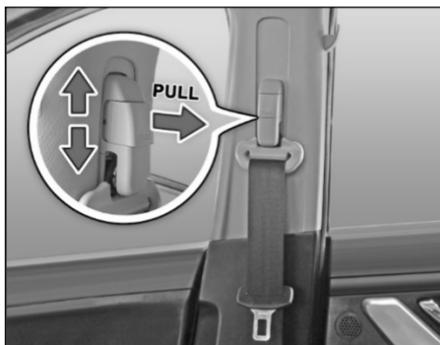

If height adjustment is provided in the seat belt, occupant can adjust it to their comfort.

Seat Belts with Pre-tensioner (if equipped)

You can use the pre-tensioner seat belts in the same manner as ordinary seat belts. The seat belt pre-tensioner system works in conjunction with the SUPPLEMENTARY RESTRAINTS SYSTEM (SRS-Airbags). In the event of a collision, as may be necessary, pre-tensioner tightens the seat belt so that it fits the occupant's body more snugly. When pre-tensioner activates, there could be some noise and release of smoke. This is normal and there are no health hazards or fire risk.

Seat Belts With Load Limiter (if equipped)

You can use the load limiter seat belts in the same manner as ordinary seat belts. The seat belt load limiter system works in conjunction with the SUPPLEMENTARY RESTRAINTS SYSTEM (SRS-Airbags). In the event of a collision, as may be necessary, load limiter reduces the load on the rib cage region of the occupant.

If the vehicle has been involved in a collision, get it inspected immediately at Authorized TATA MOTORS SERVICE Centre.

Use of Seat Belts for Pregnant Woman

WARNING

- Pregnant woman must wear a correctly positioned seat belt. It is safer for mother as well as unborn child.
- Pregnant woman should wear the lap part of the seat belt across the thighs and as snug across the hips as possible. Keep the seat belt low so that it does not come across the abdomen. That way the strong bones of the hips will take the force if there is a collision.



Seat Belt Warning Lamp



For Driver, Co-Driver & Rear Passenger

Your vehicle is equipped with Seat Belt Reminder (SBR) for all occupants.

NOTE

For Driver and Co-Driver seat:

whenever an occupant is not sitting in any seating position then seat belt reminder beeping sound will not be played in instrument cluster.

If any material is kept on any seat then SBR beeping sound may be played in instrument cluster. Please do not keep any material on seat.

- If the driver or any passenger do not fasten the seat belt, seat belt reminder lamp will blink and a buzzer will sound for pre-defined duration until the seat belt is buckled.
- If any passenger seat is occupied by

SAFETY

child (without child seat), system may detect occupancy and warn with seat belt warning. It is not taken to mean child can occupy any passenger seat and use seat belt. Please refer CRS section for recommended seating position if child is sitting with child seat.

NOTE

Fitment of seat covers on any seating position is strictly prohibited. It may affect the function of occupant sensor.

SUPPLEMENTARY RESTRAINT SYSTEM (SRS) (Airbags) (if equipped)

The SRS [Supplementary Restraint system] is designed to provide protection to occupants in case of collision or sudden impact, when crash is detected, the SRS airbag system deploys airbags to help reduce the risk of injury to the occupant. It works in conjunction with seat belts.

There are 6 airbags provided in your car:

1. Diver Airbag
2. Front Passenger Airbag
3. Side Airbag RH
4. Side Airbag LH
5. Curtain Airbag RH
6. Curtain Airbag LH

The driver airbag is mounted in the centre of the steering wheel. The front passenger airbag is located inside the dashboard in front of the passenger seat. The airbags have suitable indications on steering wheel and on dash board.

Side airbags are mounted in front row seats.

Curtain airbags are mounted above the doors along the roof on both sides.

The word 'AIRBAG' is marked at adjacent locations of respective airbags.

SAFETY

The 'SRS' system also comprises of the following components depending upon the provided safety features in vehicle.

- Seat belt Pre-tensioners
- Seat belt with load limiters
- Airbag 'SRS' ECU (Electronic Control Unit)
- Collision Sensors
- SRS wiring harness
- SRS Warning lamp

The System is active when ignition switch is in the "ON" position or the ignition mode is "ON". Airbags are designed to inflate in collisions when required.

In the event of a collision, the collision sensors will detect signals, and if the Airbag ECU judges that the signals represent a severe collision, will trigger the airbags. The inflated Airbags provide a cushion to the occupants. The Airbag inflates and deflates so quickly that you may not even realize that it has activated. The Airbag will neither hinder your view nor make it hurdle to exit the vehicle.

Airbag inflation is virtually instantaneous

and occurs with considerable force, accompanied by loud noise and smoke, which is normal. The inflated airbag, together with seat belts, limit the movement of an occupant, thereby reducing the risk of injury.

When an airbag inflates, you may see some smoke-like particles. The particles are a normal by-product of the process that generates the non-toxic gas used for airbag inflation. These airborne particles may irritate the skin, eyes, nose, or throat. If you have skin or eye irritation, rinse the area with water. For nose or throat irritation, move to fresh air. Also sometimes the smoke can cause breathing problems, in such cases get fresh air promptly.

After inflation, airbag provides a gradual cushioning effect for the occupant thereafter deflates. It is not advisable to drive your vehicle after the airbags have been deployed. If you are involved in another collision, the airbags will not be in place to protect you.

NOTE

- *Open your windows and doors as soon as possible after collision to reduce prolonged exposure to the smoke and powder released by the inflating Airbag.*
- *Do not touch the Airbag container's internal components immediately after an Airbag has inflated. The parts that come into contact with an inflating Airbag may be very hot.*
- *Always wash exposed skin areas thoroughly with lukewarm water and mild soap.*

WARNING

- Even in vehicle with airbags, you and your passengers must always wear the seat belts provided. In order to minimize the risk and severity of injury in the event of a collision.
- If an occupant is out of position during collision, the rapidly deploying Airbag may forcefully contact the

occupant causing serious or fatal injuries.

⚠ WARNING

- Always use seat belts and CRS – during every trip and at all times. Even with airbags, you can be seriously injured or killed in a collision if you are not wearing seat belt properly or not wearing seat belt when airbag inflates.
- You and your passengers should never sit or lean unnecessarily close to the Airbags.
- Move your seat as far back as possible from front Airbags, while still maintaining control of the vehicle.
- All occupants should sit upright with the seatback in an upright position, centred on the seat cushion with their seat belt on, legs comfortably extended and their feet on the floor until the vehicle is parked and the engine is turned off.

- Do not allow the front passenger to place their feet or legs on the dashboard.

Passenger Airbag (PAB) Switch

Passenger airbag switch is used to activate and de-activate the passenger airbag in the vehicle.

The switch is located on the left side of the dashboard and can be accessed once the co-driver side door is opened.



PAB Switch ON: When an adult is seated in the front passenger seat, ensure that

PAB switch is turned to 'ON' position. This will ensure that the passenger airbag is operational in the event of a collision.

PAB Switch OFF: If rearward facing child seat needs to be installed on front passenger seat to carry the child then ensure PAB switch is turned OFF. This will ensure that the passenger airbag will remain de-activated in the event of a collision.

This switch can be operated by using mechanical key / Key with remote / Smart key as per vehicle variants. Refer "Keys" section in this Manual.

Passenger Airbag (PAB) Indicator

Passenger airbag indicator is provided to notify an occupant, whether passenger airbag is activated (ON) or deactivated (OFF) in vehicle.

PAB indicator is located on roof near roof lamp.

SAFETY



PAB Indicator ON:

When the PAB switch is turned to 'ON' position to activate the airbag, 'ON symbol & text' will illuminate in amber color.

PAB Indicator OFF:

When the PAB switch is turned to 'OFF' position to deactivate the airbag, 'OFF symbol & text' will illuminate in amber color.

Wrong Seating Positions





(i) NOTE

- Never place your arm over the airbag as a deploying airbag can result in serious arm fractures or other injuries.
- Do not allow the passengers to lean their heads or bodies onto doors or place objects between the doors and passengers when they are seated on seats equipped with side and/or curtain Airbags.
- Do not place or stick any item/s in the vehicle, except at designated lo

cations (such as utility bins, cup/bottle holders, boot space etc). Loose items may act as a projectile during a collision and cause severe to fatal injuries.

- Please be aware that any unsecured item in your vehicle, such as your pet, unsecured CRS or a laptop, can become a potential hazard in the event of a collision or sudden stop, causing injuries to occupants in the vehicle.
- Coat hooks (if provided), must be used only for that purpose. Never hang other items on to those hooks. This could affect deployment of the Airbags, and may lead to severe to fatal injuries.
- Always contact your TATA MOTORS Authorized Service Centre if the vehicle is damaged, even if airbag has not inflated or if any part of an airbag module cover shows sign of cracking or damage

SAFETY

⚠ WARNING

If your SRS malfunctions, the Airbag may not inflate properly during a collision thereby increasing risk of serious injury or death. If any of the following conditions occur, your SRS is malfunctioning:

- The SRS warning lamp does not turn 'ON' when the ignition switch is placed in the 'ON' position for few seconds.
- The SRS warning lamp stays 'ON' after illuminating.
- The SRS warning lamp comes 'ON/stays 'ON' while the vehicle is in motion.
- The SRS warning lamp blinks when the engine is running.

We recommend the customer to immediately visit TATA MOTORS Authorized Service Centre and get the SRS system inspected if any of the above conditions occur.

⚠ WARNING

- Never make any modifications to your vehicle. The modifications carried out, but not limited to the vehicle frame, bumpers, front fenders, ride height, suspension, seat belts, interior trims, steering wheel (especially holders), are not acceptable. This will affect the intended performance of SRS.
- Fitment of bull bars, seat covers on seats with airbags etc, is strictly prohibited.
- If you need to make any modifications to accommodate any disability you may have, please contact your Authorized TATA MOTORS Dealer for necessary guidance.
- Do not tamper with SRS in any way. This will lead to unexpected performance of system and may cause serious injury or death.

Airbag Warning Sticker on Front Passenger Sun Visor



The Airbag Warning Symbol on sun visor reminds of the extreme hazards associated with the use of a rearward-facing child restraint on front passenger seat during airbag deployment. It does not mean that a child cannot occupy front passenger seat and use seat belt. Please refer CRS section for recommended seating position

for children.

WARNING

Never use a rearward facing child restraint on a seat protected by an active Airbag in front of it. Death or serious injury to the child can occur.

Airbags Deployment Conditions

When front airbags should not deploy?

Minor frontal collision: Seat belt (if worn) offers adequate occupant protection in low severity collisions. The airbags are triggered only when there is a collision severe enough to trigger the airbags. Deployment of frontal airbags is not beneficial in low severity collisions.

Side collision: During a side collision, occupants tend to move sideways. Therefore, deploying frontal airbags in such situations will not benefit the occupants. Side airbags and side curtain airbags are specifically designed to reduce the injuries that can occur in side collision.

Rear collision: During a rear collision, occupants tend to move (rearwards) away

from frontal airbags. Therefore, deploying frontal airbags in such situations will not protect the occupant. Head restraints and seat belts provide occupant protection during a rear collision.

Rollovers collision: During a rollover collision, unbelted occupants may float inside the passenger compartment. This will increase the risk of injuries and may prove to be fatal. Wearing seat belts provide highly effective occupant protection during rollover collision. Front airbags, are not designed to deploy in a rollover as frontal airbags cannot offer any protection in rollover collision.

When front airbags/side airbags/side curtain airbags may not deploy with minor or no visible vehicle damage?

The airbags are triggered only when there is a collision severe enough to trigger the airbags. The extent of vehicle damage is not always the correct indicator for airbag deployment. In some extreme/rare conditions of rough road driving, running into a curb or hitting other fixed objects the airbags may deploy depending upon the

severity of collision. In some of these conditions, damage to the vehicle may be minor or not be readily visible.

When front airbags/side airbags/side curtain airbags may not deploy, even with exterior visible vehicle damage?

The airbags are triggered only when there is a collision severe enough to trigger the airbags. The amount of visible vehicle damage is not always the correct indicator for airbag deployment. Some collisions can result in visible damage but with no airbag deployment, because the airbags would not have been needed or would not have provided protection even if they had deployed. Seat belts, if worn, offer adequate occupant protection in such cases.

SAFETY

CHILDREN ON BOARD

⚠ WARNING

- Do not leave unattended children in your vehicle.
- During reversing and parking, ensure that your children are far away from the vehicle.

⚠ WARNING

- Do not put the safety seat belt under your child's arm or behind its back.
- Do not use pillows, books or towels to boost your child's height.
- Do not allow children to stand up or kneel on either the rear or the front seats. An unrestrained child could suffer serious or fatal injuries during a collision.
- Do not install a booster seat or a booster cushion with a seat belt that is slack or twisted.

Child Restraint System (CRS)

TATA MOTORS strongly recommends the use of Child Restraint Systems (CRS) for all children up to 36 Kg and to be placed at recommended positions only (Refer CRS Position table in this section).

ISOFIX

CRS can be installed in the vehicle using seat belts and/or ISOFIX with support leg (if equipped) or ISOFIX with Top Tether (if equipped). These ISOFIX attachment points are located on rear outboard seating locations which enables quick and safe child seat engagement.



ISOFIX with mounting eyelets



Top Tether

Top Tether mounting anchorages are located at backside of rear outboard seats.

The harness system of CRS holds the child in place, and in a collision, acts to keep the child positioned in the seat and reduce the risk of injuries.



Keep children in a forward-facing or rearward facing CRS with a harness until they reach the size or age or weight limit recommended by your CRS manufacturer.

Selection and Installation of CRS

Always select the CRS that complies with latest safety standards (AIS 072 / ECE

R44 / ECE R129). The CRS are classified according to the child's size, height and weight. Select the appropriate CRS for your child. Ensure that the child fits properly in the CRS and it is securely installed in the vehicle.

While installing the child seats always adhere to the directions in this Owner's Manual as well as those provided by the child seat's manufacturer.

Tata Motors recommends **Joie i-Spin Safe i-Size** child seats for up to 18 Kg children. These seats are available at TML dealerships.



NOTE

Tata Motors recommends to keep the highlighted device in close condition while using Joie i-Spin Safe child seat in car

Installing The Child Seat On Front Passenger Seats

- Adjust the front passenger seat back up to its vertical position as per requirement, so that it can create adequate contact between passenger seat backrest & child seat.
- Adjust the front passenger seat for-

SAFETY

ward or backward as per requirement, so that there could not be any contact between front passenger seat & child seat or child present behind it.

- If required, adjust the front passenger seat height to its suitable position.
- While installing child seat on front passenger seating position, adjust the buckle to its suitable position of rotation.
- While installing forward facing child seat for 15 to 18kg children on front passenger seating position, adjust the front passenger seat to its rearmost position.

Installing The Child Seat On Rear Passenger Seats

- If required, adjust the front seat so that there could not be any contact between front seat & child seat or child present behind front seat.
- While installing forward facing child seats adjust the rear seat head restraints to its lowermost position or remove it if required & keep it at safe location to reinstall it whenever adult

passenger is sitting at that position.

- While installing child seats on rear outboard seating position, adjust their respective buckles to its required position of rotation.

Recommended CRS Position





SAFETY

Recommended CRS Position As Per The Vehicle Matrix

The suitability of seat position for carriage of children and recommended category of CRS is shown in the table as per the child group.

NOTE

The child's life is at risk in a collision if the CRS is not properly secured in the vehicle. Be sure to secure the child in the restraint system according to the manufacturer's instructions

WARNING

Do not use an infant carrier or a child safety seat that "hooks" over a seat-back, it will not provide adequate protection in a collision.

Recommended CRS Positions (CRS Fastened With A Safety Belt)						
Group	Mass Group	Front Passenger with PAB OFF	Front Passenger with PAB ON	Rear Out-board LH	Rear Out-board RH	Rear Centre
0	Up to 10 kg	U	X	U	U	X
0+	Up to 13 kg	U	X	U	U	X
I	9 to 18 kg	U UF	UF	U	U	X
II	15 to 25 kg	UF	UF	U	U	X
III	22 to 36 kg	UF	UF	U	U	X

X: Seat Position not suitable for children in this mass group.

U: Suitable for "universal" category restraints approved for use in this mass group.

UF: Suitable for forward facing "universal" category restraints approved for use in this mass group.

⚠ CAUTION

A CRS in a closed vehicle can become very hot. To prevent burns, check the seating surface and buckles before placing your child in CRS.

⚠ WARNING

- Do not modify CRS in any way.

⚠ CAUTION

- Do not install a booster seat or a booster cushion with only the lap strap of the seat belt or a seat belt that is slack or twisted.
- Do not leave any toys or other objects loose in the CRS or on the seat while the vehicle is in motion.

Recommended CRS Positions (CRS That Can Be Used With ISOFIX System)

Group	Mass Group	Category Of Child Seat	Front Passenger	Rear Outboard LH*	Rear Outboard RH*	Rear Centre
0	Up to 10 kg	E	X	IL	IL	X
0+	Up to 13 kg	C, D, E	X	IL	IL	X
I	9 to 18 kg	D, C, B, B1, A	X	IL IUF	IL IUF	X
II	15 to 25 kg		X	IL	IL	X
III	22 to 36 kg		X	IL	IL	X

IL: The seat is suitable for the ISOFIX child seats with "Semi-Universal" approval.

IUF: The seat is suitable for forward facing child seats and is permitted for use in this weight category.

X: The seat is not equipped for the ISOFIX system.

*Rear outboard seating positions are suitable for ISO/R3, Class C CRS.

SAFETY

After a collision, we recommend to get seat belts, seats, ISOFIX and top-tether anchorages (as may be applicable) investigated at TATA MOTORS Authorized Service Centre.

Each CRS should be used for one child only.

Passenger airbag can be turned OFF manually through switch provided on side face of the dashboard at front passenger side. Visual signal of passenger airbag ON or OFF is indicated on the roof console.

When passenger airbag is ON, a rearward facing child seat shall not be installed on the front passenger seat.

When passenger airbag is OFF, a forward or rearward facing child seat can be installed on the front passenger seat.

While installing a rearward facing child seat on the front passenger seat, passenger airbag must be OFF.

Refer images in PAB Switch section.

WARNING

If the airbag SRS warning indicator in the instrument cluster illuminates continuously, it means that there is malfunction in the system. Remove the CRS from front passenger seat and contact your TATA MOTORS Authorized Service Centre.

CHILD LOCK (if equipped)



ⓘ NOTE

- *Lift the lock lever upward to deactivate the childproof lock when not required.*
- *Child safety lever to be used for safety of child for preventing them to open rear door while seating in passenger seat to avoid accident while vehicle is running.*

Both the rear doors of the vehicle are provided with a child proof lock. Push the lock lever located on vertical face of the door downward before closing the door. The door which has been locked by activating the child lock cannot be opened from inside, it can be opened only from the outside.

SAFETY

ANTI-THEFT DEVICE IMMOBILIZER / PEPS

Immobilizer system is designed to prevent vehicle theft by electronically disabling the engine ignition system. The engine can be started only with vehicle's original Immobilizer ignition key which has an electronic identification programmed code.

(i) NOTE

Use only Flip key, the other should be kept in a safe location. Note down "key Tag no." information (and keep it safe) which is required while getting new/spare keys. Remember that it is not possible to prepare new/spare keys without the "key Tag number." Take precaution about Flip key, as without Flip key vehicle cannot be started.

Vehicle Condition	Immobilizer Lamp Status	Vehicle State	Meaning / Function Of The State
Ignition OFF	Blinking	Locked	Vehicle Immobilized and awaiting electronic key
Ignition ON	OFF	Unlocked	Normal condition and ready to start the vehicle
Ignition ON	ON	Locked	<ul style="list-style-type: none">• Problem with key (Wrong key used to start vehicle)• Problem with Immobilizer system. Contact a TATA MOTORS Authorized Service Centre.
Ignition ON	Blinking	Unlocked	Contact a TATA MOTORS Authorized Service Centre immediately.

ELECTRONIC STABILITY PROGRAM (ESP)

ESP monitors driving stability and traction. If ESP detects that the vehicle is deviating from the direction desired by the driver, one or more wheels are getting braked to stabilize the vehicle. ESP assists the driver when the vehicle is pulling away on wet or slippery roads. ESP can also stabilize the vehicle during braking and acceleration. ESP warning lamp in the instrument cluster lights up when the ignition is switched on. It goes off after 2-3 seconds if system is healthy.



⚠ WARNING

- If ESP is malfunctioning, vehicle stability may get affected.
- In such cases, Drive the vehicle carefully, visit to TATA MOTORS Authorized Service Centre as soon as possible & rectify the issue with experts help.

1. Antilock Braking System (ABS)

ABS regulates brake pressure in such a way that the wheels do not lock when you brake. This allows you to continue steering the vehicle when braking.



The ABS warning lamp in the instrument cluster lights up when the ignition is switched on. It goes off after 2-3 seconds if system is healthy.

⚠ WARNING

- If ABS (ABS) is faulty, the wheels could lock when braking. The steer ability and braking characteristics may be severely impaired. There is an increased danger of skidding and accidents.
- Drive on carefully. Have ABS checked immediately at a TATA MOTORS Authorized Service Centre as soon as possible.

While Braking

- In case of emergency braking, press

the brake pedal fully. This allows the ABS to regulate braking force and maintain directional control of vehicle.

- When ABS is active driver may feel brake pedal pulsating and very low (ABS) motor activation noise from engine compartment which is normal during braking.

⚠ WARNING

- ABS may not shorten the distance in all situation.
- ABS system will have the effect of increased stopping distance due to conditions such as gravel, pot holes, slippery surfaces, wet road, ground covered with snow etc.
- Travelling on bad road, panic braking brake pedal may become hard, this is due to ABS system taking control. ABS will not compensate for bad road, weather conditions and poor driving judgment. Always drive carefully in adverse weather and traffic conditions.

SAFETY

- Always keep safe distance and adhere to speed limits.

2. Electronic Brake Force Distribution (EBD)

EBD monitors and controls the brake pressure on the rear wheels to improve driving stability while braking.



EBD provides optimal braking pressure distribution between front and rear wheels to optimize braking distance and to ensure vehicle stability by means of lowering braking pressure increase at rear wheels.

WARNING

- If EBD is malfunctioning, the rear wheels can lock, e.g. under full braking. This increases the risk of skidding and an accident.
- You should therefore adapt your driving style to the different handling characteristics. Have the brake system checked immediately at a TATA MOTORS Authorized Service Cen

tre as soon as possible.

3. Cornering Stability Control (CSC)

Corner stability Control supports / stabilizes vehicle during partial braking on the curves by reducing pressure at required inner wheel of the vehicle. This helps to reduce the probability of vehicle over steering during cornering.

4. Electronic Brake Pre-fill (EBP)

The Electronic Brake Prefill (EBP) function reduces the air gap of the brake pad and the brake disc. The function is triggered after a sudden release of the accelerator pedal due to an unexpected emergency brake situation faced by the Customer. By actively pre-filling the brake-system the brake response time will get reduced and results in a shorter stopping distance

5. Roll Over Mitigation (ROM)

The main feature of the Roll over Mitigation function is to detect a rollover critical situation and to prevent the vehicle from rollover. This is done by active brake interventions on selected wheels, thereby re-

ducing the forces that causes a roll over situation.

6. Hydraulic Brake Assist (HBA)

In a dangerous emergency situation, most of the drivers don't utilize the full available performance of the brake system, as they may apply brake too soft due to Panic. The HBA function detects the critical situation and builds up additional brake pressure to reduce the braking distance.

7. Hydraulic Fading Compensation (HFC)

To compensate the hydraulic fading in the Brake Circuit while applying brake under extreme operating condition which leads to excessive temperature rise of brake fluid. The moment the brake temperature rises, the HFC system automatically compensates for this by increasing the hydraulic pressure in relation to the force applied to the pedal.

8. Drive Wheel Torque by Brake (DWT-B)

Dynamic Wheel Torque Vectoring system enables the driver to steer the vehicle exactly as intended by shifting propulsion

torque via braking. It achieves high off-road performance even on the toughest roads.

9. Hill Hold Control (HHC)


Hill Hold Control is a comfort function. The main intent is to prevent the vehicle from rolling backwards while driving off up-hill on an inclined surface.



10. Panic Brake Alert (PBA)

Panic brake alert warns the surrounding vehicles when an emergency or heavy braking takes place. The function will trigger Hazard lamps automatically, which will provide an immediate warning to vehicles directly behind and nearby. With PBA, surrounding drivers and vehicles have more time to respond against slowdown vehicles. By providing additional warning to improve road safety, PBA reduces the amount and degree of injuries caused by rear end collisions that occur during heavy braking.

11. After Impact Braking (AIB)

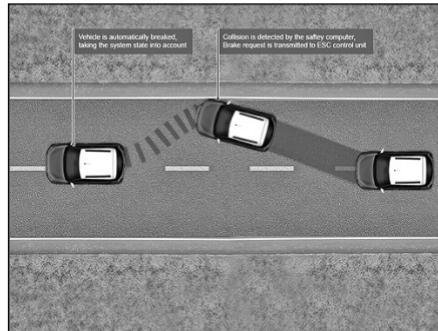

In the event of primary collision there are chances that vehicle can no longer be safely controlled. Accident analysis has shown that an active brake intervention would mitigate the effect of the subsequent collisions. After impact braking system is activated automatically and brakes the car in a safe manner to mitigate secondary collision. Hazard & brake lights are triggered to intimate surrounding users of an emergency situation. Warning lights will continue flashing after vehicle comes to a standstill. In case vehicle is fitted with Automated Parking Brake, it will be auto engaged. The driver can override the system


by depressing the brake/acc pedal if there is a risk of being hit by following traffic. The basic function of AIB is that the brake system is intact after the primary impact & reduce the impact/severity of subsequent collisions.

SAFETY

BRAKE SWAY CONTROL (BSC)

Detects tendency of instability during Braking in ABS-alone vehicles by monitoring individual wheel.

Enhances vehicle stability by controlling braking pressure on individual wheels during partial braking.

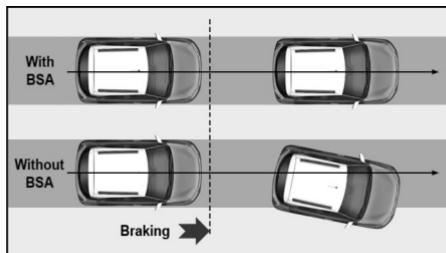

KEYS

A key is an electronic access and authorization system available as a standard feature with your vehicle.

Unlocking Principle

The transponder in the ignition key carries a Unique Identification Code (UID). The vehicle unlocks when the code on the key matches with the code on the Engine Management System (EMS). In case of PEPS variant, Immobilizer function is provided by PEPS ECU.

Engine Starting

When the key is inserted and the ignition is switched to 'ON', all codes are communicated within key, Immobilizer and EMS. The engine will start only if all the codes match.

Loss of Keys

If one of the keys is lost, Contact the TATA MOTORS Authorized Dealer/Service Center immediately.

WARNING

- Do not turn 'ON' ignition switch by using key with any type of metal wound around its grip or in contact with it. This may be detected as abnormal condition by immobilizer and prevent engine from starting.
- Do not leave the key in high temperature areas. The transponder in it will behave abnormally when reused.
- Do not try to start the vehicle when the Immobilizer indicator lamp on the instrument cluster is glowing. In this condition the vehicle will not start and the vehicle's battery will also be drained due to frequent cranking.

OPENING AND CLOSING

Keys (as available)

Sn	Name	Remote Key	Description
1	Mechanical key		<ol style="list-style-type: none">1. Locking all doors2. Unlocking all doors
2	Smart key (PEPS)		<ol style="list-style-type: none">1. Locking all doors2. Approach light3. Tail gate opening4. Unlocking all doors

DOORS

Door Lock and Unlock with Key (if equipped)


The front doors can be locked or unlocked from outside using the key blade.



Insert the key in the slot and turn it clockwise to lock and anticlockwise to unlock the door.

Door Locking and Unlocking Using Door Handle Switch (DHS)

To lock/unlock all the doors without operating smart key button/ key blade. Press the door handle switch (DHS) provided on the driver door to lock/unlock all the four doors including Tail gate.

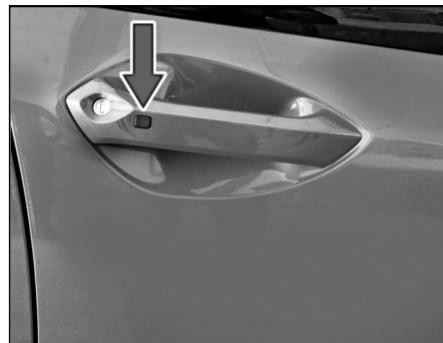

(i) NOTE

- Authentication range for smart key ranges from 1 to 1.5 meters from outside the respective door or tail gate.

- Passive entry works only when ignition is off.

Rear Door Opening



Door opening handle is provided on the side of the window.

To open the door, press the latch provided inside the handle and pull.

OPENING AND CLOSING

Locking Without a Key From Inside



All the doors can also be locked from inside by pressing lever on driver door and independently on other doors respectively.

Opening the Doors From Inside



All doors can be opened from inside. To open, pull the door opening lever. All doors can be unlocked by pulling the inside release lever to the intermediate position. When it is further articulated will unlatch the door and can be opened.

SMART KEY FEATURES

Vehicle Search

If smart key is not within the authentication range, the turn indicators of vehicle flashes four times for the driver to locate the vehicle.

Automatic Activation of Immobilizer

If smart key will not found within the passenger compartment, engine will be immobilized and vehicle cannot be start.

Auto Lock/unlock of Doors/ Auto Re-lock (drive away locking)

In case of PEPS variants, door will get unlocked when ignition is OFF by pressing start/stop button.

Vehicle doors get automatically locked when all doors are closed and the vehicle speed crosses 10 kmph.

Also, when unlocked with remote key and if no door is opened within 30 seconds, vehicle doors get automatically locked.

Key is inside the vehicle and all doors closed with vehicle locked condition. In this scenario customer is informed about

the key forgotten inside the vehicle through alarm for first 10 seconds with turn indicator flashes. The flashes will continue for 180 seconds at every 20 second interval with turn indicator flashes to enable customer to take out the key from the vehicle. Customer is advised not to leave the key inside the vehicle and if the warnings are ignored by customer for entire 180 seconds, vehicle intelligence takes over the control and lock the vehicle for security reasons.

NOTE

Do not forget to take out key before leaving the vehicle to avoid such situation.

Anti-grab / Anti-scan Coding

The remote control set of this security system is protected against the use of devices called 'scanners' and 'grabbers' that can record and reproduce some types of remote codes.

Important

- Don't press unlock button on remote in the vicinity of your vehicle, as you may accidentally unlock your vehicle.
- For battery replacement procedure, refer 'MAINTENANCE' section.
- Don't remove the battery connection of the vehicle while the vehicle has been locked by remote

Smart Key Precautions

1. If smart key is close to radio transmitter, it may interfere with the operation of the smart key.
2. If the smart key is near a mobile two way radio system or a cellular phone, then it will not work correctly.
3. If another vehicle's smart key is being operated close to your vehicle, the signal will fluctuate.

WARNING

Keep the smart key away from electromagnetic materials which block electromagnetic waves to the key surface

WARNING

In case any button of the key is accidentally pressed for more than 20 seconds, the remote stops functioning till the time the button is pressed. The LED on the Remote also stops glowing. The function of the remote gets reinstated immediately when the user stops pressing the push button of remote.

OPENING AND CLOSING

Force Panic Operation

Force Panic ON Operation


When the vehicle is in off condition and the lock and unlock buttons are pressed at the same time, the force panic operation becomes active. In this case, the turn indicators start flashing and the vehicle starts to honk.

Force Panic OFF Operation

Force Panic OFF operation: To deactivate the force panic operation, press any button on the smart key.

WINDOWS

Power Windows (if equipped)

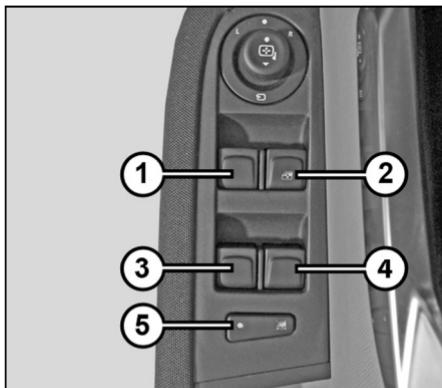

1. Front Window Winding Switch (Left)
2. Front Window Winding Switch (Right)
3. Rear Window Winding Switch (Left)
4. Rear Window Winding Switch (Right)
5. Inhibit Switch

Window glasses on all four doors can be operated by switches provided on the main control panel located on the driver's arm rest. They work only when the key is

in the 'IGN ON' position.

(i) NOTE

Power windows can be operated for 30 seconds in 'IGN OFF' and 'KEY OUT' positions, provided the doors are closed.

Express Down (if equipped)

Window glasses can be opened by a single long press of the switch. Express down feature is provided for the driver's door only.

Express Up With Anti-pinch Function (if equipped)



Window glasses can be closed by a single long press of the switch. Express up feature is provided for driver's door only.

Anti – Pinch function is provided which will stop the upward movement of glass and lower it, if any obstruction or resistance is detected.

Thus, it gives full and reliable protection for hand, neck and any obstacles as well.

Individual Switches

Individual window winding switches have been provided on the front passenger and rear doors.




Glasses are wound up or down by pulling or pressing the switch.

WARNING

While raising the glass, take care to avoid fingers/hands getting trapped between glass and the door frame.

Inhibit Switch

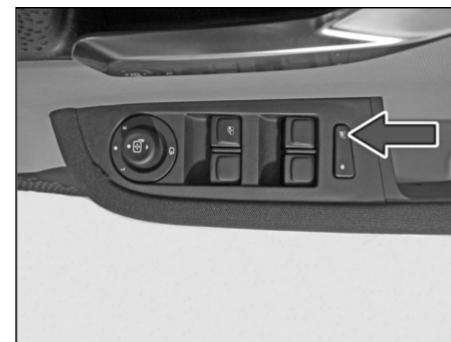

Inhibit Switch ON

When switch is pressed, amber light turns 'OFF'. The individual switches provided on rear and front passenger door can be operated. It can also be operated from the switches on driver's arm rest.

OPENING AND CLOSING

Inhibit Switch OFF


When switch is pressed, amber light turns 'ON'. The individual switches provided on rear and front passenger door cannot be operated. Still it can be operated from the switches on driver's arm rest.

⚠ WARNING

- If children operate the windows they could be get trapped, particularly if they are left unsupervised. There is a risk of injury a risk of injury.
- Activate the window inhibit feature when children are travel-ling. When leaving the vehicle, always take the key with you and lock the vehicle. Never leave children unsupervised in the vehicle.

Manual Window Winding (if equipped)

Use window winder handle for lowering or raising up window glasses manually where power windows are not provided.

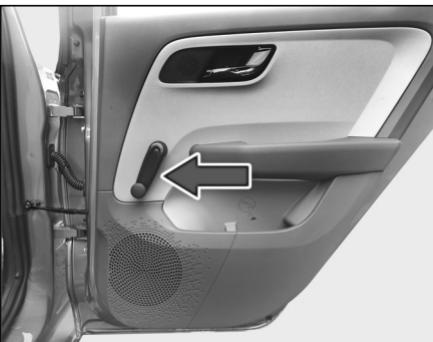


Opening the Bonnet

1. Make sure that the engine is switched off and vehicle is in neutral gear with the parking brake applied.
2. Pull the bonnet release lever. The bonnet will pop up slightly.
3. Lift the bonnet slightly and with your finger and slide the secondary lock lever located under the center of the bonnet.

ⓘ NOTE

Make sure that the wiper arms are not raised before you lift up the bonnet to avoid damaging the wiper arms and the bonnet.

4. Lift the bonnet up. Pull the bonnet stay rod from its clip and put the free end into the slot provided on frame.

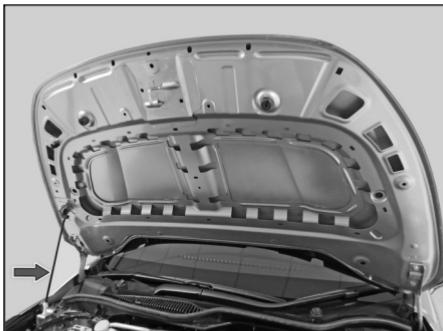

⚠ WARNING

- The stay rod can be hot enough to burn your finger right after driving. Touch the rod after it becomes cool enough.
- Put the stay rod into the hole correctly. If the rod drops off, your body may be caught below the bonnet.
- Deactivate the Idle Stop Start (ISS) function for any operation to be performed in the Engine compartment.

Closing

1. To close the bonnet, hold the bon-net by one hand, disengage the stay rod and clamp it back properly.
2. Lower the bonnet close to the bumper, then let it drop down.

⚠ WARNING

Make sure that the bonnet is correctly locked or it can fly up unexpectedly when you drive.

TAIL GATE OPENING

ⓘ NOTE

Some variants may have multiple options.

Option I




To unlatch the tailgate, press the tail gate button on the remote.

ⓘ NOTE

- Tail gate can be unlatched without smart key.

OPENING AND CLOSING

FUEL LID

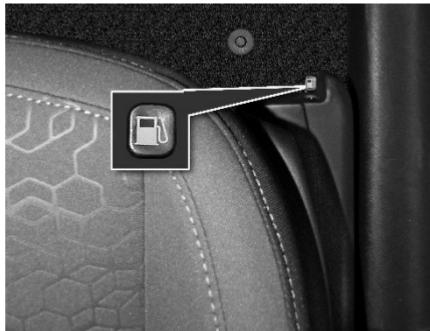

To release the fuel flap, pull the lever located at the right hand side below the driver seat.

For opening, open the fuel cap, turn it counter clockwise.



For closing, turn the fuel cap clockwise and gently push the fuel flap till it gets locked.

WARNING

- To fill up the fuel, the Engine must be stopped by turning OFF the Ignition Key / Start-Stop button. If the Engine is in Idle Stop Start (ISS) mode, it may restart automatically while filling the fuel.
- Remove the fuel filler cap slowly, and wait for any hissing to stop. The fuel may be under pressure and

may spray out.

- If fuel cap needs replacement, make sure that it is replaced by a genuine cap at the TATA MO-TORS authorized service center


POWER SUNROOF (IF EQUIPPED)

It brings natural light and fresh air into passenger compartment. The cabin becomes more illuminated and bright which gives pleasant feeling while driving and makes driving experience more enjoyable and more relaxed.

Sunroof allows air to flow evenly from the roof which is much quieter and less intrusive than wind blowing through a side window.

Sunroof can be operated by Manual Switch, Voice Command and by Rain Detection/Vehicle Lock.

1. Manual Switch

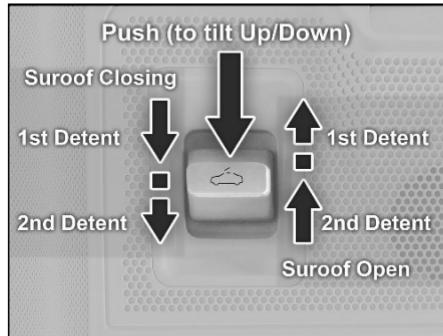

This switch is used to open, close, tilt up & tilt down the sunroof as and when required with switch intended operation.

1. Pull the knob away from the windshield to open the sunroof. It will be having two detents.
 - 1st detent Manual (long press) to open and stop at desired position.
 - 2nd detent Express (one touch) to open Sunroof completely.
2. Push the knob towards the windshield to close the sunroof. It will be having

two detents.

- 1st detent Manual (long press) to close and stop at desired position.
- 2nd detent Express (one touch) to close Sunroof completely.

3. Press at the center of the knob for tilt up/down function. Sunroof switch mounted in overhead console near roof lamp.

Sunshade Open Position



OPENING AND CLOSING

Sunshade Close Position



- System will prompt with "What can I do for you".



- Give the "sunroof open/close" command. Sunroof will open/closed.

Warning For Voice Command

- Speak the commands /Instruction in a neutral English accent for best results.
- Do not take long pauses (greater than 1 second) while speaking the words in a command. Speak the words of the command at a constant rate.
- Avoid varying your pitch and volume while speaking the commands. Speak clearly and loudly at a reasonable speed.
- Ensure that there is no noise disturbance when you speak the commands like, other passengers in the vehicle are talking or there is lot of wind noise. Disturbance from external sound sources may result in poor voice

2. Sunroof Voice Command

Ensure vehicle is in IGN ON/Engine run condition.

- Enable voice recognition via steering wheel switch or voice command icon from the infotainment screen

recognition.

- Always face forward while speaking your commands as the voice recognition quality is best in this orientation.

NOTE

For more information on sunroof voice commands, refer infotainment manual. Refer link - <https://cars.tatamotors.com>

3. Sunroof Closure on Auto Detection of Rain/vehicle Lock

For User Convenience/Protection of vehicle, sunroof will automatically close under following conditions.

NOTE

Combi Switch should be in auto mode to close sunroof with rain sensor.

Rain Detection

When sunroof is open and rain is detected (based on Wiper speed is slow/high upon raining), then Sunroof will close automatically

Vehicle Locking

The sun roof will close automatically when ignition is off and vehicle is locked from out through driver door manual key or by remote key.

Automatic Reversal / Anti-pinch Function



If the sunroof senses any obstacle while it is closing then it will reverse its direction and opens the sunroof so that trapped object will get released easily. The auto reverse function may not work if very thin or soft object is caught between the sunroof

assembly. Anti-Pinch/ Automatic reversal is a safety feature however to override it and operate sunroof manually, press sunroof close switch within 10 seconds of auto-reversal completion and hold it till sunroof is fully closed.

WARNING

Never try pinching of any part of your body intentionally to activate the Automatic reversal function.

The Automatic reversal function may not work if something gets stuck just before the sunroof fully closes.

Warning For Sunroof

Even though the sunroof can be operated when the ignition key is in the ON position (the vehicle is not running), operating the sunroof repeatedly with the vehicle turned off will run down the battery. Operate the sunroof while the vehicle is running

When a desired sunroof operation is completed, release the switch. If you keep pressing the switch, it could cause a malfunction. Especially in winter, never oper-

OPENING AND CLOSING

ate the sunroof if moving areas are iced. Wait until the areas are de-iced.

Make sure head, hands, arms or any other body parts or objects are out of the way before operating the sunroof. Body parts or objects may get pinched causing injuries or vehicle damage.

Never deliberately use your body parts to test the automatic reversal function. The sunroof glass may reverse direction, but there is a risk of injury.

Dust accumulated between the sun-roof and roof panel can make noise or cause any damage. Open the sunroof and remove dust regularly using a clean cloth.

Do not sit on the top of the sunroof. It may cause injury or vehicle damage.

Do not allow passengers to lean out of an open sunroof whilst the vehicle is in motion. Injuries may occur from objects such as tree branches.

Safety of the vehicle occupants must be observed at all times. Do not allow limbs to be placed in the moving path of the sunroof at any time, injury may occur.

WARNING

High Pressure wash Jet Flow should not be directed on Sunroof sealing area around periphery of glass. Doing so many lead to water leakage inside cabin.


Initializing The Power Sunroof

In the event of a power failure or while replacing the dead fuse or battery disconnection when the sunroof is in motion, then sunroof will require initialization when the power is restored.

Initializing procedure:

1. Turn ON the ignition.
2. Close the sunroof fully by pressing 'sunroof close switch' and keep the switch pressed for 1-2 seconds after the roof is fully closed, till clicking sound comes from Sunroof.
3. The Initializing command is complete, Check if the Express open/close features are working.

B-call And E-call Switch

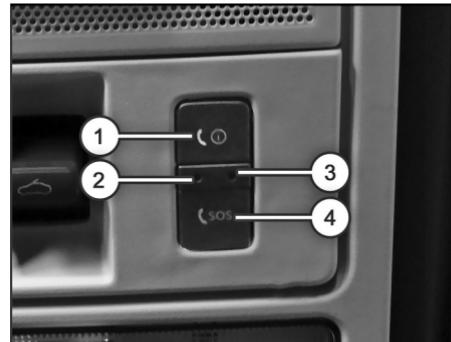


1. **B-Call Switch:** B-Call (Breakdown Assistance) will connect you to a TATA MOTORS Roadside assistance for Towing. Not for ambulance service.
2. **Red LED Indication:** Red LED indicates the fault or failure in B-Call/E-Call functionality.
3. **Green LED Indication:** Green LED indicates the status of ongoing B-Call or E-Call.
4. **E-Call Switch (Emergency Call or SOS Switch):** E-Call will connect you

to towing and ambulance services.

 **NOTE**

**Subject to mobile network, connectivity and location mentioned.*


COCKPIT

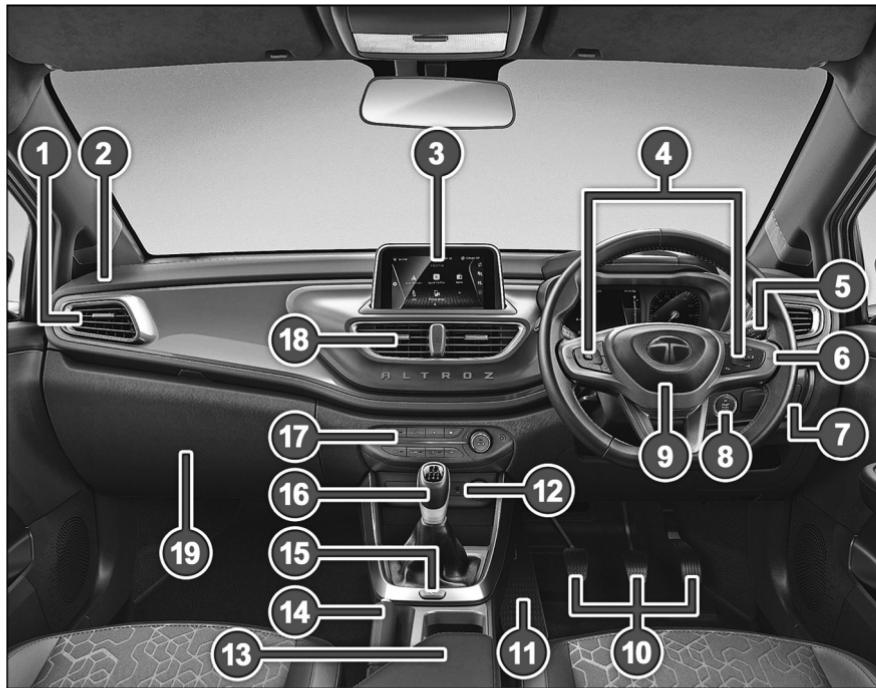

1	A.C. Air vent
2	Airbag (PAB)
3	Infotainment Display (if equipped)
4	Steering mounted controls (if equipped)
5	Combi Switch
6	Horn pad
7	Fascia switch (if equipped)
8	Start - Stop switch / Ignition switch (if equipped)
9	Airbag (DAB)
10	Controls
11	Foot Rest
12	USB Port
13	Foldable and Sliding arm-rest (if equipped)
14	Parking Brake Lever
15	Drive mode switch/Center lock unlock
16	Gear shift lever
17	HVAC Control panel / FATC / ETC
18	Center air vent
19	Glove box

DASHBOARD AND FEATURES

INSTRUMENT CLUSTER (TFTScreen) (if equipped)

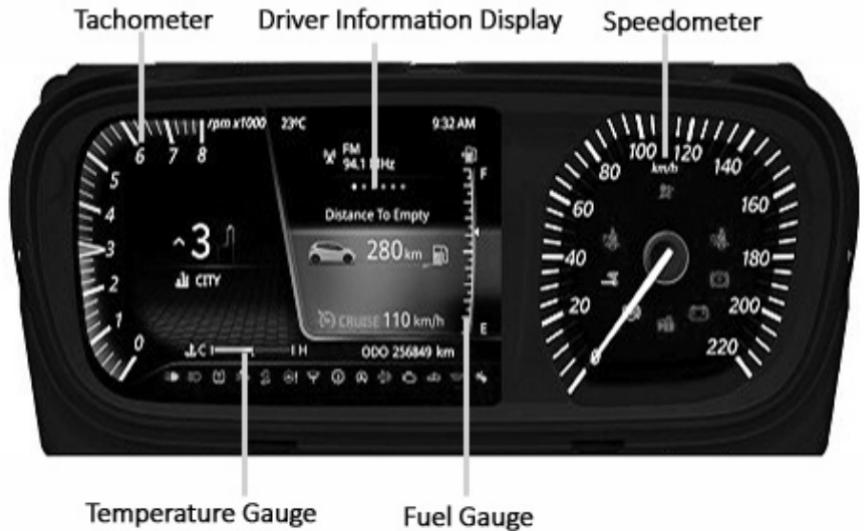

NOTE: All indicators shown may not be applicable to your vehicle.

DASHBOARD AND FEATURES

Speedometer



Speedometer indicates the vehicle speed in kmph.

ⓘ NOTE

At every key IN and ignition ON, the Instrument Cluster needles and gauges move to max. and return to '0' position. This is a welcome strategy and a self-check feature.

Tachometer



Tachometer indicates engine speed in revolutions per min (rpm).

⚠ WARNING

Do not drive the vehicle with a high engine rpm. This may cause damage to the engine and reduce its life.

Fuel Gauge

When the ignition switch is in "ON" position, fuel gauge gives an approximate in-

dication of the amount of fuel in the fuel tank. In indication window, "F" stands for full and "E" stands for empty.



When fuel in the tank nears empty, low fuel warning tell-tale light glows. Fill fuel as soon as possible.

ⓘ NOTE

- Do a check of the fuel level when the vehicle is stationary on a level road.*
- The fuel level displayed can vary when you drive on inclines, curves,*

DASHBOARD AND FEATURES

brake and accelerate suddenly. This is due to the movement of fuel in the tank. The low fuel warning lamp may turn to ON or OFF earlier or later than usual.

WARNING

If there is any defect in the system, Low fuel warning symbol will blink. Take your vehicle to the nearest TATA MOTORS Authorized Dealer/Service Center.

Temperature Gauge

When the ignition switch is in the "ON" position, this gauge indicates the engine coolant temperature.



The indicator should be within the normal, acceptable temperature range i.e. between "H" and "C". If the indicator approaches "H", overheating is indicated by a RED progress bar.

If the coolant temperature is very high, the engine coolant temperature tell-tale light flashes and you will hear an audio warning. In this case, stop the vehicle, switch the engine 'OFF' and allow it to cool down for some time. Contact the nearest TATA MOTORS Authorized service centre immediately for rectification.

WARNING

The red progress bar indicates over heating due to high coolant temperature that may damage the engine. If you

continue to drive the vehicle in this case, it can result in severe engine damage or even fire.

Driver Information System

Driver Information	System Image	Description
Odometer	ODO 256894 km	This indicates distance travelled by the vehicle. The odometer reading does not return to "0" when maximum value is reached; the display will freeze the maximum value.
Trip meter A & B	Trip A 0000.0km Trip B 0000.0km	The trip meter can be used to measure the distance travelled on short trips or between fuel stops. It can be reset to "0". The trip meter reading becomes "0.0" after it crosses 9999.9 km.
Clock	9:32 PM	Indicates current time in AM/PM mode. Clock time can be changed using steering wheel switches on the steering wheel. Whenever the battery terminals or related fuses are connected, you must reset the clock time. This feature is equipped when ignition switch is in 'ON' position. NOTE: <i>Clock settings can also be changed through infotainment system. For more information, refer infotainment manual.</i>
Service reminder		This indicates how many days/kilometres are left till service is due. If service is overdue, it will display "0" km or "0" days and a spanner symbol will blink every time ignition is ON for a few seconds. Never reset the display between service intervals as it may give incorrect readings. Service reminder reset option in setting will be enable only after due condition satisfied. The information is retained in the service interval display even after the vehicle battery is disconnected. NOTE: <i>This option is for indicative purpose only. Keep track of your odometer reading and follow the maintenance schedule.</i>

DASHBOARD AND FEATURES

Driver Information	System Image	Description
Power and Torque (if equipped)		This shows the power and torque figures delivered by engine in the particular driving condition.
Door Ajar		Respective door open display pop up come for few sec and then telltale with respective door open shall be displayed.
Current gear position (indicator)		Current gear engaged by the transmission shall be displayed on DIS. NOTE: If "F" is displayed it means a defect in the system is detected Contact the nearest TATA MOTORS Authorized service centre immediately to rectify the problem. <i>In case of a manual transmission, the gear number will be displayed when the clutch is fully released.</i>
Gear Recommendation		Up or down arrow will be displayed on DIS to shift a gear up or down. No arrow shall be displayed when the selected gear is as per the Vehicle dynamics.

Instantaneous Fuel Economy (IFE)



It indicates fuel economy of current drive when Ignition is turned 'ON'.

To reach the Instant Fuel Economy in the Instrument cluster. Press the **< >** button on the RHS of the steering wheel.

IFE display does not show Fuel Economy of last drive.

The display does not show actual value unless vehicle is moving.

The indication on the display screen may be delayed if fuel consumption is affected by driving pattern.

(i) NOTE

IFE will vary frequently as per driving pattern.

Power and Torque



Indicates the value of Power and Torque delivered by engine in the particular driving condition.

Average Fuel Economy (AFE)



Trip A



Trip B

DASHBOARD AND FEATURES

AFE value is an estimate of fuel economy. It may vary significantly based upon driving conditions, driving habits and condition of the vehicle.

To see the average fuel economy in the instrument cluster, press the **◀ ▶** switch on the RHS of the steering wheel. Trip time, Average speed and Trip distance will reset to '0' when respective Trip meter is reset.

NOTE

0' when Battery is removed and refitted. 0.5 km of respective trip. Once 0.5 km distance is covered, Average Fuel Economy will be displayed. Even after 0.5 km distance covered for particular trip, if Average Fuel Economy is displayed as '—.—', then take your vehicle to TATA MOTORS Authorized Dealer/Service Center.

Distance to Empty (DTE)



The above DTE screen indicates an approximate distance in 'km' that your vehicle can travel with available fuel in tank.

To reach the Distance to Empty in the Instrument cluster. Press the **◀ ▶** buttons on RHS of the steering wheel.

DTE values may vary significantly based on driving conditions, driving habits, and condition of the vehicle. It is an estimate value of the available driving distance.

If low fuel warning light glows, fill the fuel tank immediately regardless of the DTE figure.

NOTE

- If DTE is displayed as '—.—', then take your vehicle to the TATA MOTORS Authorized Dealer/Service Center.*
- The DTE will update with a new value when fuel is added for more than 7 litres at a time.*

Infotainment Information on Instrument Cluster Display Unit



The instrument cluster will display information like media, navigation and FM.

Setting Screen



User can enter into setting by pressing select button while being in setting screen.

(i) NOTE

Service reminder reset option in setting will be enable only after due condition satisfied.




To change the option by pressing **>** button on RHS of the steering wheel.

(i) NOTE

In the Setting menu if there is no user input for 10 sec the previous screen shall be displayed.

Illumination Screen

User can select illumination setting by scroll down & pressing set button on the RHS of the steering wheel.

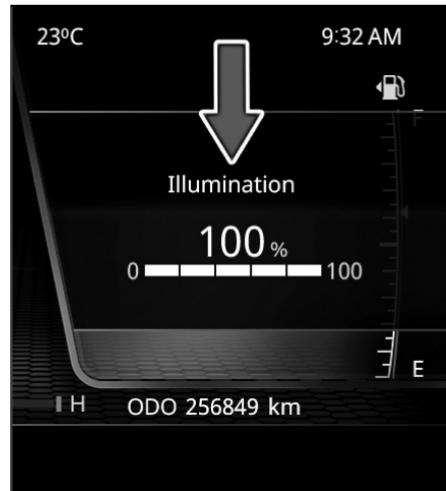

To increase the illumination from 20% to 100% in five steps by pressing **>** button on RHS of the steering wheel.

To decrease the illumination from 100% to

DASHBOARD AND FEATURES

20% in five steps by pressing  button on RHS of the steering wheel.

Illumination setting

If parking lamp is OFF, the option is greyed out and cannot be selectable

Illuminated Key Ring

When the vehicle is unlocked, the illuminated key ring glows up. This helps to locate ignition switch in the dark.

Outside Ambient Temperature



This displays outside ambient temperature reading with an accuracy of $\pm 1^{\circ}\text{C}$.

The temperature sensor is located at the front bumper. Therefore the temperature reading can be affected by heat reflection

from the road surface, engine heat and the exhaust from surrounding traffic.

If outside temperature falls below -1°C , a "snowflake" symbol appears in addition to the outside temperature reading.

NOTE


For an accurate temperature reading, make sure the vehicle speed is above 30 kmph.

WARNING

If display shows OAT temp as " - ", take your car to the TATA authorized service center.

Service Reminder Setting

User can select Service Reminder Screen by Scroll down & pressing Set Button in Setting Screen.

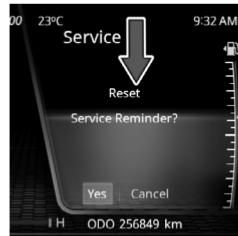

User can reset the service reminder symbol by up / down   & set  buttons

NOTE

In the Setting menu if there is no user input for 10 sec the previous screen shall be displayed.

Clock

- Clock indicates current time in 12 / 24 hours mode.
- Clock mode can be changed either

through Instrument Cluster setting screen or through Infotainment system setting screen, refer infotainment system manual for this.

Clock Setting

- User can select clock setting by scroll down & pressing set button in setting screen.

- Select button  to be used to enter into required field and exit from that.
- Up and down button to be used for changing the values.



- Up and down button to be  used for scrolling through fields of 24 hour format/hour/minute/AM/PM.
- Selected field will be highlighted as shown in above image.

DASHBOARD AND FEATURES

Display Messages on Instrument Cluster

Below messages may be displayed in the screen for three seconds based on the priority and some of the warnings shall be minimized in the screen.

Interrupts Messages



NOTE: All messages may not be applicable to your vehicle.

Sr No	Alert	Interrupts Messages On Instrument Cluster
1	Rotate steering wheel (In ESCL jam condition)	Press Start Button While Turning Wheel
2	Key Fob battery Low	Smart Key Battery Low Replace Battery
3	Smart key out of range	Smart Key Out of Range
4	Drive Alert - Tea Break	Take a Break
5	Steering Failure, Please Stop Driving	Steering Failure Stop the Vehicle Safely
6	Steering Failure, Please Visit Garage	Steering Failure Contact Service Center
7	Pedal Press Alert Clutch	Press Clutch Pedal to Start Engine
8	Door Open alert	Door Open alert

DASHBOARD AND FEATURES

Sr No	Alert	Interrupts Messages On Instrument Cluster
9	Press brake alert	Press brake alert
10	Cruise set speed alert	Cruise set speed alert

DASHBOARD AND FEATURES

Warning Messages



Sr No	Alert	Warning Messages On Instrument Cluster
1	Fuel Level Low State	Fuel Level Low
2	Fasten seat belt co-driver	Fasten Co-Driver Seat Belt
3	Fasten Seat Belt - Driver	Fasten Driver Seat Belt
4	Speed Limit Warning	Over Speeding Detected Slow Down
5	Transmission service indication	Drive Cautiously Contact Service Center
6	Shift to P	Shift to Park (P) to Exit
7	Stay in Drive mode	Stay in Drive mode for 20 Sec
8	Ensure hand brake applied	Ensure Hand brake is Applied
9	Drive control shift denied	Drive control shift denied

DASHBOARD AND FEATURES

Sr No	Alert	Warning Messages On Instrument Cluster
10	Shift to P/N	Shift to Park or Neutral to Start Engine
11	Transmission overheat alert	Transmission Oil Temperature High
12	Transmission Failure, Limp home activated	Malfunction Detected Contact Service Center

DASHBOARD AND FEATURES

Information Messages




Sr No	Alert	Information Messages On Instrument Cluster
1	Park Brake Engaged	Park Brake Engaged
2	Auto Headlamp	Auto Headlamp Activated
3	Resume to Target Speed Not Possible in Current Gear	Change Gear to Resume Cruise Speed
4	Cruise Override	Cruise Override
5	ISS-Start the Engine	Auto Stop Start the Engine
6	Autonomous Start Enabled - Battery SOC Low	Auto Start Enabled Low Battery Charge.
7	Autonomous Start Enabled - Brake Vacuum Low	Auto Start Enabled Low Brake Assist Vacuum

DASHBOARD AND FEATURES

Sr No	Alert	Information Messages On Instrument Cluster
8	Autonomous Start Enabled – Coolant Temp Low	Auto Start Enabled Low Coolant Temperature
9	Auto Start Enabled High Steering Angle	Auto Start Enabled High Steering Angle
10	Auto Start Enabled Start Vehicle Rolling	Auto Start Enabled Vehicle Rolling
11	Auto Start-Stop Enabled Text Alert	Auto Start- Stop Enabled
12	Auto Start-Stop Disabled Text Alert	Auto Start- Stop Disabled

DASHBOARD AND FEATURES

INSTRUMENT CLUSTER (LCDScreen) (If equipped)

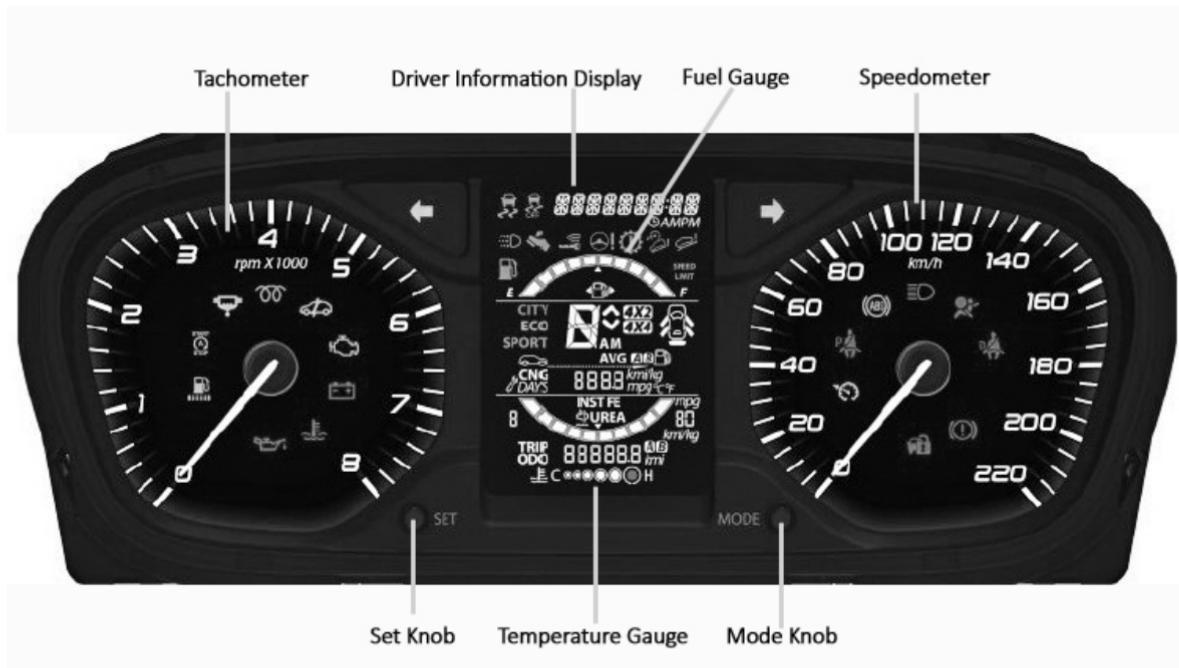

NOTE: All indicators shown may not be applicable to your vehicle.

Speedometer



Speedometer indicates the vehicle speed in kmph.

i NOTE

Whenever you turn the ignition on, after inserting key in ignition switch the Instrument Cluster needles and gauges move to maximum value and return to '0' position. This is a welcome strategy and a self-check feature.

Tachometer



Tachometer indicates engine speed in revolutions per min (rpm).

WARNING

Do not drive the vehicle with high engine rpm. This may cause damage to the engine and reduce its life.

Fuel Gauge

When the ignition switch is in "ON" position, fuel gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.



i NOTE

- Do a check of the fuel level when the vehicle is stationary on a plain surface.
- The fuel level displayed can vary when you drive on inclines, curves, brake and accelerate suddenly. This is due to the movement of fuel in the tank. The low fuel warning lamp may turn to ON or OFF earlier or later than usual.

DASHBOARD AND FEATURES

WARNING

If there is any fault in the system, Low fuel warning symbol will start blinking. Take your vehicle to the nearest TATA MOTORS Authorized Dealer/Service Center.

Temperature Gauge

When the ignition switch is in the "ON" position, this gauge indicates the engine coolant temperature.



The indicator should stay within the normal, acceptable temperature range between "H" and "C". If the indicator approaches "H", overheating is indicated by a red bar.

If the coolant temperature reading is very high, the engine coolant temperature tell-tale light flashes with an audible buzzer. In this case, stop the vehicle, switch 'OFF' the engine and cool it down for some time. Contact the nearest TATA MOTORS Authorized Dealer/Service Center immediately for rectification.

WARNING

The red progress bar indicates overheating, due to high coolant temperature which may damage the engine.

Continuing to drive the vehicle in this case can result in severe engine damage or even fire.

Driver Information System (DIS)

Driver Information	System Image	Description
Odometer		Indicates distance travelled by a vehicle. The Odometer reading does not return to "0" when maximum value is reached, the display will freeze to maximum value.
Trip meter A & B	 	The trip meter can be used to measure the distance travelled on short trips or between fuel stops. It can be reset to "0". The Trip meter reading becomes "0.0" after it crosses 9999.9 km.
Clock		Indicates current time in AM/PM mode. Clock time can be changed using 'SET' & 'MODE' knob. Whenever the battery terminals or related fuses are connected, you must reset the clock time. This feature is available when ignition switch is in ON position. NOTE: Clock settings can also be changed through infotainment system. For more information, refer infotainment manual.
Door Ajar		This warning will be indicated when the driver's door or front passenger door is open.
Service reminder		This indicates how many days/kilometres are left till service is due. If service is overdue, it will display "0" km or "0" days and a spanner symbol will blink every time ignition is ON for a few seconds. Never reset the display between service intervals as it may give incorrect readings. The informa

DASHBOARD AND FEATURES

Driver Information	System Image	Description
		<p>tion is retained in the service interval display even after the vehicle battery is disconnected.</p> <p>NOTE: <i>This option is for indicative purpose only. Keep track of your odometer reading and follow the maintenance schedule.</i></p>
Current gear position indicator		<p>Current gear engaged by the transmission shall be displayed on Driver Information System.</p> <p>NOTE: <i>If "F" is displayed it means a 'Fault' condition. Contact the nearest TATA MOTORS authorized service centre immediately</i> <i>In case of manual transmission, the gear number shall be displayed even when the clutch is fully released.</i></p>
Gear Recommendation		<p>Up or down arrow will be displayed indicating for a gear change.</p> <p>No arrow shall be displayed when the selected gear is as per the vehicle dynamics.</p>

Instantaneous Fuel Economy (IFE)



Monitor the IFE bar graph to achieve better fuel economy.

IFE display does not show Fuel Economy of last drive.

The above image indicates real time fuel economy when the ignition is turned 'ON'.

The display does not show actual value unless vehicle is moving.

The indication on the display may be delayed if fuel consumption is affected by driving pattern.

(i) NOTE

- IFE will vary frequently as per driving pattern.*
- IFE display does not show Fuel Economy of last drive.*

Average Fuel Economy (AFE)



Trip time, average speed and trip distance will reset to '0' when respective trip meter is reset.

Average Fuel Economy will be displayed as '—.—' for initial 0.5 km of respective trip. Once 0.5 km distance is covered, Average Fuel Economy will be displayed.

Even after 0.5 km distance covered for particular trip, if Average fuel economy is displayed as '—.—', then take your vehicle to the nearest TATA MOTORS authorized service centre.

(i) NOTE

- AFE value is an estimate of fuel economy. It may vary significantly based upon driving conditions, driving habits and condition of vehicle.*
- Average Fuel Consumption will get reset to '0' when Battery is removed and refitted.*

DASHBOARD AND FEATURES

Distance to Empty (DTE)



The above image indicates an approximate distance in 'km' that your vehicle can travel with available fuel in tank.

DTE values may vary significantly based on driving conditions, driving habits, and condition of the vehicle. It is an estimate value of the available driving distance.

The DTE figure will update with a new value when fuel is added for more than seven litres at a time.

If low fuel warning light glows, fill fuel immediately regardless of the DTE figure displayed.

Outside Ambient Temperature




This displays outside ambient temperature reading with an accuracy of ± 1 °C. Since the temperature sensor is located at the front bumper of the vehicle, the temperature reading can be affected by heat reflection from the road surface, engine heat and the exhaust from surrounding traffic.

NOTE

If DTE is displayed as '—', then take your vehicle to the TATA MOTORS Authorized Dealer/Service Center.

Driver Information System (DIS) Setting

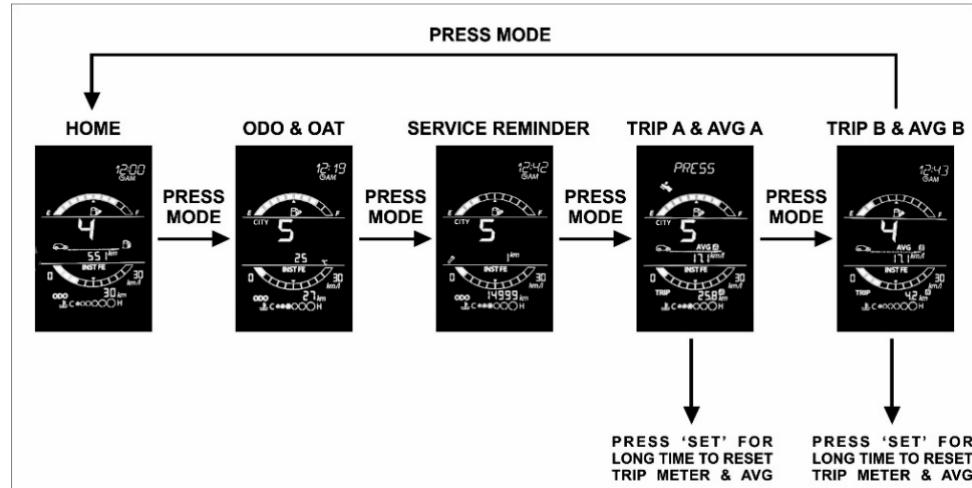

DASHBOARD AND FEATURES

Instrument Cluster Illumination Setting


Instrument cluster's brightness intensity and backlight intensity will turn on after the Parking lamp is ON.

WARNING

The clock and illumination settings should be changed only when the vehicle is in stationary condition for safety purposes.

Illumination setting procedure


- For illumination setting short Press SET button with position lamp ON.
- Change illumination levels by short pressing SET button.

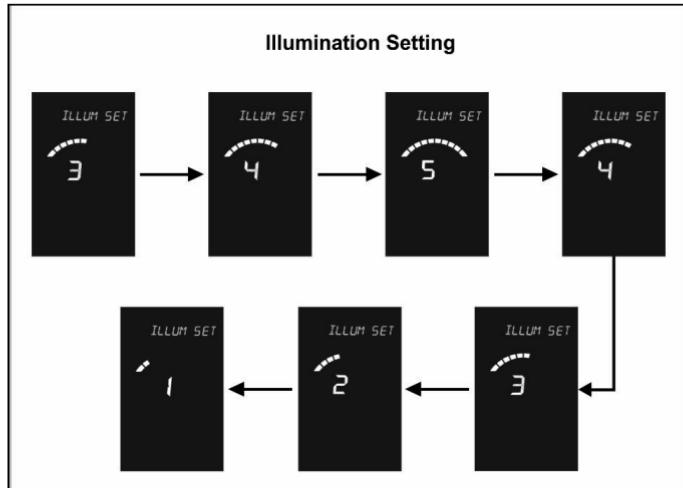

Clock Setting

(i) NOTE


- If parking lamp is ON and by short pressing SET button you can enter into illumination setting.
- If user want to go to clock screen Short press MODE button.
- If user want clock in 24/12 hour format, in any screen on Long press MODE button, clock changes to 12/24 hour format respectively.

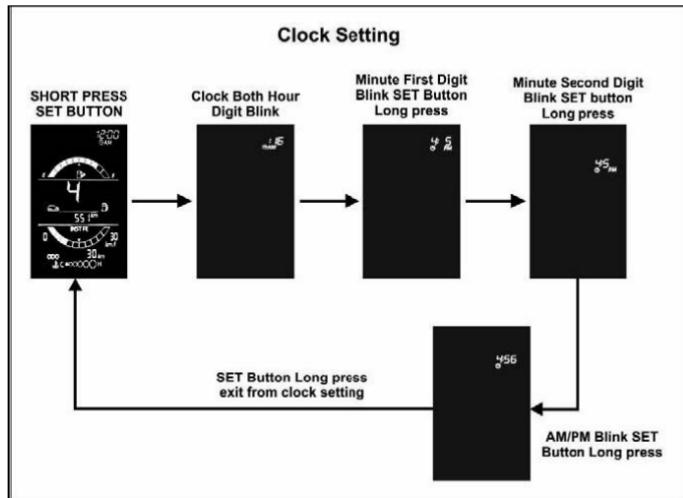

DASHBOARD AND FEATURES

Display Messages on Instrument Cluster

Below messages can be displayed on the screen for four seconds based on the priority.

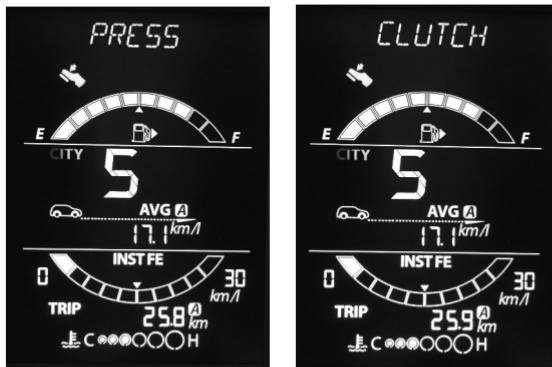

NOTE: All messages may not be applicable to your vehicle

Sr No	Information	String On Lcd Screen
1	Speed Limit Warning	OVERSPEED
2	Engine Is Locked	ENGINE LOCKED
3	Low Brake Fluid	LOW BRAKE FLUID
4	Brake Lamp Failed	BRAKELAMP FAILED
5	Reverse Lamp Failed	REVERSE LAMP FAIL
6	Service Reminder Days	SERVICE DUE
7	Service Reminder Kms	SERVICE DUE


DASHBOARD AND FEATURES

Sr No	Information	String On Lcd Screen
8	Fuel Level Low State	LOW FUEL
9	Key Fob battery Low	KEY BATT LOW
10	Smart key out of range	KEY OUT OF RANGE
11	Rotate steering wheel (In ESCL jam condition)	ROTATE STEERING
12	Resume to Target Speed Not Possible in Current Gear	UNABLE TO RESUME
13	Cruise is Resuming to set speed	CRUISE RESUMED
14	Press CLUTCH for MT	PRESS CLUTCH
15	ISS OFF	ISS OFF
16	Please Crank	PLZ CRANK
17	Autonomous Start Enabled - Battery SOC Low	AUTOSTART
18	Autonomous Start Enabled - Brake Vacuum Low	AUTOSTART
19	Autonomous Start Enabled – Cabin Temp high	AUTOSTART
20	Autonomous Start Enabled – Coolant Temp Low	AUTOSTART
21	Drive alert - Tea break	Take a break
22	Electronic stability OFF	ESF OFF
23	HDC deactivation due to speed above set value	HDC deactivate
24	Hill decent control active	HDC active
25	Press brake for DCT	Press Brake
26	Cruise OFF	Cruise OFF
27	Cruise override	Cruise override
28	Transmission service indication	DCT fault

DASHBOARD AND FEATURES

Sr No	Information	String On Lcd Screen
29	Transmission overheated	DCT temp high
30	Shift to P/N	Shift P/N
31	Owner's Birthday	Happy Birthday
32	Shift to P	Shift > P
33	Transmission failure ,Limp home activated	DCT fault
34	Drive control shift denied	Shift denied
35	Ensure hand brake applied	Ensure hand brake
36	Stay in D mode	Stay in D for 20 S

INSTRUMENT CLUSTER 7" (If equipped)

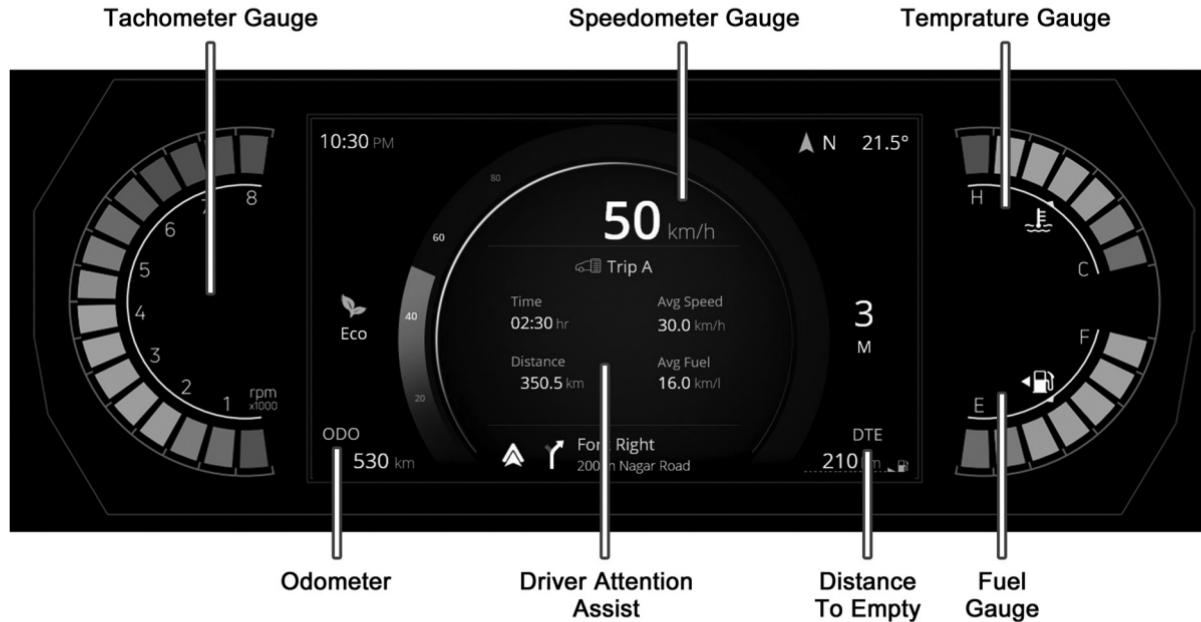

NOTE: All indicators shown may not be applicable to your vehicle.

DASHBOARD AND FEATURES

Speedometer Gauge




The Speedometer Indicates the actual vehicle speed in km/h.

(i) NOTE

- At every key IN and Ignition ON, the speedometer Bar moves to MAX and return to '0' position.
- This is welcome strategy and self-check feature.

Tachometer Gauge

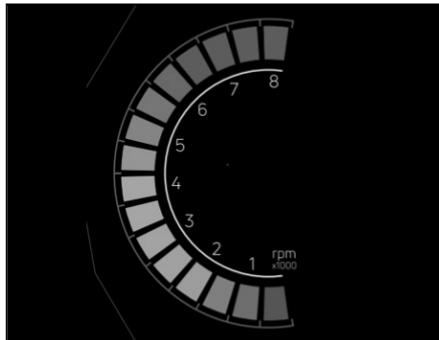

Tachometer indicates the engine speed in revolutions per minute.


⚠ WARNING

- Whenever engine is accelerated beyond safe rpm, tachometer Bar Indication gets display RED. In such case, reduce the engine RPM immediately.
- Never drive the vehicle with engine in high RPM. This may cause severe engine damage.

(i) NOTE

- At every key in and Ignition ON, tachometer Bars increases to MAX and returns to '0' position.
- This is a welcome strategy and a self-check feature.
- In Engine running condition if the Tachometer is not showing the RPM, take your vehicle to TATA authorized service center.

Fuel Gauge

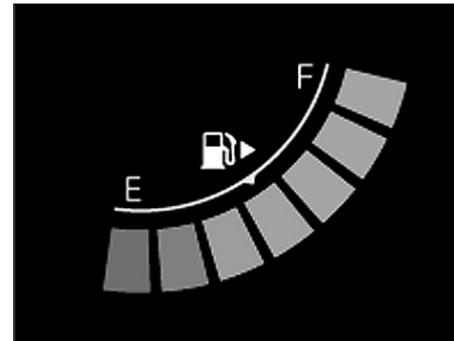


When the ignition switch is in "ON" posi-

tion, fuel gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for Empty.

When fuel in the tank is near to empty position, low fuel warning telltale turns Amber. Refill the tank as soon as possible.

Fuel gauge graphics color changes depends on the fuel availability on fuel tank as per below in the draining direction.

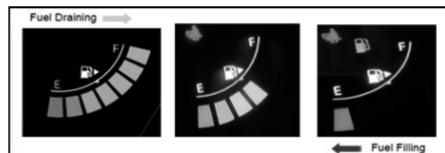

(i) NOTE


- On inclines, curves, during braking and sudden acceleration due to the movement of fuel in the tank, the fuel level display may fluctuate or the low fuel level warning lamp may turn ON/OFF earlier or delayed than usual.*

- When the ignition switch is in the "ON" position, this gauge gives an approximate indication of the amount of fuel in the fuel tank and it takes few seconds to stabilize after the ignition is turned ON.*

WARNING

1. When Cluster detect Low Fuel level, It blinks last fuel bar with 1Hz frequency and Fuel tank symbol is continue ON state
2. If there is any fault in the system, Low fuel warning symbol shall blink. Take your vehicle to the nearest TATA MOTORS authorized service station.

Temperature Gauge

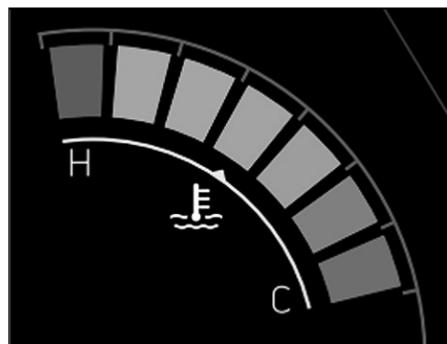

When the ignition switch is in the "ON" position, this gauge indicates the engine coolant temperature.


The indicator should be within normal, acceptable temperature range i.e., between "H" and "C". If the indicator approaches "H", overheating is indicated by red LED bar in case of 4" and red bar LED Indication in case of 7".

If the coolant temperature reading is very high, The Engine coolant temperature telltale flashes with an audible buzzer.

DASHBOARD AND FEATURES

In this case, stop the vehicle, switch 'OFF' the engine and cool it down for some time. Contact a nearest TATA MOTORS Authorized Service Centre immediately for rectification.

Temperature gauge graphics color changes depends on the engine coolant temperature as per below in the direction high temperature zone.

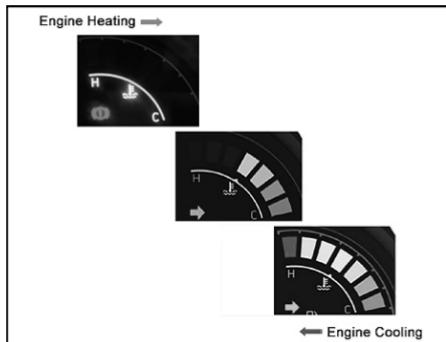

⚠ CAUTION

The RED bar and High Coolant temp warning Telltale indicates overheating

that may damage the engine. Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage or fire.

ⓘ NOTE

At every key in and Ignition ON, Temperature Gauge Bars move to H and returns to C position for instrument cluster. This is welcome strategy and self-check feature.

⚠ WARNING

Never remove the radiator pressure cap from the radiator when the engine is hot. Do not restart the engine until the problem has been duly attended.

Driver Information System

Driver Information	System Image	Description
Odometer		<ul style="list-style-type: none"> Odometer Indicates distance traveled by vehicle. The odometer reading does not return to 0 when maximum value is reached, the display will freeze to maximum value.
Trip meter A		<ul style="list-style-type: none"> Trip A Indicates distance traveled by vehicle since last reset within the range of 0 km to 9999.9 km with the resolution of 0.1 km. Trip A can be RESET to 0 by pressing Set switch when display is in a TRIP A mode.
Trip meter B		<ul style="list-style-type: none"> Trip B Indicates distance traveled by vehicle since last reset within the range of 0 km to 9999.9 km with the resolution of 0.1 km. Trip B can be RESET to 0 by pressing Set switch when display is in a TRIP A mode. <p>Note:</p> <ul style="list-style-type: none"> Take your vehicle to authorized TATA MOTORS service station if DTE display's '—' The DTE shall update with new value when fuel is added more than approx. 7 Liters

DASHBOARD AND FEATURES

Driver Information	System Image	Description
		<ul style="list-style-type: none"> The Average fuel consumption and Distance to empty values may vary significantly based on driving conditions, driving habits, and condition of the vehicle and there is no relation with the Odometer update. The distance to empty value is an estimate of the available driving distance. If low fuel warning comes, fill the fuel immediately regardless the value of displayed DTE. If vehicle is not on level ground or negative of battery has been disturbed, the DTE function may not operate correctly.
Distance to Empty (DTE)		<ul style="list-style-type: none"> DTE indicates approximate distance (km) that the vehicle can travel with available & usable fuel in tank and the driving pattern. This value may differ from the actual driving distance. 'Refuel' shall be displayed which indicates that it's the time to take your vehicle to the nearest petrol pump to fill the fuel.
Average Fuel Economy 'A'		<ul style="list-style-type: none"> IPC shall display the "Average Fuel Economy A" corresponding to 'TRIP A' with the resolution of 0.1km/l. Average Fuel Economy A shall reset to 0 when Trip A is reset. Average Fuel Economy A shall be displayed as '—.-' for initial 0.5 km of respective trip. Once 0.5 km distance is covered, Average Fuel Economy A shall be displayed.

DASHBOARD AND FEATURES

Driver Information	System Image	Description
Average Fuel Economy 'B'	Avg Fuel 30.0 km/l	<ul style="list-style-type: none"> IPC shall display the "Average Fuel Economy B" corresponding to 'TRIP B' with the resolution of 0.1km/l. Average Fuel Economy B shall reset to 0 when Trip B is reset. Average Fuel Economy B shall be displayed as '—.-' for initial 0.5 km of respective trip. Once 0.5 km distance is covered, Average Fuel Economy B shall be displayed. AFE shall vary frequently as per driving pattern.
Average Trip Speed 'A'	Avg Speed 30.0 km/l	<ul style="list-style-type: none"> IPC shall display the "Average Trip Speed A" corresponding to 'TRIP A' with the resolution of 1 Km/Hr. Average Trip Speed A shall reset to 0 when Trip A is reset. Average Trip Speed A shall be displayed as '—-' for initial 0.5 km of respective trip. Once 0.5 km distance is covered, Average Trip Speed A shall be displayed.
Average Trip Speed 'B'	Avg Fuel 30.0 km/l	<ul style="list-style-type: none"> IPC shall display the "Average Trip Speed B" corresponding to 'TRIP B' with the resolution of 1 Km/Hr. Average Trip Speed B shall reset to 0 when Trip B is reset. Average Trip Speed B shall be displayed as '—-' for initial 0.5 km of respective trip. Once 0.5 km distance is covered, Average Trip Speed B shall be displayed. Average Trip Speed shall vary frequently as per driving pattern.
Trip Time A		<ul style="list-style-type: none"> IPC shall display the "Trip Time A" corresponding to 'TRIP A' with the resolution of 1 minute

DASHBOARD AND FEATURES

Driver Information	System Image	Description
		<ul style="list-style-type: none"> • Trip Time A shall reset to 00:00 when Trip A is reset.
Trip Time B		<ul style="list-style-type: none"> • IPC shall display the “Trip Time A” corresponding to ‘TRIP A’ with the resolution of 1 minute • Trip Time A shall reset to 00:00 when Trip A is reset.
Instantaneous Fuel Economy (IFE)		<p>Instantaneous Fuel Economy shows current or instant fuel mileage of the vehicle when ignition is turned ON and vehicle is on running condition.</p> <p>Note: IFE shall vary frequently as per driving pattern.</p> <ul style="list-style-type: none"> • User can change IFE units by using unit settings only in export market.
Settings Screen		<p>User can enter into setting screen by pressing select button while being in setting screen.</p> <p>Following screen gets displayed into setting screen:</p>
Illumination Setting		<ul style="list-style-type: none"> • User can select Illumination Setting by Scroll down & pressing Set Button in Setting Screen provided park lamp ON. • User can increase the illumination from (20% to 100%) in 5 steps by using UP & SET Button. •


DASHBOARD AND FEATURES

Driver Information	System Image	Description
		<ul style="list-style-type: none"> User can decrease the illumination from (100% to 20%) in 5 steps by using DOWN & SET Button.
Service Reminder Reset		<ul style="list-style-type: none"> User can select Service Reminder Screen by Scroll down & pressing Set Button in Setting Screen. User can reset (Yes / Cancel) the Service Reminder by UP / DOWN & SET Buttons. <p>Note: In the Setting menu if there is no user input for 10 secs the previous screen shall be displayed.</p>
About Screen		On pressing set button, it displays open source license disclosure.
Clock		Instrument Cluster equipped with digital clock which indicates current time in 12 / 24 hours mode.

DASHBOARD AND FEATURES

Driver Information	System Image	Description
Outside Ambient Temperature		<ul style="list-style-type: none"> This displays outside ambient temperature in units of °C with the resolution of 1 °C. The temperature sensor is in the front bumper of the vehicle; therefore, the temperature reading can be affected by heat reflection from the road surface, engine heat and the exhaust from surrounding traffic. This can cause an incorrect temperature reading when your speed is under low speeds (30 km/h) or when stopped. <p>Note: If display shows OAT temp as “- -”, take your car to a TATA MOTORS authorized service Centre.</p>
Power and Torque		<p>This feature indicates the value of Power and Torque delivered by engine in the particular driving condition.</p>
Service Reminder		<p>Service reminder is the feature to give the prior and overdue information about service of the vehicle to the user for proper vehicle maintenance. There are two types of service reminder i) By days ii) By Kms</p> <p>I. By Kms The service reminder shall come at every 15000 kms and it shall be pop up before 500kms of due (i.e. 15000-500=14500km) and it shall be sub</p>

DASHBOARD AND FEATURES

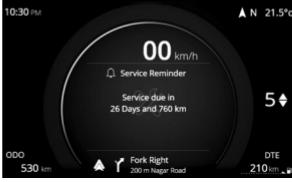Driver Information	System Image	Description
		<p>tracted from the distance travelled.</p> <p>II. By Days The service reminder shall come at every 180days and it shall be pop up before 30 days of due time (i.e. 180-30=150 days) and it shall be subtracted from the days crossed.</p> <p>III. By Kms overdue The service reminder overdue shall come if the due km is crossed and it shall be displayed in every IGN ON and it shall be minimized in the TFT (i.e. 15000-15050=50km)</p> <p>IV. By days overdue The service reminder overdue shall come if the due days is crossed and it shall be displayed in every IGN ON and it shall be minimized in the TFT (i.e. 180-260=80 days).</p> <p>Note: Take it to the authorized TATA MOTORS service station between the regular intervals of service reminder notification Days/Km in the screen and do not reset the service reminder before the service, and it shall be reset by the Authorized person during the service.</p>
Gear indication		<p>The Current Gear number displayed on the DIS screen based on gear shift lever position when clutch pedal is fully released.</p> <p>Note:</p>

DASHBOARD AND FEATURES

Driver Information	System Image	Description
		When there is a failure in the system, instead of gear no 'Fault' shall be displayed. If 'Fault' is displayed in the Gear number position, take your vehicle to authorized TATA MOTORS service centre to get it repaired.
Gear up/down recommendation		<p>The Gear Up / Down recommender recommends the user to change the gears for better performance.</p> <p>Note: If the vehicle is in correct gear position, the gear recommender shall not be shown.</p>
Screen Layout view		<p>When layout menu selected from Main menu Cluster display three different view as displayed below.</p> <p>1. Maximal View</p>
Screen Layout view		<p>2. Digital View</p>

DASHBOARD AND FEATURES

Driver Information	System Image	Description
Screen Layout view	 A minimalist digital display showing a large speedometer reading 220 km/h. Below it is a digital odometer reading 103098. At the bottom, a warning message 'Fork Right' is displayed above a small gear icon.	3. Minimal View

DASHBOARD AND FEATURES

Driver Information System (DIS) Setting

- Operate the Up & down and Set Switch on Steering Wheel to see the Trip Info, Drive Assist, Vehicle Info, Notification, Navigation, Layout and Settings Window.
- Operate the Set Switch on Steering Wheel to Reset TRIP A, AFE A, Avg Speed A, Trip Time A (When TRIP A is displayed) and Reset TRIP B, AFE B, Avg Speed B and Trip Time B (When TRIP B is displayed).




DIS Screen Flow (TFT Screen)

1. TRIP INFO:




DASHBOARD AND FEATURES


2. VEHICLE INFO:

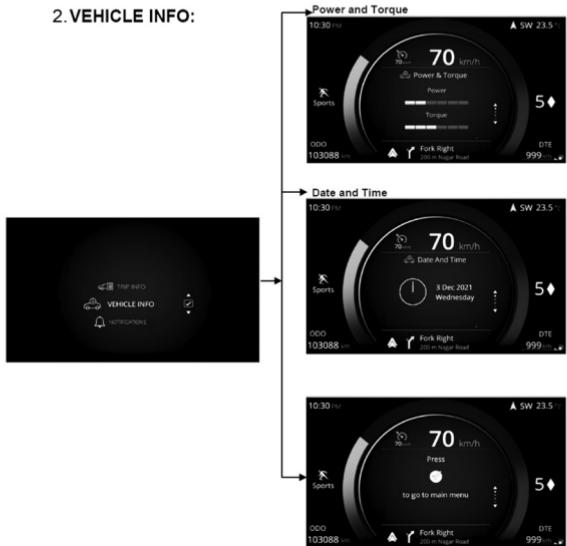

3. NOTIFICATION:

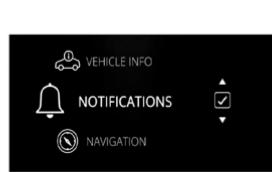


4.1 Notifications

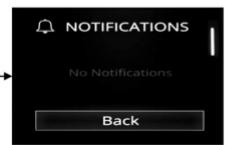

DASHBOARD AND FEATURES


5. NAVIGATION:

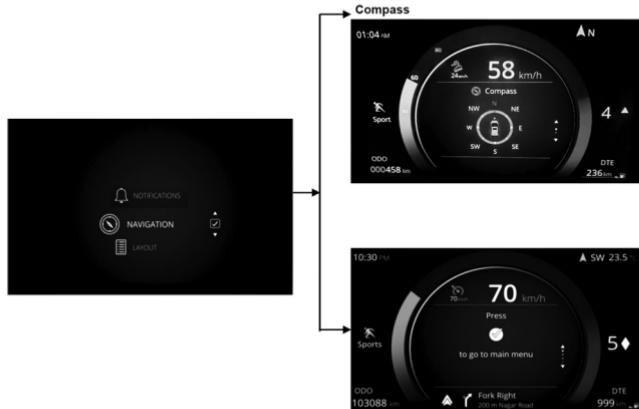

6. Layout:



7.SETTINGS:

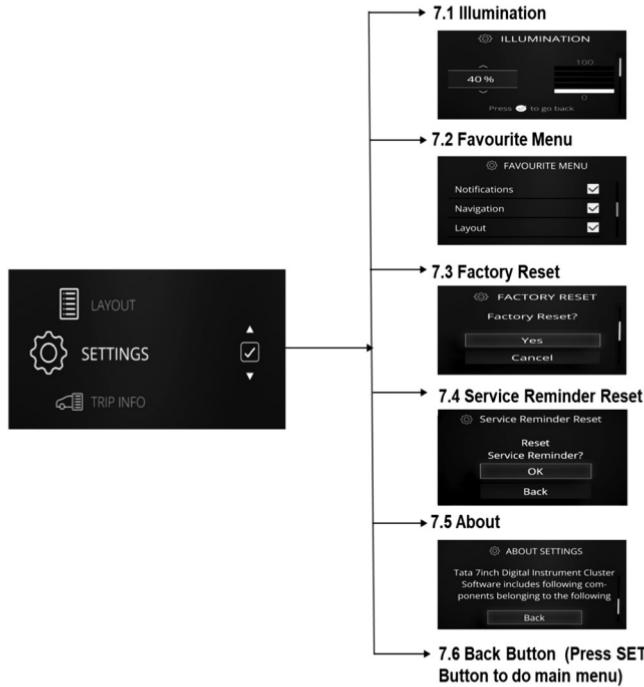

DASHBOARD AND FEATURES

TELL TALES

Warning Lamps	Color	Indicator	Remarks
Malfunction Indication Lamp (MIL)	Amber		<ol style="list-style-type: none"> 1. The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'. 2. It remains 'ON' for any engine related fault that may increase emission levels of the vehicle beyond the regulatory norms. Contact the TATA MOTORS Authorized Dealer/Service Center for rectification
Check Engine Lamp	Amber		<ol style="list-style-type: none"> 1. The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'. 2. Illuminates continuously if a fault arises in Engine Management System. Contact the TATA MOTORS Authorized Dealer/Service Center.
Immobilizer (if equipped)	Red		<ol style="list-style-type: none"> 1. The lamp comes on when the system disables the engine start if the original key is not used. 2. Lamp blinks: Vehicle is in immobilized condition when key is not inserted. 3. Lamp ON: Problem with key/system. Contact TATA MOTORS Authorized Dealer/Service Center. 4. Lamp OFF: Normal condition (Authenticated user) and engine will start.
Pre-Heat indicator / Glow Plug indicator (Diesel)	Amber		<ol style="list-style-type: none"> 1. The lamp comes on when ignition key is in 'ON' position. 2. Start the engine only after this indicator goes 'OFF'.

DASHBOARD AND FEATURES

Warning Lamps	Color	Indicator	Remarks
Turn Signal	Green		<p>Indicates direction indicated by the turn signal. While you operate the left/right turn indicator, the turn signal blinks along with the buzzer (when ignition is 'ON'). The direction indicator arrow on the instrument cluster flashes along with the selected external indicator lights. Both tell-tale lights will blink simultaneously when the hazard switch is pressed irrespective of whether the ignition ON or OFF. A tick-tock sound will be heard in both cases.</p>
High Beam	Blue		<p>The lamp comes on when the high beam headlamps are switched 'ON' or flashed.</p>
Low Oil Pressure indicator	Red		<p>The lamp comes on when ignition is switched 'ON' and goes 'OFF' once required engine oil pressure is developed after starting the engine. If the low oil pressure indicator does not glow or remains 'ON' when the engine is running, it indicates a fault in the electrical circuit/lubrication system. Contact the nearest TATA MOTORS Authorized service centre to rectify the issue.</p>
Battery charging	Red		<p>The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'. If it remains 'ON' while the engine is running, it indicates that the battery is not getting charged. Switch off all unnecessary electrical equipment and contact the nearest TATA MOTORS Authorized service centre.</p>

DASHBOARD AND FEATURES

Warning Lamps	Color	Indicator	Remarks
Airbag status	Red		The lamp comes on when ignition is switched 'ON' and goes 'OFF'. If it continuously blinks then contact the TATA MOTORS Authorized Dealer/Service Center immediately.
Park Brake / Brake Fluid Low / EBD malfunction	Red		The lamp comes on momentarily when ignition is switched 'ON'. Once parking brake is released, it turns 'OFF'. If it remains 'ON', then it indicates: 1. Brake fluid level is low. 2. Park brake is applied. 3. EBD malfunctioning.
Cruise Control lamp (if equipped)	Green		The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'. The Cruise Control is used to indicate the status of cruise control system to the driver. If the lamp is on, it indicates that the cruise control feature is activated.
High Coolant Temperature	Red		The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'. If the engine overheats due to higher coolant temperatures, this indicator blinks along with an audible buzzer. Contact your nearest TATA MOTORS authorized service Centre immediately. When the engine coolant temperature reaches the maximum limit, the tell-tale lights blink with a RED colour and you will hear an audio warning. Note: Do not remove the radiator pressure cap from the radiator when the engine is hot. Do not restart the engine until the problem has been duly attended.

DASHBOARD AND FEATURES

Warning Lamps	Color	Indicator	Remarks
ABS	Amber		<p>The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'.</p> <p>The lamp remains on if there is any malfunction in ABS. Normal braking system will be operational without assistance of ABS. Contact the TATA MOTORS Authorized Dealer/Service Center immediately.</p>
SPORT (if equipped)	Amber		<p>This symbol comes ON when SPORT driving mode is activated when more torque is required.</p>
Low Fuel indicator	Amber		<p>The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'.</p> <p>The symbol lights up continuously if fuel level in the tank is low. Fuel needs to be filled immediately.</p> <p>Note: The tell-tale warning light will start flashing if there is any fault in the fuel system. Contact the nearest TATA MOTORS Authorized Dealer/Service Center immediately.</p>
Driver Seat belt indicator	Red		<p>The driver seatbelt warning indicator remains ON, when ignition is turned ON.</p> <p>The warning lamp remains ON as long as the driver seatbelt is not fastened.</p> <p>If seatbelt remains unbuckled and vehicle goes above 15 kmph, then final audio warning will go on for 90 seconds.</p> <p>Note:</p>

DASHBOARD AND FEATURES

Warning Lamps	Color	Indicator	Remarks
			Once the seatbelt is fastened the buzzer and warning lamp turns OFF. Seatbelt reminder remains OFF when reverse gear is engaged.
Key Not Detected (if equipped)	Amber		This lamp comes on when the Valid Smart key is not detected inside the vehicle.
Press Clutch Pedal to Start Engine (if equipped)	Amber		This lamp comes on with IGN ON till user presses the clutch pedal to start the engine.
Water in fuel indicator (Diesel)	Amber		The lamp remains on if excess water is accumulated in the fuel filter. When this lamp blinks along with chime contact the nearest TATA MOTORS Authorized Dealer/Service Center to drain the water immediately to avoid serious damage to the fuel injection system.
Daytime running lamps DRL (if equipped)	Amber / Green		The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'. This lamp comes on when the Daytime Running lamp is 'ON'. Note: Parking lamp should be on to start the DRL lamp.
Door Ajar lamp (if equipped)	White / Red		All four door and Tail gate are indicated independently when the respective door or tail gate is open.
Front Passenger Seat belt indicator	Red		The co-driver seatbelt warning indicator turns ON when ignition is turned ON.

DASHBOARD AND FEATURES

Warning Lamps	Color	Indicator	Remarks
			<p>If front passenger seat is occupied by adult, the warning lamp remains ON as long as the co-driver seatbelt is not fastened.</p> <p>If seatbelt remains unbuckled and vehicle goes above 15 kmph, then final audio warning will go on for 90 seconds.</p> <p>Note: Once the seatbelt is fastened the buzzer and warning lamp turns OFF. Seatbelt reminder remains OFF when reverse gear is engaged.</p>
Rear Passenger Seat belt indicator	Red		<ol style="list-style-type: none"> 1. The seat belt warning lamp turns on for 60 sec in case seatbelt is not buckled. If speed exceeds 15kmph, audio warning start alarming for 35 sec. 2. When reverse gear is engaged/disengaged, thereafter forward gear selected and speed is below 10 kmph then visual warning turns on and above 10 kmph audio warning start alarming for 35 sec. 3. If rear door accidentally remains unlatched and vehicle speed is below 10 kmph then visual warning turn on, if speed is above 10 kmph then audio warning start alarming.
Speed limit warning indicator	Amber		<p>When the vehicle speed crosses 80 kmph, then speed limit warning indicator turns 'ON' along with an audio chime for every two minutes (audible warning).</p> <p>If vehicle speed crosses 120 kmph, the speed limit warning indicator flashes along with an audio warning continuously, until the vehicle speed is above 120 kmph.</p> <p>If vehicle speed is between 80 kmph and 120 kmph, then the audio warning will become less frequent but the speed limit warning Indicator will remain 'ON' continuously. When the vehicle speed is reduced</p>

DASHBOARD AND FEATURES

Warning Lamps	Color	Indicator	Remarks
			below 80 kmph, then the speed limit warning indicator and the audio warning will turn off.
ECO (if equipped)	Green		The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'. When ECO lamp is ON, it indicates the car is in 'Economy' drive mode, which helps to achieve a better fuel economy.
CITY	White / Blue		The lamp comes on when ignition is switched 'ON'. Once engine is started, it turns 'OFF'. If CITY lamp is ON, it indicates 'City' drive mode, which helps to achieve optimum torque and fuel economy.
DPF (if equipped)	Amber		The DPF warning light or symbol switches 'ON' continuously to indicate that the DPF needs to eliminate the trapped pollutants (particulate matter) through the re-generation procedure. The warning light or symbol switch 'ON' only when driving conditions require the driver to be notified. DPF 'ON' does not indicate a malfunction. To switch off the warning light or symbol, keep the car running on road until regeneration is complete (ideally at 3 rd gear, 50-80 kmph, with engine speed over 2000 rpm). The process normally takes about 20 minutes. The warning light or symbol remains off during the entire DPF regeneration procedure If the procedure is not followed, MIL lamp will switch ON, along with DPF lamp on Instrument cluster.

DASHBOARD AND FEATURES

Warning Lamps	Color	Indicator	Remarks
			<p>Note:</p> <p>Please follow the above-recommended DPF regeneration procedure to avoid MIL lamp switch 'ON'.</p> <p>In case, MIL lamp switch ON, please contact nearest TATA authorized service centre to restore DPF operation.</p> <p>For park regeneration process in details refer maintenance section.</p>
Transmission Service indicator	Amber		<p>The lamp comes on when ignition is switched 'ON' and detects a fault in the transmission system, which needs driver attention for early Service and caution.</p> <p>In case, Transmission service indicator lamp switch ON, please contact nearest TATA authorized service centre.</p>
Transmission Overheat indicator	Amber		<p>This warning lamp turns ON in Ignition ON condition and when DCT transmission system oil temperature is overheated.</p> <p>In case, Transmission overheated lamp switch ON, please contact nearest TATA authorized service centre.</p>

DASHBOARD AND FEATURES

AUDIO REMINDER (If equipped)

Key-in Reminder/audio Warning

If you forget the key inside the vehicle when you leave the ignition in 'OFF' position, an audio warning will sound. Remove key to stop the warning.

If No Key is Detected in the Vehicle

If the vehicle is in ACC ON/IGN ON and the customer takes the smart key out of the vehicle and closes the last door, an audio warning will be sounded for nine times to alert that the key is not in the vehicle.

NOTE

In this condition customer needs to bring the smart key inside the vehicle.

Parking Lamp 'ON' Reminder

If you forget to turn OFF the park lamp, an audio warning will be started. Switched OFF the park lamps to stop the warning.

NOTE

Do not forget to turn OFF your park lamp as it may drain the vehicle's battery.

Parking Brake 'ON' Reminder

If Park Brake is applied and vehicle is driven, Telltale will turn 'ON' and buzzer will provide audio warning continuously. Disengage the park brake to stop audio warning.

Reverse Gear Reminder

If reverse gear is engaged, the buzzer sound will alert you.

Driver Seat Belt Reminder

If seatbelt is not fastened and vehicle goes above 15 kmph, then final audio warning will go on for 90 seconds. Seat belt tell-tale light will remain continuously ON when audio alarm is active.

Front Passenger Seat Belt Reminder

If front passenger has not fastened seatbelt and if vehicle speed goes above 15 kmph, then final audio warning will go on

for 90 seconds. Seat belt tell-tale light will remain continuously ON when audio alarm is active.

Rear Passenger Seat Belt Reminder

1. The seat belt warning lamp turns on for 60 sec in case seatbelt is not buckled. If speed exceeds 15kmph, audio warning start alarming for 35 sec.
2. When reverse gear is engaged/disengaged, thereafter forward gear selected and speed is below 10 kmph then visual warning turns on and above 10 kmph audio warning start alarming for 35 sec.
3. If rear door accidentally remains unlatched and vehicle speed is below 10 kmph then visual warning turn on, if speed is above 10 kmph then audio warning start alarming.

NOTE

Faster the seat belt to stop audio warning.

Door Open Reminder

If any door is open and the user tries to

lock the vehicle, one flash with a beep sound will indicate that a door is open.

Engine Coolant Temperature High Chime

The engine coolant temperature tell-tale warning light along with an audio warning will alert the driver if the coolant temperature is high.

Speed Limit Chime

When speed of the vehicle is greater than 80 kmph, an audio warning will sound at periodic interval of 120 seconds.

When vehicle speed crosses 120 kmph, continuous audio warning (beeps) will sound.

Drive Mode Chime

When user switches drive mode from city to eco or eco to city, a single audio warning will sound.


Electronic Steering Column Lock (ESCL) Chime

This feature informs the driver to rotate steering wheel when ESCL gets engaged accidentally.

WIF (Water in fuel) Chime

If water is detected in fuel buzzer shall sound to alert you.

COMBI SWITCH (RH Stalk) (if equipped)

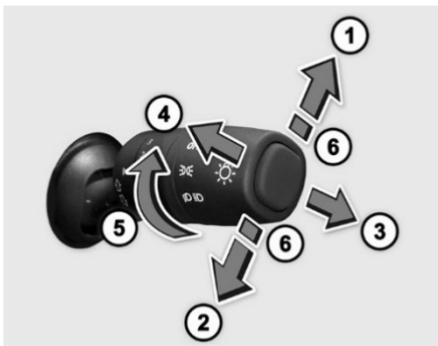

1. Left Turn Signal

Move the lever fully upward.

2. Right Turn Signal

Move the lever fully downward.

(i) NOTE

When the turn is completed, the signal will cancel and the lever will return to its normal position

DASHBOARD AND FEATURES

3. High Beam

Move the lever forward to select the high beam function.

Pull the lever back to normal for low beam.

4. High Beam Flash (spring return)

To flash the high beam, pull the lever towards you from the normal position. It will return to its normal position when you release it.

Headlamp Rotary Switch

OFF Position

All lamps will remain 'OFF'



Parking Lamp

Rotate stalk to turn 'ON' the
Parking lamps.



Low Beam

Rotate stalk to turn 'ON' the
Low Beam function



Auto Light

The headlights will be automatically switched ON depending on ambient light conditions (while

entering a tunnel or when it is twilight).

Day Time Running Lamps


Day time Running Lamps (DRL) are used to increase the visibility of the vehicle to other drivers during daytime.

1. To activate and deactivate DRL, keep the ignition switch is 'ON' position and switch the parking lamp ON-OFF twice.
2. Activation and Deactivation of DRL can be done by DRL soft switch, which is available on the Infotainment Display.

6. Lane Change Signal


To signal a lane change, move the lever slightly up or down to the point where the turn signal light begins to flash for six times, but the lever does not latch. The turn signal will flash six times automatically.

HEAD LAMP LEVELING ROTARY SWITCH

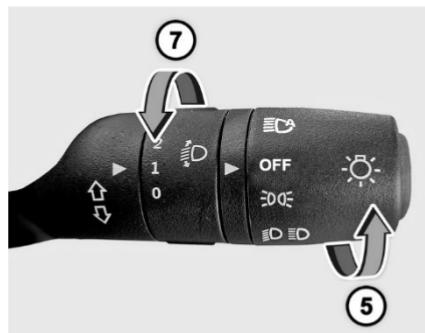

Inner rotary switch on right hand stalk is provided for head lamp leveling. With the inner rotary switch, Head lamp leveling can be done with head lamp in Low Beam and in 'ON' position. Select correct position before start of trip, when the vehicle is stationary. Depending on the number of passengers and luggage in the vehicle headlamp focus may change. This can be adjusted by rotating the knob to one of the three level positions.

COMBI-SWITCH (LH Stalk) (If equipped)

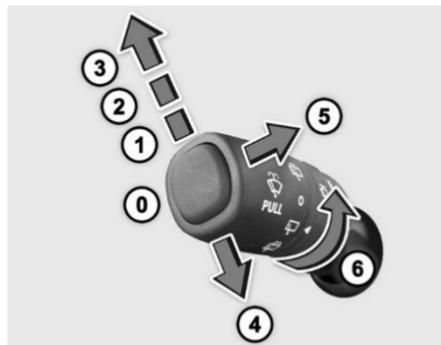

0. 'OFF' Position

The wiper is switched 'OFF'.

1. Intermittent Wipe

Push the stalk upwards to operate intermittent wipe.

Inner rotary switch on left hand stalk is provided for intermittent front wiper delay. The switch has five delay timers. Push the stalk towards position (1) for single wipe.

2. Slow Wipe

Push the stalk towards position (2) for continuous slow wipe.

3. Fast Wipe

Push the stalk towards position (3) for continuous fast wipe.

4. Flick Wipe (spring return)

Pull the stalk downwards and hold it for continuous wipe, the wiper continuously wipes across the windshield at low speed till the stalk is released.

5. Front Windshield Washer

- Pull the lever little longer, to spray the washer fluid on the windshield.
- The windshield wipers will operate for three cycles after the lever is re-leased and for one more cycle after five seconds.

6. Auto Front Wipe

If your vehicle is fitted with rain and light sensor, the wipers will automatically wipe the windscreens, if it senses rainfall. Make sure that the wiper stalk is in Auto position.

(i) NOTE

When you crank the engine, the supply to washer motor is momentarily cut off.

Rear Wash And Wipe



Rear Windshield / Wiper and Washer (spring return)

Turn the rotary knob clockwise and release to operate rear windshield wash and wipe. The windshield wipers will operate for three cycles.



DASHBOARD AND FEATURES

Rear Wipe

Turn the rotary knob counter clockwise such that it aligns its positions with arrow mark to operate rear windshield wiper continuously.

NOTE

Rear wiper will not work as long as tailgate is open.

Rear Windshield/ Wiper and Washer Switch

Turn the rotary knob counter clockwise such that it aligns its positions with the arrow mark and hold it to operate rear windshield wash and wipe function. It will return to 'Rear wipe' position as soon as it is released and continues to wipe.



NOTE

When you reverse the car with front wipers in 'ON' condition, the rear wiper will also be 'ON'.

WARNING

If you operate wash and wipe function for more than 15 seconds the controller cuts off the supply to the washer MOTORS to avoid overheating.

Rain/light Sensor (If equipped)

If your vehicle is fitted with rain and light sensor, the wipers will automatically wipe the windscreen, if it senses rainfall. Make sure that the wiper stalk is in Auto position.

The integrated rain and light sensor is mounted on front windshield glass to sense rain and light. As per the input from sensor, the wipe and light functions will work automatically.


NOTE

When you crank the engine, the supply to washer motor is momentarily cut off.

DASHBOARD CONTROLS (If equipped)


Fascia switches are provided on driver side dashboard.

Option I:

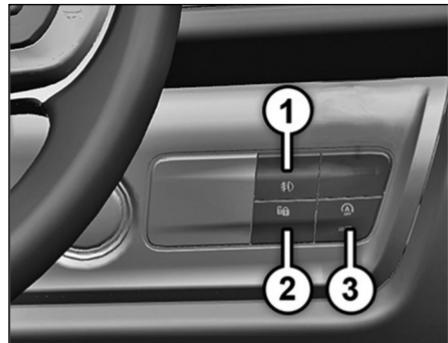


1. Front Fog lamp switch
2. Central lock/unlock
3. Idle stop start switch (ISS)

Option II:

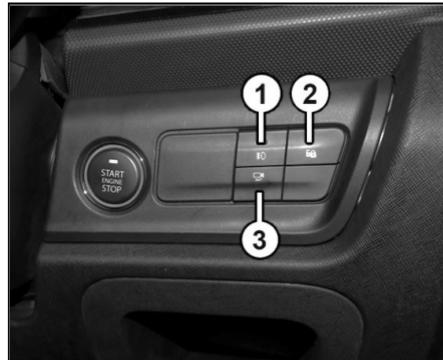

1. Front Fog Lamp Switch
2. Central Lock/Unlock
3. Surround View System (SVS) Switch

Option III:

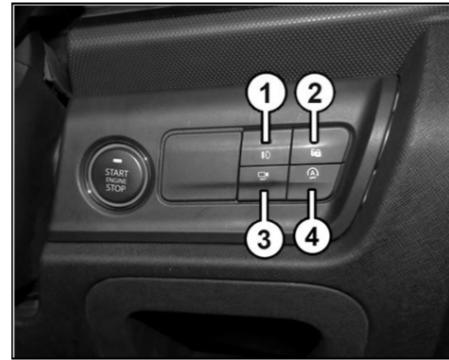

1. Front Fog Lamp Switch
2. Central Lock/Unlock
3. Surround View System (SVS) Switch
4. Idle Stop Start Switch (ISS)

DASHBOARD AND FEATURES

Front Fog Lamps (if equipped)



The front fog lamps are located on the front bumper. In poor visibility conditions due to fog, snow or rain, the fog lamps make visibility better and make it easier for other road users to see you. It turns to 'ON' when the fog lamp switch is turned on when the ignition is 'ON' and when the position and parking/ head lamp is 'ON'. An indicator on the instrument cluster will come on when the front fog light is 'ON'.

Fog Lamp as Cornering Lamp

The front fog lamps also function as cornering lamps to light up the area to the side of the vehicle, making night-time parking and turning safer.

Central Lock/unlock

To open the door, press the Lock/unlock door switch located on the fascia switch.

Idle Stop Start Switch (ISS) (if Equipped)

Your car is equipped with push Button on right side of the dashboard to Enable OR Disable ISS function.

For more details refer 'starting & driving' section.

Surround View System (SVS)

Surround view system displays the surroundings around the vehicle to the driver for permitting safe and comfortable drive. SVS will be activated when soft switch is pressed.

HEAD UP DISPLAY (HUD) (If equipped)

The head up display is a transparent display where important information of cluster is projected. The HUD screen can be seen from driver's front position.

HUD Switches

- HUD switches are provided near front USB charger.






1. HUD

- Long press this switch for more than 2 Sec to turn ON/OFF HUD unit. The combiner glass will open and close re-

spectively. Startup screen will appear.



- Short press will change the themes on HUD display (3 themes available).

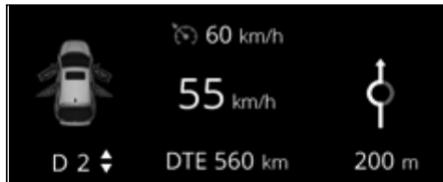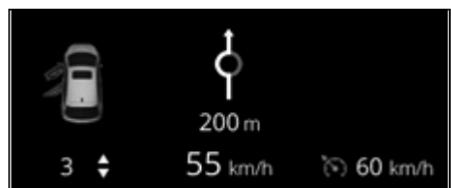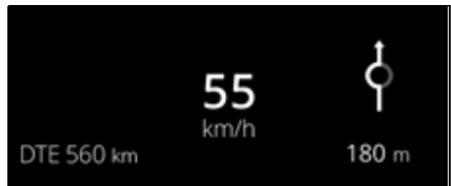

⚠️ WARNING


- Do not operate Head Up Display while driving.
- Do not continue to see Head Up Display while driving, this could distract you from the road in front of you and may cause an accident.

⚠️ CAUTION

Head Up Display has motorized mechanism, do not try to adjust, pull, push by your hand, it may get damage. When head up display is moving, do not put your hands in it. Your hands may get caught and injured.


2. Up Switch

- Short press UP switch to activate height adjustments. Combiner angle will be adjusted to move display UP / DOWN (Adjustment Limits -10 to 10).

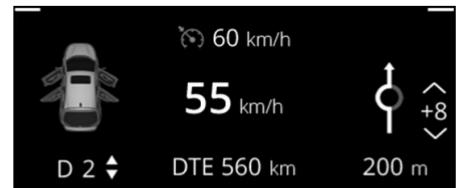

- Long press UP switch for 2 sec to activate illumination mode. An illumination bar will appear on the combiner to represent intensity level. Once illumination mode is activated, short press UP/DOWN buttons to increase/decrease intensity. (Intensity Limits 0 to +20)

DASHBOARD AND FEATURES

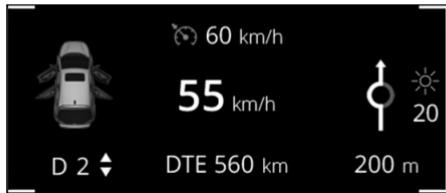

- Illumination setting will remain active for 5 sec.

3. Down Switch


- Short press of DOWN switch will adjust illumination or height (whichever setting is currently active), to its minimum limit.

NOTE

- Following conditions may prevent the proper operation of Head Up Display:
 - Do not open/close Head Up Display by your hand
 - Do not place any objects or drinks on HUD unit or its peripheral part.
- Adjust the display brightness and height properly not to obstruct the driving.
- In following conditions you may not see the display properly:
 - Sitting posture not correct
 - Object covering HUD
 - Driving on bright Sunny day or rainy day on wet road
 - Wearing polarize/ inadequate glasses
 - Light coming from outside
 - Vehicle parked in sunlight for long duration
 - Lights turned ON inside the vehicle
 - Any object/ vehicle coming in front of vehicle
- In case of any malfunction in HUD, contact the TATA MOTORS Authorized Service Centre.
- Do not use cleaners to clean the combiner glass, wipe it using soft

tissue paper or microfiber cloth.

STEERING MOUNTED CONTROLS (LHS) (If equipped)

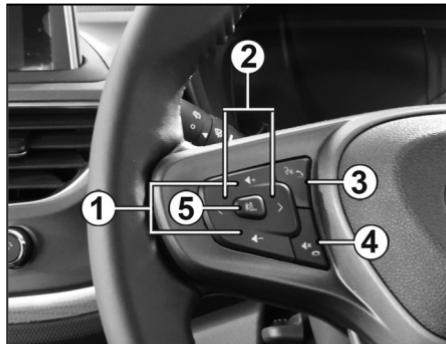

1. Volume

Press above switch to increase or decrease volume of music system / radio.

2. Seek Forward/backward

Press above switch to change radio channels.

3. Receive Calls/PTT (Push to Talk)

Press above switch to accept incoming call when a cell phone is connected via Bluetooth.

Voice Recognition

To start, press the voice activation button provided on the steering wheel. The system mutes/ pauses the currently played audio and you will hear a beep sound to indicate the activation of the voice recognition feature. The system displays the Voice Recognition screen on Infotainment to indicate activation of the feature.

(i) NOTE

The system will start recognizing your voice command only after the beep. So, speak your command only after you hear the voice activation beep.


4. Mute/phone Reject

Press above switch to reject or hang up a phone call. It is also used to mute the volume of music system/radio.

5. Source

Press above switch to select the required source in the infotainment system i.e. USB, AM, FM and Bluetooth.

STEERING MOUNTED CONTROLS (RHS) (if equipped)

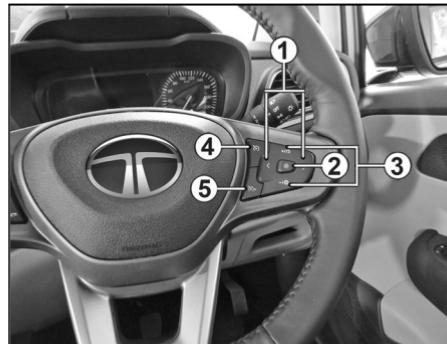

Instrumentation Controls(IC)

Instrumentation Controls Scroll LH

Press above switch to scroll LH on Instrument Cluster display

Instrumentation Controls Scroll RH

Press above switch to scroll RH on Instrument Cluster display.

OK / Select & Long Press for Settings

Press the above switch to select the option and long press it (approx. three seconds)

DASHBOARD AND FEATURES

to go directly to the instrument cluster settings.

Cruise Set (reset)

Speed Increase (decrease) Switch

- Press the cruise control master switch on steering wheel.
- Accelerate the vehicle to the desired speed.
- Make sure that the Clutch and Brake pedals are not pressed.
- Press the 'SET' button on steering wheel switch to set the desired cruise speed. The cruise control indicator on instrument cluster will turn 'ON'.
- Remove your foot from the accelerator pedal.

Once Cruise control is activated the vehicle automatically maintains the stored speed.

Changing the Set Cruise Speed

The set cruise speed can be adjusted using the buttons '+' (to increase) or '-' (to decrease) on steering wheel.

The speed increases and decreases on a

single press.

The changed speed will be shown on the speedometer.

Keeping the switch pressed increases or decreases the speed continuously till the switch is released or maximum/ minimum speed limit for particular gear is reached.

The set speed can also be increased by pressing the accelerator pedal till the desired speed is achieved and then pressing the 'SET' button.

The set speed can also be decreased by pressing the brake pedal (The cruise indicator will turn OFF) and slowing down to desired speed and then pressing the 'SET' button (The cruise control indicator will turn 'ON' again).

Cruise Control Master Switch

Cruise speed can be resumed only if cruise control is deactivated by applying the brake. To resume the previously set cruise speed, accelerate the vehicle to a desired speed.

Cruise Control Deactivating Switch

There are two ways to deactivate cruise

control:

Applying brake / clutch.

Press deactivation switch on Steering Wheel.

(i) NOTE

For more information, refer infotainment manual. Refer link -
<https://cars.tatamotors.com/>

MIC




Mic is provided on the roof near the roof lamp.

INFOTAINMENT SYSTEM DISPLAY (If equipped)

Option I



Option II

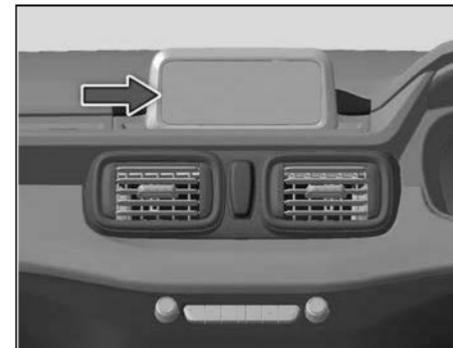

DASHBOARD AND FEATURES

Option III



(i) NOTE

For more information, refer infotainment manual. Refer link -
<https://cars.tatamotors.com/>

Master /force Reset Process

If your infotainment system touch screen becomes unresponsive or shows some unusual behavior, then you can restart it to potentially resolve the issue. Follow some basic steps given below and you can restart the system.

To restart the infotainment system

1. Park the vehicle.
2. Hold the Steering wheel Mute button (long press) for more than 10 secs and then release the button as soon as the display goes blank.
3. The step above will trigger the infotainment system restart procedure. Wait until the system restarts.
4. When you Hold the Steering wheel Mute button for more than 15 sec, system aborts restart process and display turns ON.


problem.

- *Force/Master reset keeps the stored data, such as call history, text message information, and previously paired phones as it is.*

(i) NOTE

- *It is preferable to do one Ignition OFF to ON cycle after Master/Force reset to synchronize vehicle settings with the TATA Infotainment System.*
- *If the reboot does not work or master/force resets are required on a weekly or daily basis, vehicle shall be taken to dealership. There, the dealer can update your firmware or inspect the system for hardware*

SPEAKERS & TWEETER (If equipped)

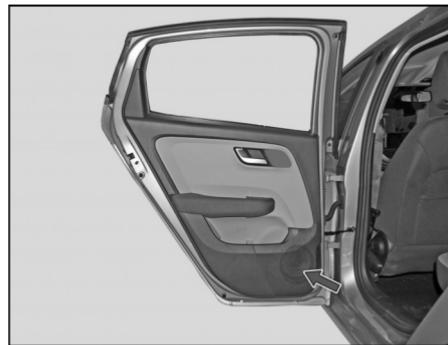

Speaker



Twiter

Speakers and Tweeters are available in models with infotainment system. Provisions are given for music system and speakers on versions without infotainment system.

USB PORT (if equipped)

Front USB Charger (Type A+C)



A type USB port is used to connect your portable digital music players, pen drives etc. for playing music tracks through the vehicle's music system.

C type USB port is used for fast charging of mobiles which are having C type interface.

DASHBOARD AND FEATURES

Rear USB Charger (type A)



A type USB port is used to charge mobiles which are having A type interface.

POWER SOCKET (If equipped)

The power socket will work when the ignition switch is in the "ACC" or "ON" position. This socket can be used to provide 12V (10A) power for electrical accessories.




For front passenger

(i) NOTE

- Use of unapproved electrical accessories can cause damage to your vehicle's electrical system.
- Make sure that any electrical accessories you use are designed to plug into this type of socket and rating.


ANTENNA

Option I (Rod type)

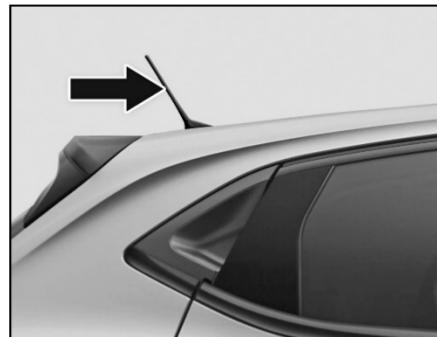

Rod type antenna is provided on the roof at rear end.

Option II (Shark Fin)

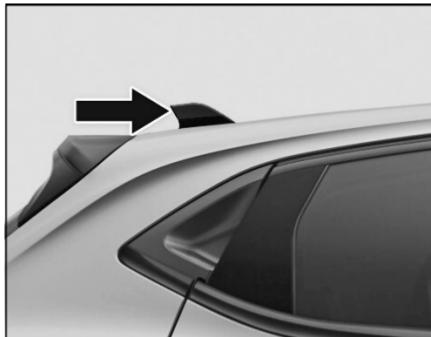

Shark Fin antenna is provided on the roof at rear end.

ROOF GRAB HANDLE

Grab handles are installed on the roof for all seats except for the driver's seat. These help the passengers to position themselves comfortably during the journey.

Option I



Option II



DASHBOARD AND FEATURES

ROOF LAMP

Option I

Interior roof lighting lamp is provided on the roof with inbuilt switch.



The switch has three positions:

ON - The lamp will turn 'ON' as long as the switch is in this position.



DOOR - In this position the lamp turns to 'ON' when either of the doors are opened. When the last door is closed, the lamp will turn 'OFF' with dimming. This helps

settling in the seat and inserting the key in the ignition switch. When the key is turned to the 'IGN' position, the lamp goes 'OFF' immediately.




OFF - In this position, the lamp will remain 'OFF'.



Option II

Interior roof lighting lamp is provided on the roof with inbuilt switch.

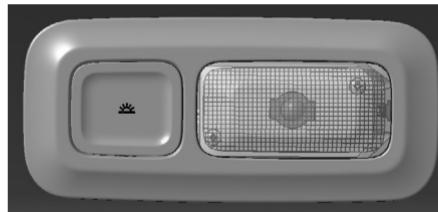

Press the button to turn the lamp 'ON'. It will remain 'ON' even when either of the doors are opened.

When the last door is closed, the lamp will turn 'OFF'.



(i) NOTE

The Lamp will turn on as long as the ignition switch is in "ON" position.

BOOT LAMP (If equipped)



Boot lamp is provided in the rear luggage compartment to illuminate the luggage area.

It will switch on whenever any door or tailgate is open.


SIDE INDICATOR LAMP



It is provided on the side fender.

It will turn ON when the turn signal indicator switch is ON and hazard warning switch is ON.


FRONT LAMP

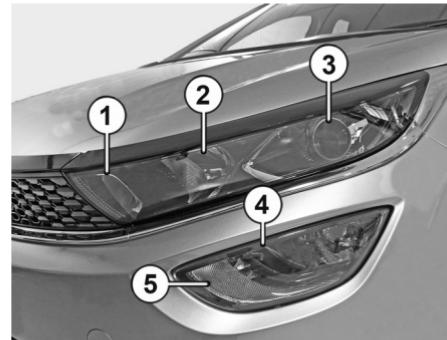

1. Position / Turn indicator lamp
2. High beam lamp
3. Low beam lamp
4. Front fog lamp (if equipped)
5. DRL (if equipped)

DASHBOARD AND FEATURES

TAIL LAMP

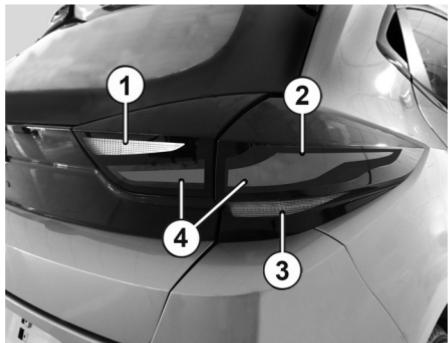

1. Reverse lamp (on LH lamp only)
2. Stop lamp
3. Turn indicator
4. Parking lamp

iRA (INTELLIGENT REAL-TIME AS-SIST) CONNECTED CAR SERVICE

Car is equipped with iRA - Connected car Technology which offers a host of features to the users through the "iRA - Connected car" Mobile Application (APP). The Vehicle is equipped with an electronic control unit which monitors & records the data from various vehicle systems like engine, transmission, brake, battery & other electrical systems. This data is then processed & used for providing the connected car features (For details & list of features, please refer the connected car brochure provided to you along with this manual). (Refer the app tour section of the mobile app.)

The connected car module records the following information:

Vehicle Telematics

This includes the periodic transmission of data from other vehicle ECUs & electronic systems like EMS, ABS, Air Bag, BMS, BCM etc. along with the geographical location of the vehicle.

Vehicle driving behavior

This includes the location, speed, acceleration, trip details, charging etc.

Event based recording

This includes data generated during specific events like vehicle collision, intrusion, un-authorized entry etc.

The Data collected through connected car module is used by TATA MOTORS PASSENGER VEHICLE LIMITED for various purposes, including, but not limited to, providing connected car features through Mobile APP.

- Evaluation of Vehicle performance.
- Research & improvement of current & future vehicle designs.
- Troubleshooting & diagnostics of the vehicle.

TATA MOTORS PASSENGER VEHICLE LIMITED does not disclose the data recorded from your vehicle to any third party except:

- After obtaining a written consent from the car owner.

- Upon request from Law enforcing agencies and regulatory bodies.
- Used for research purpose without the Personal Verifiable information (anonymized).
- Used as defence of TATA MOTORS in a Lawsuit.

WIRELESS POWER CHARGING

WPC System Description

Wireless Power Charging (is a convenience feature to charge the smart mobile phone using wireless charging technology, without a need to plugin wire in the device.

The WPC system is powered with vehicle battery and the wireless power charging function is enabled with Ignition ON.

Qi Compatible Term

Qi 1.2.4: refers to certified product with the capability to transmit power of up to 15 W and detect metal and other impurities to prevent heating.

(i) NOTE

The WPC would support only those smart phones which are Qi compatible. Please refer to the smart phone manual or connect to smart phone manufacturer to check whether your smart phone supports Qi function.

Location of Wireless Charger

Location: The location of the WPC in ve-

hicle is in the Centre console area as below.



Function of Each Component of WPC

- **Wireless Power Charging (WPC)**
ECU: Generates power up to 15W and transfer power wirelessly by magnetic induction.
- **Anti-skid Mat:** Holds the position of smart phone placed on it against any jerk and acts a charging contact surface for the smart phone.
- **Cooling Fan:** It is provided to keep charging surface temperature within

DASHBOARD AND FEATURES

ambient temperature range.

- **Fan Cover:** It has ducts to direct Fan air on WPC ECU surface.
- **Infotainment unit:** It is status display unit to display the status of wire-less power charger. Status symbol and text display is displayed on Infotainment unit.

Functions of WPC System

A. Charging function: Charge smart phone

Following conditions are applicable in this feature to function correctly.

- Ignition ON (Engine OFF)
- Engine ON
- Smart phone placed in correct orientation on the antiskid mat as below-



WPC system detects the presence of phone and starts charging as per the Qi standard protocol. The charging status is updated and displayed on the head unit.

B. Charging Status display function:

1. WPC system in standby mode - WPC system is waiting for phone or phone is not getting detected by the WPC system etc. Customer is advised to check the Qi compatibility/phone alignment/any metal object between the phone and mat.
2. Smart phone charging ON- phone is charging

3. Metal object on the antiskid mat - customer is advised to check any metal object on antiskid mat, if found, it is to be removed.
4. Smart phone battery is full/Charging completed
5. WPC ECU error ("Error" condition indicates abnormal operating conditions internal system fault or Fan stuck /jam)
- Customer should realign the phone to centre to initiate charging. If problem is not resolved you are advised to visit the TATA MOTORS authorized service centre.



Metal Object Detected - Popup



Metal Object Detected -All Time Display

Ensure Before You Charge Phone

1. Keep the charging surface clear of any Metal objects (coins, credit cards, smart cards, keys etc.)
2. Place the smart phone on the charging area marked for positioning the phone, for best results place the smart phone at the centre of the charging pad.
3. Charge the smartphone without its cover or not a thick cover otherwise it would halt the wireless charging
4. Ensure that the phone is placed with display facing upwards and charging area touching the charging pad sur-

face.

5. Turn ON the ignition to start the charging.

INFORMATION

- The wireless charging function is supported to charge smart phones which are Qi compatible. Certain features may not function as not supported by the smart phone manufacturer and not a malfunction of the wireless charging.
- Wireless charging stops with Ignition OFF.
- Wireless charging stops when the smart phone is not completely in touch with the charging pad surface or not positioned correctly on charging pad.

WARNING

If any metal object such as coin is located between wireless charging pad and phone back, the charging may get disrupted. Also, metal object may heat up.

Do's and Don't

Do's:

1. Please ensure that the phone is compatible to the charging standard "Qi"
2. If any metal object found on charging pad remove it immediately
3. In case of water/Liquid spillage on charging pad, dry out the pad surface area properly & clean the ECU surface area by removing Anti-skid mat. Do not charge the smart phone until surface is completely dry.
4. The smart phone may become hot while getting charged. Please be cautious about the high temperature while picking up the smartphone from the charging pad.
5. Wireless charger works on principle of magnetic induction, i.e. it converts electrical energy into magnetic energy to transfer energy from charging pad to phone. Please maintain safe distance from the charger most of the time as it may cause irritation to sensory organs or active implants if implemented in the

DASHBOARD AND FEATURES

body. Please consult medical specialist in case implant organ in the body of the user.

6. Always turn ON the engine while using this feature to avoid vehicle battery drain issue
7. Always keep charging pad clean and dust free
8. Vehicle AC may turn ON during wireless mobile charging for efficient use of this feature.

Don'ts:

1. Do not use metallic smart phone covers as it would halt the wireless charging function. The wireless charging may not function properly when there is a heavy & thick accessory cover on the smart phone.
2. Do not place smart phone up-side down on charging pad or do not miss aligned mobile phone on charging pad in such case smartphone charging will not happen.
3. Do not keep any metal objects like coins, smart keys, electronic cards e.g.

credit card, debit card, smart card from the charging pad as it may disrupt the charging process and/or may damage the card.

4. Do not keep any liquid (e.g. water, cold drink, and sanitizer), flammable object on antiskid mat.
5. Do not cover the wireless charger with a cloth or other object while charging. It may heat up the device and reduce the charging efficiency.
6. Do not disassemble, modify or remove the wireless charger & do not apply force or impact to the wireless charger.

Information

1. Small noise may be heard when a smart phone which does not support wireless charging or any Metal object is placed on the charging pad. This small sound is due to the vehicle discerning compatibility of the object placed on the charging pad. It does not affect the vehicle performance or the smartphone in any way.
2. For certain cellular phones with their own protection, the wireless charging speed may decrease and the wire-less changing may stop.
3. When the interior temperature of the wireless charger rises above a set temperature, the wireless charging will cease to charging function. After the interior temperature drops below set threshold, the wireless charging function will resume.
4. When the mobile phone temperature rises above a set cut off threshold, the wireless charging will cease to charging function due to mobile phone stops demand power from wireless charger. After the mobile phone temperature drops below threshold, the wireless charging function will resume. Mobile temperature cut off threshold is much lower than WPC temperature cut off threshold.
5. When charging certain smart phones, the charging full message on head unit may not display when the smart phone is fully charged. It depends on smart phone manufacturer.

6. Smartphone of some manufacturers may display messages on weak current. This is due to particular characteristic of smartphone and does not imply a malfunction on wireless charger. Smaller smartphone users (ex. iPhone may face intermittent charging issues due to its smaller size. (To avoid this, place the smartphone at centre of the charging pad). Small mobile phones may not be able to charge in every position on charging pad.
7. The wireless charger may not operate correctly when the vehicle is near a TV tower, electric power plant, gas station, large display, airport, or other facility that generates strong radio waves or electrical noise.

Smart Phone Charging ON Mode

When the smart phone is placed correctly and the conditions are favorable to perform the function of wireless charging, the infotainment system shows following messages. After Popup, The charging symbol stays ON until the phone is fully charged.



Charging Mode ON - Popup



Charging Mode on – All Time Display

Metal Object Detection Mode

The charging gets interrupted/stopped due to metal object placed on the charging pad. The infotainment head unit displays following message. Check if there are any

Metal objects between the smart phone and the charging pad, please clean if so. Smartphone shall be lifted for removing Metal objects and place it back on charging pad.



Foreign Objects

(i) NOTE

- *Delay in restarting of mobile charging will be observed if Metal objects are removed without lifting smart phone.*
- *After removing the Metal objects, if smart phone do not resume charg*

DASHBOARD AND FEATURES

ing immediately lift the phone and place on charging pad to start the charging.

- In case, Phone overheat! Remove and keep it after sometime.

Smart Phone Battery Is Full/ Charging Completed

The smart phone fully charged status is indicated on the infotainment display screen with following message. This Indication depends on phone profile whether it communicate the battery full charge status to WPC System.



Charging Complete Indication - Popup

WPC System Error Mode

The error in the WPCF wireless power charger with FAN) system may cause the error message to get displayed on the infotainment screen.

Some of errors that can occur while charging which halt/interrupt charging can be covered with this indication are:

- WPCF internal fault which lead to permanent failure in charger functionality.
- WPC Fan stuck/jam is detected Coil Failure.
- High Temperature of WPC device (70 Degree C)
- Memory failure



System Error Mode- Popup

(i) NOTE

If error message is pop up on head unit then avoid charging the smart phone and visit the nearby service station.


STOWAGE COMPARTMENT



1. Glove box
2. Driver side coin box
3. Utility pockets on front doors
4. Utility pockets on rear doors
5. Centre console
6. Stowage for rear passenger (if equipped)
7. Tailgate Compartment (Luggage)

STOWAGE COMPARTMENT

Glove Box

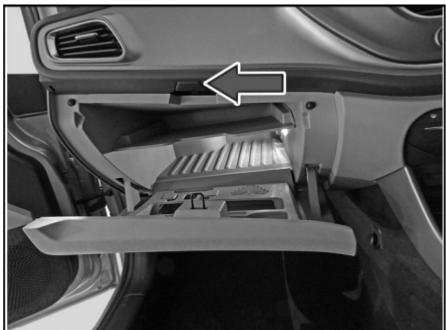

Opening and Closing

To open- Press the knob and open the glove box flap.

To close - Lift glove box flap upward until it engages.

(i) NOTE

Make sure that glove box flap is closed while driving.

Glove Box Illumination (if equipped)


The glove box lamp illuminates when the

glove box flap is opened.

(i) NOTE

Make sure that glove box flap is closed while driving.

Stowage Detail (if equipped)

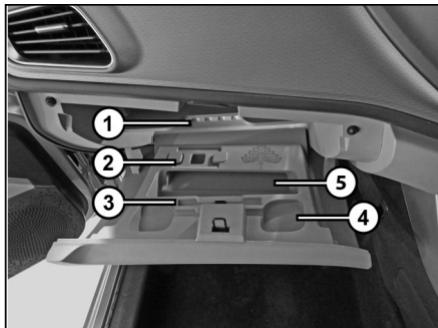

Following items can be stowage in glove box:

1. iPod
2. Visiting card
3. Pen holder
4. Cup holder


5. Mobile phone

Cooling Facility (if equipped)




On selected models glove box is provided with a cooling facility. It cools the glove box only when the front A/C is ON. Shut OFF the vent by rotating the knob, whenever cooling is not required.

Driver Side Coin Box

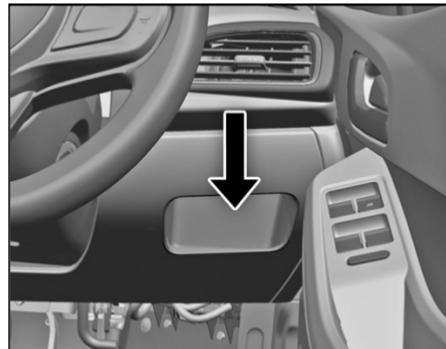

Stowage is provided on RH side of steering wheel for Coin, mobile and wallet.

Utility Pockets on Front Doors

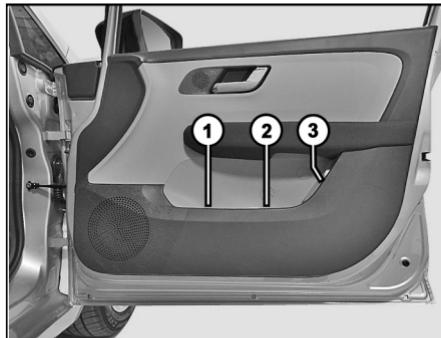

Utility pockets are provided on front doors and it can be used to keep following items.

1. Magazine / paper / books
2. Suitable water bottle
3. Umbrella

(i) NOTE

Remove the water from umbrella and fold it properly before storing it in umbrella holder.

Utility Pockets on Rear Doors



Utility pockets are available on rear doors and it can be used to keep following items.

1. Suitable water bottle
2. Magazine / paper / books

STOWAGE COMPARTMENT

Center Console


Stowage Below Arm Rest - Option I

A storage compartment is provided below the armrest for keeping phones, chargers etc.

To open the armrest pull the flap.



Stowage Below Arm Rest - Option II

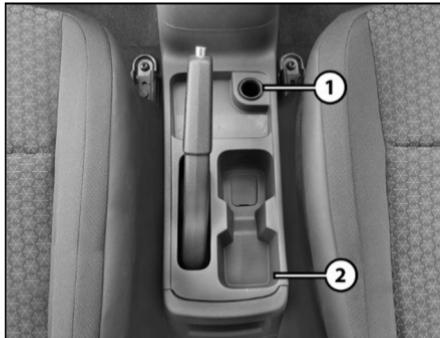

Following items can be stowage in Center console.

1. Pen holder
2. Cup holder

Stowage for Rear Passenger (if equipped)



Stowage for the rear passenger is available on rear side of floor console between the front passenger seats. It can be used to keep phone and small items.

(i) NOTE

Applicable for models where rear vents is not provided.

Tailgate Compartment (luggage)



Store the luggage in tailgate compartment.
You can keep suitcase, bags, etc.

WARNING

- Distribute the items of luggage as evenly as possible.
- Position heavy loads towards rear seat and low down in the trunk as possible.
- Do not allow occupants to travel in the luggage compartment.
-

- Do not place anything on luggage cover as it could obstruct driver's rear view. Also in case of an accident or sudden braking, it could cause an injury to occupants.

HOOKS (If equipped)

Coat Hook

Coat hanger is provided for rear passenger on right side grab handle.




NOTE

- *The coat hook is not designed to carry heavy objects or luggage items.*
- *Do not hang hard, sharp-edged or fragile objects on the coat hook.*

STOWAGE COMPARTMENT

Collapsible Hook

Collapsible hook is provided for hanging small carry bags etc.

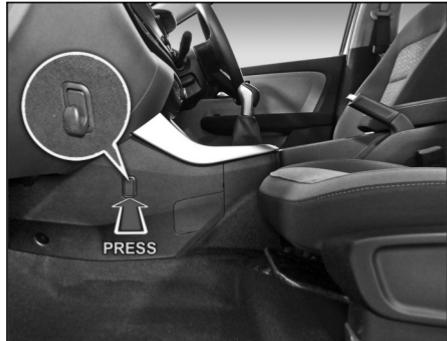

Carrier Hook

Carrier hook is provided for hanging small carry bags etc.




(i) NOTE

Do not use these hooks for securing luggage like using nets etc. in the boot.

AIR DISTRIBUTION

The air is distributed through the vents in the passenger compartment as shown below:

The climate control regulates the temperature set in cabin based on user settings and it can be set in temperature settings.

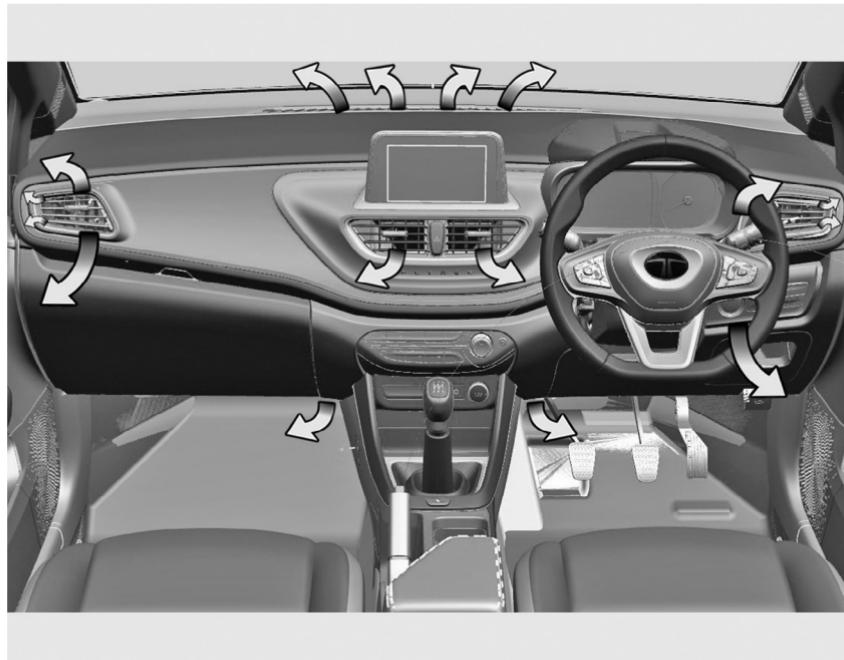

CLIMATE CONTROL

AIR VENT


Air vents are available on the dash-board. The direction of air flow can be adjusted using sliders on the respective vents.



REAR AC VENTS (If equipped)

Rear AC vents are available between two front seats. It can be switched 'ON' provided that front AC is switched 'ON'.

It can be switched 'ON/OFF' by rotating knob.

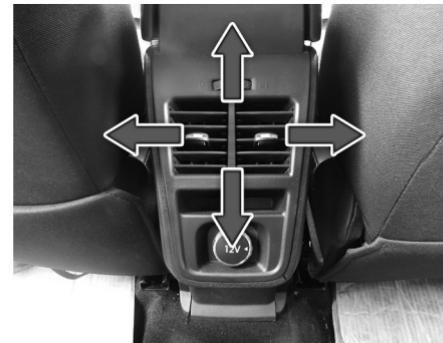

HVAC CONTROLS (If equipped)



- A. Temperature Control
- B. Blower Speed Control
- C. Air Distribution Control
- D. Fresh / Recirculation air mode
- E. AC ON/OFF Switch

Temperature Control



The temperature control knob allows you to adjust the temperature. The temperature can be increased by rotating the knob towards the red segment (clockwise) and decreased by rotating it towards the blue segment (anti-clockwise).

Blower Speed Control



This is to turn 'ON' the blower and select desired blower speed.

CLIMATE CONTROL

Air Distribution Control



Air distribution control

	Directs air through the center and side air vents
	Directs air through the center, side and foot well vents
	Directs air through the foot well air vents
	Directs air through the de-froster & foot well vents (Default fresh air mode)
	Directs air through the de-froster vents (Default fresh air mode)

Fresh / Recirculation Air Mode

Press the switch to activate / deactivate air recirculation mode.



Press to 'ON' or 'OFF'

Recirculation Mode: (indicator Light 'ON')

Air in the passenger compartment re-circulates. No fresh air enters the compartment.

Always use when:

- Driving on a dusty road or through tunnel.
- On signals or slow traffic to avoid traffic pollution.
- Maximum cooling is required

Fresh Air Mode: (indicator Light 'OFF')

Fresh air is drawn into the vehicle.

Always use when:

- Discomfort is felt or windows are fogging up.
- Using or air flow modes during demist / defrost.
- Using normal heating mode.

AC ON/OFF



Press the button to switch ON/OFF the AC. The indicator lamp in the button will light up when AC is ON.

① NOTE

The AC can be switched to 'ON' only if the blower is 'ON' and engine is running.

When AC is switched to 'ON', engine idling RPM increases marginally to adjust the AC compressor load.

When desired temperature is achieved Ac compressor will self displace optimum refrigerant flow.

① NOTE

- Water may drip from the underside of the vehicle when it is in cooling mode. Traces of water on the ground are normal and are not a sign of leakage or malfunction.*
- Ventilate the vehicle for a brief period during warm weather. This will speed up the cooling process and the desired vehicle interior temperature will be reached quickly.*

- Do not cover the air vents or air intake grilles in the vehicle interior.*
- If the AC is not used for a long period, such as during winter, it may not give the best performance when you start using it again. Operate the AC at least once a month to maintain optimum performance.*
- When you start the vehicle after a long duration (more than 15 days), follow the procedure for better AC performance:*
 - Start the vehicle and allow the engine to idle for 2-3 minutes. AC should be off in this period.*
 - Switch the AC on and run it for another 2~3 minutes while the engine idles. This circulates the refrigerant and oil to lubricate the internal parts of the air-conditioning system.*


CLIMATE CONTROL

Functions and Setting

Here are the recommended basic settings of the control elements of air conditioning system for the respective operating modes. These may vary depending on individual requirements and weather conditions:

Settings	Control Knob Position			Button Position	
Functions	A. Air Temperature	B. Blower Speed	C. Air Flow Direction	D. Fresh / Recirculation air mode	E. AC ON / OFF
Normal heating	Desired temp.	2nd or 3rd dot		Fresh air mode.	Switched OFF
Quick heating	To the extreme right up to the stop	To MAX speed and then 2nd or 3rd dot		Briefly switch ON to Recirculation mode then Fresh air mode	Switched OFF
Normal Cooling	Desired temperature	1st to 3rd dot		Recirculation mode	Switched ON
Quick Cooling	To the extreme left up to the stop	To MAX speed and then 2nd or 3rd dot		Recirculation mode	Switched ON
Demisting	Desired temperature	2nd or 3rd dot		Fresh air mode (Default)	Switched ON (Default)
Defrosting	To the extreme right up to the stop	To MAX speed		Fresh air mode (Default)	Switched ON (Default)

ELECTRONIC TEMPERATURE CONTROL (ETC) (if equipped)

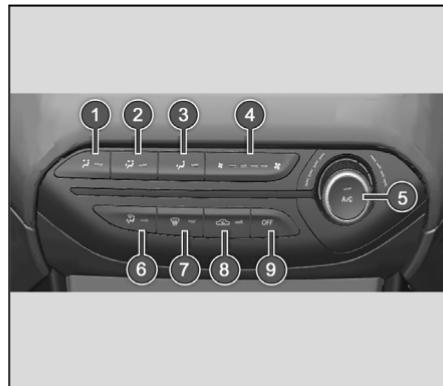

1. Air Distribution Mode -Center and side
2. Air Distribution Mode- center, side and foot well
3. Air Distribution Mode -foot well
4. Blower Speed Control
5. AC ON/OFF Switch
6. Air Distribution Mode- defroster & foot well
7. Air Distribution Mode - Defroster

8. Fresh / Recirculation air mode
9. OFF Switch

1. Air Distribution Mode -center And Side

This is to select the air distribution pattern directs air through the center and side air vents.



2. Air Distribution Mode Center, Side And Foot Well

This is to select the air distribution pattern directs air through the center and side and foot well air vents.



3. Air Distribution Mode -foot Well

This is to select the air distribution pattern directs air through the foot well air vent.



4. Blower Speed Control

Press the Blower Speed control down but-

ton  to decrease the blower speed and press the blower speed control up button  for increase the blower speed.

5. Ac On/off

Press the button to switch ON/OFF the AC. The indicator lamp in the button will light up when AC is ON.



(i) NOTE

The AC can be switched 'ON' only if the blower is 'ON' and engine is running.

When AC is switched 'ON', engine idling RPM increases marginally to adjust the AC compressor load.

When desired temperature is achieved Ac compressor will self-displace optimum refrigerant flow.

(i) NOTE

- Condensate may drip from the underside of the vehicle when it is in cooling mode. Traces of water on the ground are normal and are not a sign of leakage or malfunction.*
- Ventilate the vehicle for a brief period during warm weather. This will*

CLIMATE CONTROL

speed up the cooling process and the desired vehicle interior temperature will be reached quickly.

- Do not cover the air vents or air intake grilles in the vehicle interior.
- If the AC is not used for a long period, such as during winter, it may not give the best performance when you start using it again. Operate the AC at least once a month to maintain optimum performance.
- While you start the vehicle after a long duration (more than 15 days), follow the procedure for better AC performance:
 - Start the vehicle and allow the engine to idle for 2-3 minutes. AC should be off in this period.
 - Switch the AC on and run it for another 2~3 minutes while the engine idles. This circulates the refrigerant and oil to lubricate the internal parts of the air-conditioning system.

6. Air Distribution Mode- Defroster & Foot Well

This is to select the air distribution pattern directs air through the foot well air vent.



7. Air Distribution Mode - Defroster

This button directs the main airflow towards windscreens for faster defrosting. (It also overrides any mode selection you may have made.)



(i) NOTE

- For your safety make sure you have a clear view through all the windows before driving.
- When “Air Distribution Mode - Defroster & Foot Well” or “Air distribution mode - Defroster” is pressed, system may switch on AC and move to fresh air for optimum demisting/defrosting

8. Fresh / Recirculation Air Mode

Press the switch to activate / deactivate air recirculation mode. Press to ‘ON’ or ‘OFF’



9. Off Button

Press the OFF button to switch the system ‘OFF’.




FULLY AUTOMATIC TEMPERATURE CONTROL (FATC) (if equipped)

General Description

FATC system controls the in-cabin temperature of the vehicle automatically and provides maximum passenger convenience regardless of outside weather conditions.

Display Unit

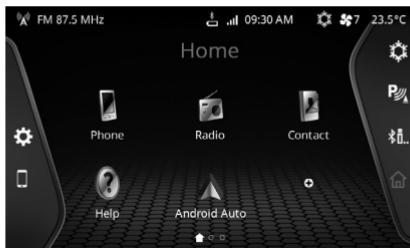


FATC display is shown on main display screen.

FATC functions can be controlled using both the FATC control panel and the touch screen display.

Whenever the user presses any push button or turns the rotary knob, then the dis-

play unit will show the relevant Climate Information.

Also, when the display is not in climate mode then climate information will be displayed on the all-time display available on the top bar.

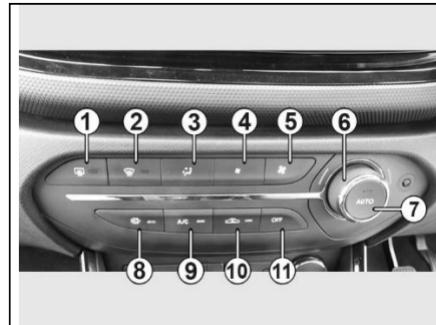

1. Rear window demister button
2. Maximum Defrost button
3. Air Distribution mode
4. Blower speed down control
5. Blower speed up control
6. Temperature control knob
7. Auto ON selection button

8. Express cooling
9. AC ON / OFF button
10. Fresh Air / Recirculation button
11. OFF button

FATC Controls

Rear Window Demister Button

This button turns the rear window demister ON or OFF. The system will be deactivated after 15 min of continuous operation.



Max Defrost Button

This button directs the main airflow towards windscreens for faster de-frosting. (It also overrides any mode selection you may have made.)



When you turn off the button, the system returns to its former settings.

NOTE

For your safety make sure you have a clear view through all the windows before driving.

CLIMATE CONTROL

Air Distribution Mode

In AUTO mode, the FATC system will regulate the mode automatically. However, user override is possible with the use of MODE button to select the desired airflow mode.

Each time you press the MODE button, the display shows the mode selected.

	Directs air through the center and side air vents
	Directs air through the center, side and foot well vents
	Directs air through the foot well air vents
	Directs air through the defroster & foot well vents (Default fresh air mode)
	Directs air through the defroster vents (Default fresh air mode)

Blower Speed Control Button

Press the Blower Speed control down button to decrease the



blower speed.

Blower Speed Control Up Button

Press the Blower Speed control up button to increase the blower speed.



Temperature Control Knob



Turning the temperature control knob clockwise increases the temperature of the air. The desired temperature will be increased by steps of 0.5°C. User can select temperature range from 18°C to 30°C. Turning the knob in the anticlockwise direction reduces temperature.

When you set the temperature to its lower limit (Lo) or its upper limit (Hi), the system runs at full cooling or heating only. It doesn't regulate the interior temperature.

Auto ON Selection Button



To put the automatic climate control in fully automatic mode:

Press the 'AUTO' button.

- Set the desired temperature by turning temperature control knob. The display will show all the functions during 'AUTO' mode.
- The system automatically selects the proper mix of conditioned and / or heated air that will, as quickly as possible, raise or lower the interior temperature to your preference.
- When you set the temperature to its lower limit (Lo) or its upper limit (Hi), the system runs at full cooling or heating only. It does not regulate the interior temperature.

Semi-automatic Operation

You can manually select various functions of the climate control system when it is in fully automatic mode. All other features remain automatically controlled. Making any manual selection causes the word 'AUTO' in the display to go OFF and the overridden setting is displayed. System will remain in semiautomatic mode till 'AUTO' is pressed again.

Xpress Cooling (if equipped)

This helps cabin to reach to comfort temperatures quickly by optimally setting the air conditioning to maximum cooling. Also, if required, the driver window will roll down to flush the hot air from inside the cabin. XPRESS Cooling can be turned On/Off by Xpress switch or by a soft key from Head Unit.

Functionality

Once Xpress cooling button is pressed, system optimally calculates if the car is soaked in sun and takes the driver's window roll down to flush out the hot air from cabin. Also, air conditioning system will be set to maximum cooling and maximum fan

speed for short duration.

Once cabin has been sufficiently flushed, the system will announce to take driver window's roll up which can be taken up using window winding switch.

Driver side window may roll down, if:



- The cabin temperature is more than outside temperature.
- If it is not raining.
- Vehicle Speed is less than 40 kmph.

Further, after sufficiently cooling the cabin, the Xpress cooling function will auto switch off and revert back to customer pre-selected settings.

Express cooling functionality is used to improve the HVAC system performance in case of cabin temperature being considerably greater than outside air temperature. The system will be deactivated automatically after 500 sec of continuous operation.

NOTE

The Express Cool function can only be turned ON if the Ambient temperature is above 18 degree Celsius.

AC ON / OFF Button

Press the AC ON/OFF button  to turn the air conditioning ON or OFF. The AC icon activated on the display when the AC is ON.

Fresh Air / Recirculation Button

When the recirculation button  or LED is switched 'ON', air from the vehicle's interior is sent throughout the system.

When the recirculation button is switched to 'OFF', air from outside enters into the cabin (fresh mode). Whenever discomfort is felt, switch to fresh air mode.

NOTE

The outside air intakes for the climate control systems are at the base of windscreen. Keep this area clear from

CLIMATE CONTROL

leaves and other debris.

Use recirculation mode for faster heating and cooling. However, keeping the system in recirculation mode - particularly when the AC is in OFF - can cause fogging of windows.

NOTE

When reverse gear is selected, air inlet may switch to recirculation mode if it is in fresh air mode, to prevent exhaust fumes from entering the cabin.

“OFF” Button

Press the OFF button to switch the system ‘OFF’. OFF will be displayed on the infotainment screen.

 OFF

FATC Sensors

FATC system is fitted with three sensors.

1. A solar sensor on windshield glass at the center.



2. In-car sensor on HVAC control panel.



3. Outside Ambient Temperature (OAT) sensor located under the front bumper grill.

NOTE

- *Do not cover or spill any liquid on sensors.*
- *Do not cover sensor, this may cause the sensor to malfunction. This may lead to FATC not functioning to desired level.*

Quick Cooling

If your vehicle is parked under the sun, you can cool it down fast by following the steps given below:

1. Start the engine.
2. Turn the A/C on and make sure the temperature control is set to the lowest. In case of FATC set temperature to 'Low' mode.
3. Set the blower to maximum speed
4. Slightly open the windows and direct the vents towards the face.
5. When the interior has cooled down to a comfortable level, close the windows and set the required temperature, with recirculation mode ON.

CLIMATE CONTROL

Functions and Settings

Functions	Control Knob Position		Button Positon							
Settings	(6)	(7)	(1)	(2)	(3)	(4)	(5)	(8),(9)	(10)	
Normal heat-ing	Desired Temp	Auto	OFF	OFF	OFF	Desired Speed	Desired Speed	A/C ON	Fresh Air	
Quick heating	To the extreme right until temp 'HI'	OFF	OFF	OFF		NA	Max speed	ON	Fresh Air	
Normal Cool-ing	Desired Temp	Auto	OFF	OFF		Desired Temp	Desired Temp	A/C ON	Recircula-tion	
Quick Cooling	To the extreme left until temp 'LO'	OFF	OFF	OFF		NA	Max speed	ON	Recircula-tion	
Demisting	To the right up, to the desired tempera-ture	OFF	As desired	ON		Desired speed	Desired speed	A/c ON	Fresh air	
Defrosting	To the right up, to the desired tempera-ture	OFF	OFF	ON		NA	Max Speed	ON/OFF	Fresh air	

Fully Automatic Temperature Control (FATC) Adjusted by Infotainment System



AC set in auto mode



Blower speed



FATC settings on head unit



FATC settings on Head Unit Xpress Cooling

CABIN AIR PURIFICATION

The Climate Control System is fitted with advance filter for cabin air purification.

- Pollen Filter (if equipped): The filter takes care of dust particles and other pollutants.
- PM2.5 Combi filter (if equipped): This high efficiency filter cleans the PM2.5 particles and harmful gases coming from atmosphere pollution and volatile organic compounds

NOTE

- Replace the Filter as per Maintenance schedule. If the vehicle is driven in heavy dusty conditions more frequent filter replacement are required. Replace the filter if you find poor ventilation, Cooling or Demisting.

Air Quality Index : (If equipped)

- Climate control system fitted with FATC calculates Air Quality Index (AQI) of cabin using PM2.5 AQI Index.

CLIMATE CONTROL

- FATC System in AUTO Mode automatically sets the blower speed and switches to recirculation air mode to improve AQI inside the cabin.
- The calculated AQI is displayed on display unit along with severity index.

inspected.



(i) NOTE

- AQI calculation will be effective after 30 seconds after ignition ON and no value will be displayed during this period.
- If the AQI does not improve in some time get the sensor and Cabin filter

PRE DRIVING CHECKS

Make Sure That

- Windshield, windows, mirrors, lights, and reflectors are clean and unobstructed.
- Tool kit, jack & handle, warning triangle, owner's manual, first aid kit and vehicle documents are available and stored at their locations.

WARNING

Do not put any mat on the floor carpet near control pedals area.

- All doors, engine bonnet and tail gate are securely closed and latched.
- All occupants should always wear seat belts or suitable CRS as appli-cable while travelling.
- Objects, luggage or loads are se-cured correctly against slipping or tipping.
- Rear seat is securely latched.
- There is sufficient fuel for the trip.

Daily Check

- Tyres for unusual wear, cracks or damage and embedded foreign material such as nails, stones, etc.
- Traces of fluid and oil below vehicle

NOTE

Water dripping below the car is normal. This is due to the usage of air conditioning system.

- All lamps, wipers, wiper blades and horn for proper operation.
- All switches, gauges and tell tales are working properly.

Adjust

- Seats, head restraints and steering wheel position.
- Adjust all the mirrors before you start the car.

Weekly Check

- Engine oil level
- Coolant level
- Brake fluid level
- Windshield washer fluid level
- Battery electrolyte level
- Fuel level

NOTE

Tyre pressure should always be measured in cold conditions. Do a check of the tyre pressure and condition after every 15 days, including the spare tyre.

STARTING AND DRIVING

DRIVING TIPS

Fuel consumption, engine, transmission, brake and tyre wear are mainly affected by the below factors:

- Operating conditions of your vehicle
- Your personal driving style

Operating Conditions

- Avoid frequent starts and stops as these actions increase the fuel consumption of the vehicle.
- Always ensure correct tyre pressure.
- Do not carry any unnecessary weight.
- Regularly service your vehicle and adhere to the recommended service maintenance schedule.

Personal Driving Style

- Do not press the accelerator pedal when starting the engine.
- Do not warm up the engine when the vehicle is stationary.
- Always adapt your driving style to suit the prevailing road, weather conditions, and maintain a safe distance from the vehicle in front. Drive care-

fully.

- Avoid frequent, sudden acceleration and braking.
- Select appropriate gear according to varying speeds and load conditions.

NOTE

Do not rest your foot on the clutch pedal while driving.

- Switch 'OFF' the engine in stationary traffic or at signals.
- Keep an eye on the vehicle's fuel consumption.
- Safety systems are merely aids designed to assist driving. You are responsible for the distance between the vehicles in front, for vehicle speed and anticipating braking in good time.

WARNING

- You could lose control of your vehicle if you try to adjust the driver's seat, head restraint, mirror, steering wheel and fasten the seat belt while

driving. There is a risk of an accident.

- Do not rest your hand on the shift lever during driving; Pressure transmitted from your hand may result in premature wear of the transaxle internal gear shift mechanism.
- Press the clutch fully while shifting the gears. The reverse gear should be engaged only when the vehicle is stationary. Transmission may get damage by trying to shift into reverse gear while the vehicle is moving. Wait for 5 seconds after declutching to ensure smooth engagement of the reverse gear or shift into one of the forward gears for a moment while clutch is pressed fully. This will avoid grinding of reverse gear while shifting.

Recommended Fuel Economy Speeds

Gear	Diesel	Petrol
	Speed (kmph)	Speed (kmph)
1	15	20
2	30	35
3	50	55
4	65	75
5	85	95

Tips for Obtaining Better Fuel Efficiency

- Always maintain the specified tyre pressure during fuel top-ups and also before a long trip. Vehicle running with low tyre pressure will consume more fuel than the one running with specified tyre pressure.
- Keep the vehicle clean. Get rid of the unwanted stuff lying in the boot etc., to reduce weight.
- Regularly inspect your vehicle for any leakages, worn out wires, damaged by rat bites etc.

- Always follow periodic & regular service schedule of the vehicle.
- In places with high dust content. Clean the air filter element at every 5000 km.
- Anticipate the road conditions and drive in a smooth manner.
- Do not accelerate excessively when you are in lower gears (1st or 2nd). Be gentle on the accelerator when you are in traffic. In lower gears, opening up the throttle will increase the engine rpm while keeping the vehicle at lower speeds. This reduces the fuel efficiency of the vehicle.
- Be in the maximum possible higher gear at a given speed. This reduces the engine operating speeds which means the engine is running at lower rpm (Revolutions per Minute) for the same vehicle speed. Lesser the number of engine revolution lesser the fuel burned.
- Avoid harsh braking.
- Maintain healthy driving habits & while decelerating, do coasting in gear and not in neutral or with clutch pedal pressed.
- Use the car AC only when you require. For cooling, keep the blower speeds low, as at higher blower speeds, the AC consumes more electric power which is ultimately drawn from engine by burning fuel.
- Avoid unnecessary extra electrical loading on the car.
- Stop the engine wisely at traffic signals. Switch 'OFF' the engine at the traffic signal only if the stop-page time is high (typically more than 30 sec).
- When you drive on highways, close all the windows. This reduces the drag on the vehicle and improves fuel efficiency.
- Do not over speed. Follow the speed limits. With increasing speed, the engine rpm increases to overcome external air resistance and this reduces fuel efficiency.

STARTING AND DRIVING

Good Driving Practices

- Slow down before you shift to a lower gear. This helps the engine to keep a lower rpm and result in less wear and tear of the engine components.
- Avoid frequent brake application which can cause overheating of brakes.
- Slow down the vehicle when you drive in cross winds to get better control over the vehicle.
- Avoid high speed when cornering or turning.
- Press the clutch fully while shifting gears.
- Make sure that vehicle is completely stationary before you attempt to shift in reverse gear.
- Drive slowly on wet roads.
- You can get extra braking from the engine by shifting to a lower gear. This can help you to maintain a safe speed and prevent your brakes from overheating specially while going down a hill.

Driving Through Water

Do not drive through flooded areas. Judge the depth of water before driving through it. Otherwise, water may enter the vehicle interior or the engine compartment.

If at all the situation demands that you have to drive through water then;

- Keep engine in higher RPM and crawl the vehicle in low gear.
- Flowing or rushing water creates strong forces. Driving through flowing water could cause the vehicle to about trying to drive through flowing water.
- Lightly apply the brake pads to dry the until the brakes work normally once you are out of water.

WARNING

Do not attempt to start the engine if vehicle gets flooded due to water. Tow the vehicle to a safe place. Contact a nearest TATA MOTORS Authorised Service Centre

Driving on a Rainy Day

- Check wiper blades, lights and brakes for proper functioning and condition.
- Check the tyre treads depth, the condition of the tread and tyre.
- Avoid harsh braking and sharp turns. It may cause loss of control and lead to a skid.
- For slowing down, shift to lower gears and brake gently.
- Keep lights 'ON' if visibility is poor.

Driving on Wet Roads

On wet road or during light showers, "Aquaplaning" can occur. "Aquaplaning" is the loss of direct contact between the road surface and the vehicle's tires due to a water film forming between them. Steering or braking the vehicle can be very difficult, and loss of control can occur. There is no hard and fast rule about aquaplaning. The best advice is to slow down when the road is wet.

NOTE

If you have driven for a long time in heavy rain without braking, there may be a delayed reaction from the brakes when braking for the first time. You have to press the brake pedal more firmly. Maintain a greater distance from the vehicle in front.

Night Driving

- Ensure that all lights are working and windshield, window glasses are clean.
- Driving slower than normal speeds at night than in the daytime, as the visual range is restricted at night. Maintain a speed such that you can stop within illuminated distance of head lamps.
- Do not use the high beam unless inevitable. It may dazzle the driver of the oncoming vehicle, thus causing an accident.
- Use head lamp main/dip beam to alert other road users on turns/ cross roads.
- Use side indicators for lane change or turning.

Driving on Gradients

When climbing gradient, the vehicle may begin to slow down and show a lack of power. If this happens, shift to a lower gear and apply power smoothly so that there is no loss of traction. When driving down a hill, the engine braking should be used by shifting into a lower gear. Do not drive in neutral gear or switch off the engine.

WARNING

On long and steep gradients you must reduce the load on the brakes by shifting early to a lower gear. This allows you to take advantage of the engine braking effect and helps avoid overheating of service brakes resulting in reduced braking efficiency.

Driving on Highway

Stopping distance progressively, increases with vehicle speed. Maintain a sufficient distance between your vehicle and the vehicle ahead.

For long distance driving, perform safety checks before starting a trip and take rest at certain intervals to prevent fatigue.

Running-in Period

The purpose of running in a car is to give time for the mechanical parts to settle so that they work efficiently. This involves gentle acceleration and not revving the engine too much. This is done by changing gears early for the first 1,500 – 1,800 km. This will increase the life of the engine.

The more you look after the engine when it is new, the more satisfied you will be with its performance in the future.

Do not exceed the following road speeds during running in period.

STARTING AND DRIVING

Gear	Diesel	Petrol
	Speed (kmph)	Speed (kmph)
1	15	20
2	30	35
3	50	55
4	65	75
5	85	95

Avoid heavy loads, e.g. driving at full throttle, during this period. Change gears judiciously.


(i) NOTE

Avoid excessive revving up of engine rpm. Do not keep engine at idling for long duration.

SEAT ADJUSTMENTS

Front Seat Adjustments (option 1)

Following seat adjustments can be carried out manually

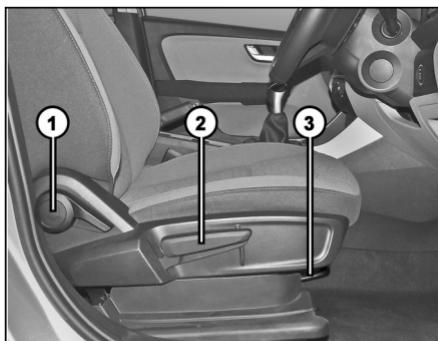

1. Seat backrest recliner adjustment lever
2. Seat height adjustment lever
3. Seat forward / rearward adjustment lever

⚠ WARNING

Do not adjust the driver's seat while driving. Adjusting the seat while driving

could cause the driver to lose control of the vehicle.

Seat Backrest Angle Adjustment

To change the seat back rest angle, lean forward slightly and pull up the lever (1). Adjust seat backrest until it reaches desired comfortable position. Make sure that lever returns to its original position and seat is securely latched.

(i) NOTE

Adjust the seat backrest until your arms are slightly angled when holding the steering wheel

⚠ WARNING

Do not travel in a moving vehicle with the seat backrest in an excessively reclined position as this can be dangerous.

Seat Height Adjustment (if equipped)

To raise the seat, pull and continue pumping the lever (2) in the upward direction

until the seat is at the desired height.

To lower the seat, pump the lever downward until the seat is at desired height.

Seat Forward/Rearward adjustment


Lift lever (3) and slide the seat forward or to the rear. Release lever and make sure that seat is securely latched.

(i) NOTE

Adjust the driver seat position in such a way that the driver will be able to operate the control pedals comfortably.

Front Seat Adjustments (option 2)

Following seat adjustments can be carried out manually.

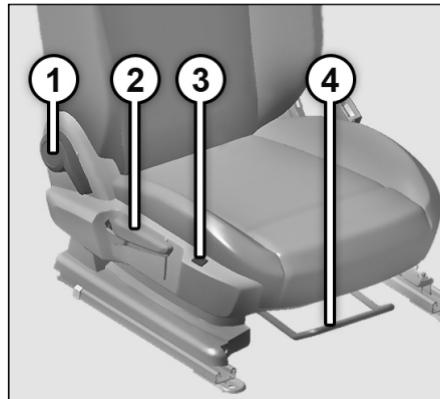

1. Seat backrest recliner adjustment lever
2. Seat height adjustment lever
3. Seat Ventilation
4. Seat forward / rearward adjustment lever

⚠ WARNING

Do not adjust the driver's seat while driving. Adjusting the seat while driving could cause the driver to lose control of the vehicle.

Seat Backrest Angle Adjustment

To change the seat back rest angle, lean forward slightly and pull up the lever (1). Adjust seat backrest until it reaches desired comfortable position. Make sure that lever returns to its original position and seat is securely latched.

(i) NOTE

Adjust the seat backrest until your arms are slightly angled when holding the steering wheel

⚠ WARNING

Do not travel in a moving vehicle with the seat backrest in an excessively reclined position as this can be dangerous.

STARTING AND DRIVING

Seat Height Adjustment (if equipped)

To raise the seat, pull and continue pumping the lever (2) in the upward direction until the seat is at the desired height.


To lower the seat, pump the lever downward until the seat is at desired height.

Seat Ventilation (if Equipped)

To start ventilation, press button (3) once. It's has 3 ventilation adjustment in decreasing order and LED glows for each press. To stop the ventilation long press button (3) for few seconds

Default setting is highest speed on first press

The ventilated seat by default is set to OFF whenever the ENGINE START/STOP button is turned on.

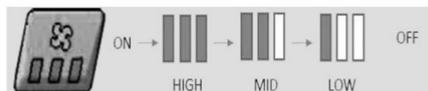

NOTE

Do not apply excessive force on ventilation button as it may get damaged. Button operates with slight finger force as they are electronically controlled

To Protect Ventilated Seats-

- Use the air ventilation seat ONLY when the vehicle HVAC system is ON.
- Never use alcohol based liquids to clean the Seats as it may damage the leatherette material.
- Avoid spillage of liquids on the ventilated seats surface this may lead to blockage of ventilated seat system and may not function properly.
- Do not add seat covers, as it will not allow ventilated seats to function properly.
- Do not keep plastic covers of seat as it is, as it will not allow ventilated seats to function properly.

Seat Forward/rearward Adjustment

Lift lever (4) and slide the seat forward or

to the rear. Release lever and make sure that seat is securely latched.

NOTE

Adjust the driver seat position in such a way that the driver will be able to operate the control pedals comfortably.

Front Passenger Seat Sensor

An occupant detection sensor is installed in the front passenger seat to detect whether the seat is occupied or not and if occupied, it will activate the seat belt reminder warnings. The sensor does not have any control on the deployment of airbags.

WARNING

Any modification in the seat material or addition of seat cover may damage or affect the performance of the sensor.

Rear Seats



Rear Seat Folding (Complete seat 100%)



To fold the seat:

- Press the backrest release knobs provided on both sides at the same time.



- Fold the backrest seat forward. Move the driver and front passenger seat forward if necessary.

STARTING AND DRIVING



WARNING

- If the rear bench seat and seat backrest are not latched properly, they could fold forwards during hard braking or in the event of a collision.
- The vehicle occupant would thereby be pushed into the seat belt by the rear bench seat or by the seat backrest. The seat belt can no longer offer the intended level of protection and could even cause injuries.
- Objects or loads in the trunk cannot be restrained by the seat backrest.

There is an increased risk of injury.

- Before every trip, make sure that the seat backrests and the rear bench seat/rear seat are engaged and securely latched.

REAR VIEW MIRRORS

Inside Rear View Mirror (IRVM)

To adjust the mirror move the mirror up, down or sideways manually to obtain the best rear view.

When you drive at night, set the selector tab to select anti-glare mode (if available) to reduce glare from the headlights of vehicles behind you.



NOTE

Use antiglare position only when necessary, as it reduces rear view clarity.

Outer Rear View Mirrors (ORVM)

You can adjust the outer rear view mirrors manually (By hand) or remotely by knob. Adjust the outside rear view mirrors to desired position.

NOTE

Objects visible in mirror are actually closer than they appear. Always make sure of the actual distance from the road users traveling behind by glancing over your shoulder.

Motorized ORVM Adjustment (if equipped)

The switch to adjust the motorized mirrors is located on the driver's door. You can adjust the mirrors when the ignition switch is in the "ACC" or "ON" position.

To Adjust The Mirrors:

1. Move the mirror selection switch to L (for left side) and R (for right side) to select the mirror you wish to adjust.
2. Use the four positions of the knob to adjust the rear view mirrors to required position.

**Manual ORVM Adjustment (if equipped)**

STARTING AND DRIVING

You can adjust the outer rear view mirrors manually.

⚠️ WARNING

Do not adjust the mirror while driving. Adjusting the mirror while driving could cause the driver to lose control of the vehicle.

ORVM FOLDING (If equipped)

Option 1: Manual Folding

ORVMs can be folded or unfolded manually. This is applicable only for vehicles which are not equipped with motorized folding provision.

Option 2: Auto Folding by Smart Key



When you lock the vehicle, ORVMs will be folded automatically.

When you unlock the vehicle, ORVMs will be unfolded automatically.

In case of repeated usage, Mirror Folding/Unfolding will stop functioning and will

be re-activated after delay of 2 mins. During that period avoid repeated pressing of Switch.

Option 3: Auto Folding by Knob



To fold / unfold the ORVMs, keep the Selector switch in center position (i.e. neither 'L' nor 'R' position) and then toggle down. This will operate when the ignition switch is in the "ACC" or "ON" position.

SUN VISORS (if equipped)



The sun visors can be pulled down to block the glare coming through the windshield.

To block the glare from side windows, pull down the sun visor and release it from retainer. Swing the sun visor to the side.

Vanity Mirror (if equipped)

Vanity mirror is provided on the back of the front passenger side sun visor.

ELECTRIC POWER ASSISTED STEERING (EPAS)

Your vehicle is equipped with electric power assisted steering system. The EPAS system makes steering the vehicle easier with less effort.

In EPAS system, the steering effort becomes heavier as the vehicle speed increases and becomes lighter as the vehicle speed decreases for better control of the vehicle at different vehicle speeds.

If the engine is 'OFF' or if the EPAS system becomes inoperative, the vehicle still can be steered with more steering effort.

This EPAS system is available with the following assist features

1. Speed sensitive assist control
2. Active return control

ⓘ NOTE

- *A click noise may be heard from the EPAS relay after the ignition switch is turned ON or OFF position.*

- *The steering wheel may not un-lock normally in some cases when ignition key turned 'ON' or 'ISS' button pressed. If this happens, turn the steering wheel to the right or left slightly to unlock the steering wheel while turning the ignition key or pressing ISS button.*
- *Contact the nearest TATA authorized service center if in case of the above scenarios.*

⚠ WARNING


Below are the symptoms of the system malfunction. Then, take your vehicle to the nearest TATA MO-TORS service center and have the EPAS system checked as soon as possible.

- The EPAS warning light does not illuminate.
- Engine noise may be heard when the vehicle is driven at low speeds.
- If the EPAS system does not operate normally, the warning light ⚡!

STARTING AND DRIVING

will illuminate on the instrument cluster. The steering wheel rotation may become difficult to control or operate.

STEERING WHEEL ADJUSTMENT

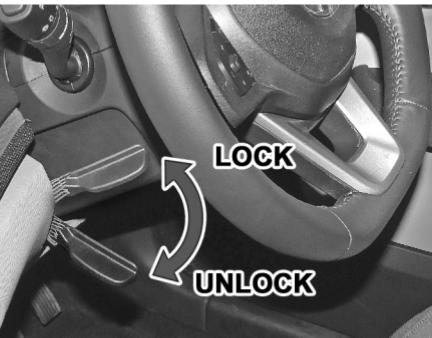

You can adjust the steering wheel position to suit your convenience.

The release lever is located offset to the steering column.

To Adjust the Steering Wheel

1. Adjust the seat to a comfortable position.
2. Push "Tilt lever" completely down to unlock the steering column.
3. Adjust the steering wheel to the desired position.
4. Pull release lever up completely to lock

the steering column.

5. Make sure that steering wheel is securely locked by checking up and down direction.

NOTE

When adjusting the steering wheel, make sure that:

- You can operate control pedals without any obstacles.
- You can see all the displays in the instrument cluster clearly.

WARNING

Before you start the car, make sure the steering wheel position is locked. Do not unlock or adjust the steering wheel while the vehicle is in motion.

NOTE

- *The steering effort can suddenly increase, if the operation of the EPAS system is stopped to prevent serious accidents when it detects mal*

function of the EPAS system during self-diagnosis.

- When steering for a prolonged period, the steering effort will increase to prevent overheating and damage to the steering system.*

STEERING LOCK AND IGNITION SWITCH (if equipped)



The ignition switch has the following four positions:

LOCK - This is the normal parking position. Key from lock can be re-moved in this position only.

“LOCK” position prevents normal use of the steering wheel after the key is removed.

To release the steering lock, put the key in the slot and turn it clockwise to one click (ACC).

ACC - Accessories such as the infotainment system can be operated, but the engine remains ‘OFF’. Steering gets unlocked.

ON - This is the normal operating position. All electrical systems are ‘ON’.

START - Turn the key further clock-wise to the START position, (spring loaded) to start the engine. As soon as the engine starts, release the ignition key, which returns to ON position. While cranking, all accessories will be momentarily ‘OFF’.

Illuminated Key Ring (if equipped)

When the vehicle is unlocked, the illuminated key ring glows. This helps to locate ignition switch in the dark.

STARTING AND DRIVING

STARTING AND STOPPING (without PEPS)

Starting the Engine

Make sure that parking brake is engaged and vehicle is in neutral gear.

Press the clutch pedal fully and crank the engine. Do not press the accelerator pedal when starting the engine.

NOTE

The Starter protection system fitted in this vehicle does not allow you to crank the engine  until you fully press the clutch pedal.

Release the key as soon as the engine starts. Repeat if engine does not start.

NOTE

- The Starter protection system switches off the starter when it is continuously cranked for more than 10 secs. In such a case, get the key back to 'OFF' position & wait for 30*

secs.

- For vehicle equipped with turbocharger, after you start the engine, run the engine at idle speed for 30 seconds. Do not press accelerator pedal while starting the engine to avoid damage to the turbocharger.*

the engine. Before switching off the engine, run the engine at idle speed for 30 seconds and then switch off. This will allow the engine oil to lubricate the turbocharger, till its speed is fully reduced and also allow the unit to cool down.

Starting Off

To start off, press the clutch pedal fully and shift into 1st gear.

After releasing the parking brake, gradually release the clutch and slowly press the accelerator.

NOTE

When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and affect smooth shifting.

Stopping the Vehicle

For vehicle equipped with turbo-charger, turn the key to 'ACC' position to switch off

⚠ WARNING

- Do not switch off the ignition while driving.
- For vehicle equipped with turbocharger, do not switch the engine off when it is running at high speed. This will lead to premature turbocharger bearing wear.
- If you switch off the ignition while driving, safety-relevant functions are only available with limitations, or not at all. This could affect the power steering and the brake boosting effect. You will require considerably more effort to steer and brake. There is a risk of an accident.

**STARTING AND STOPPING (PEPS)
(if equipped)****Engine Passive Start/stop**

Start/Stop switch is provided on the dashboard towards the right side of steering wheel.

Start Stop Button

The start/stop button or Push to Start Button is a main component of Passive (Engine) Start and Stop system. It is used to control ACC, IGN outputs as well as to start and stop the engine.

 ⓘ NOTE

- If smart key is inside the vehicle and on pressing start stop switch, if start stop switch green LED blinks more than 10 sec. duration then contact authorized TATA MOTORS dealer.
- If ESCL (Electronic Column Steering Lock) is not unlocked properly, then vehicle doesn't go into ACC mode.

Backup Start

To start the engine when smart key battery voltage is low, the user needs to press start/stop button two times with an interval of 2.5 seconds after pressing the clutch with valid smart key near immobilizer antenna (in Centre Console).



Emergency Start

If the engine is switched from ON to OFF and start/stop button is pressed with clutch pressed within 5 seconds, engine gets cranked.

NOTE

If ESCL (Electronic Column Steering Lock) is not unlocked properly, then Engine will not get cranked.

ENGINE PASSIVE START - CONDITIONS

Single Press Start

1. Bring the smart key with you and sit in the driver seat.
2. Press the clutch pedal and then press the start/stop switch.
3. Green colour LED on start/stop button will turn ON.
4. Once engine is started successfully, the green colour LED on start/stop button stays ON.

Two Step Start

Step 1

1. Have the smart key with you and sit on the driver's seat.
2. Press the start/stop button without pressing clutch pedal.
3. Amber colour LED on start/stop switch turns ON.
4. Engine will remain OFF and all electrical equipment and infotainment system can be used. Steering is unlocked.

Step 2

1. Press the clutch pedal and then press start/stop button to start the engine.
2. Green colour LED on start/stop button will turn ON.
3. Once engine start successfully, green colour LED on start/stop switch will remain ON.

Three Step Start

Step 1

1. Have the smart key with you and sit on the driver's seat.
2. Press the start/stop button without pressing clutch pedal.
3. Amber colour LED on start/stop button will turn ON.
4. Limited information will be displayed on instrument cluster and steering will be unlocked. Engine remains OFF.

Step 2

1. Press the start/stop button without pressing clutch pedal again.
2. Green colour LED on start/stop button will turn ON.

3. Engine will remain OFF but all electrical equipment and infotainment system can be used.

Step 3

1. Press the clutch pedal and then press start/stop button to start the engine.
2. Green colour LED on start/stop button will turn ON.
3. Once the engine is started successfully, the green colour LED on start/stop button stays ON.

ENGINE PASSIVE STOP - CONDITIONS

Single Press Stop

- IGN is ON and engine is running.
- Press the start/stop button with or without clutch.
- ACC and IGN turns OFF.
- LED on start/stop switch turns OFF.

Single Long Press Stop

- IGN is ON and engine is running.
- Vehicle is in running condition i.e. wheel rpm >10 RPM or wheel sensor faulty.
- Press the start/stop button for more than three seconds.
- IGN returns OFF, ACC remains ON.
- Amber colour LED on start/stop switch turns ON.

ing any door handle switch and if PEPS detects that the smart key is left inside the vehicle, an audio warning/ chime is sounded.

⚠ WARNING

When vehicle is in OFF mode (ACC, IGN and Crank OFF) and user tries to lock the vehicle from outside by press

STARTING AND DRIVING

GEAR SHIFTING

Option I:



Option II (If equipped):



The gearshift pattern is as shown on the gear lever knob. Gear shifting should always be done with the clutch pedal fully pressed.

NOTE

- *Gear recommendation is displayed when the clutch pedal is fully released.*
- *If "F" is displayed in DIS of instrument cluster, it means 'Fault' condition. Contact TATA MOTORS Authorized Dealer/Service Center.*
- *Press the clutch fully when gear shifting. The reverse gear should be engaged only when the vehicle is stationary.*
- *Use the clutch only to shift gears and do not use it when vehicle is stationary on a slope, as the car will roll down due to gravity.*
- *If all doors are closed when the vehicle is in ACC/IGN/RUN mode and if PEPS does not detect the smart key inside the car, then an audio*

warning is given.

- *Do not rest your hand on the shift lever during driving; Pressure transmitted from your hand may result in premature wear of the transaxle internal gear shift mechanism.*

Dual Clutch Transmission (if equipped)



The Dual Clutch Transmission has 6 forward and one reverse gear. The individual gears are selected automatically, depending on position of gear shift lever.

Starting Off

To start off, switch ON ignition switch and crank the engine, depress the brake pedal fully and release the parking brake. Press the shift lock button on the knob of gear selector lever and move the lever from Parking (P) mode to Drive (D) mode.

Park (P)

Use Park (P) position when starting the engine or parking the vehicle. Apply the parking brake whenever the vehicle is to be parked.



The selector lever must be engaged in Park (P) position only when the vehicle is stationary. DO not engage Parking Position (P) in running condition.

If engaged while the vehicle is in motion it may severely damage the transmission.

Before leaving the driver's seat, always make sure the shift lever is in the P (Park) position; then apply parking brake fully and shut the engine off. If this is not followed, Unexpected and sudden vehicle movement can occur.

Reverse (R)

This position puts the transmission in reverse gear when engaged in stationary condition with brake pedal fully pressed.



The selector shall never be moved into reverse while driving forward.

NOTE

If Shifter lever put in Reverse at Ignition ON then Instrument Cluster will show "R", this indicates the Shifter Lever provision to user. In this case - Infotainment Display will not show rear camera View as vehicle will not be in reverse.

Neutral (N)

The transmission is in Neutral position.



It enables the engine to start and operate without driving the vehicle.

Drive Mode (D)

This position is for normal driving conditions for maximum efficiency and fuel




economy. It should be used as often as possible.

To move the selector to D mode; press the Shift lock button in the handle of the selector lever and at the same time press the brake pedal fully.

Manual/sport Mode (M/S)

This display shows vehicle is in Manual/Sport mode.

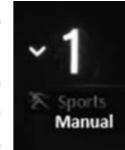

This position allows the driver to switch to activate Manual mode to select gears like a manual gearbox.

Pressing the shift lever towards left side while in Drive mode will put the transmission in Manual mode.

The gear selector moves freely between the Manual (M) and Drive (D) positions. As soon as shifter is moved forward or backward, the Manual (M) mode is activated.

It is possible to shift from D mode to Manual mode and vice versa at any time during driving.

To return back to Manual mode if it has been selected; move the selector lever to

STARTING AND DRIVING

Drive mode (by tapping the lever towards right) and engage it again to M mode.

If Manual mode is selected, 1st gear must be used for moving off from stationary condition.

In sports mode, only the 6 forward gears can be selected. To reverse or park the vehicle, move the shift lever to the R (Reverse) or P (Park) mode as required.

‘+’ For Upshifting in Manual mode

Push the gearshift lever to the “+” direction and release it. Every time the lever is operated, upshifting takes place one step at a time in the order of 1st > 2nd > 3rd > 4th > 5th > 6th gear.

‘-’ For Downshifting in Manual mode

Pull the gearshift lever to the “-” direction and release it. Every time the lever is operated, downshifting takes place in the order 6th > 5th > 4th > 3rd > 2nd > 1st gear.

In Manual/sports mode, downshifts are made automatically when the vehicle slows down. 1st gear is automatically selected when the vehicle stops.

In Manual/sports mode, when the engine

rpm approaches the intended limits, upshift will be made automatically by varying the shift points.

NOTE

- *Transmission Control Unit may disallow incorrect manual shift command by user and a message ‘Driver Control Shift denied’ is displayed on Instrument Cluster.*
- *In order to protect the engine, the transmission will automatically upshift to prevent engine over-revving OR downshift to prevent engine stalling at certain specified engine rpm limits.*
- *The first few shifts on a new vehicle, maybe somewhat abrupt after TCU replacement or software updation. This is normal condition. Shifting sequence will get adjusted after few shift cycle by TCU (Transmission Control Unit).*

Shift Lever - Manually Unlock Process



When vehicle is in ON condition and shift lever is locked/cannot be moved from P (park) mode to other mode with the brake pedal depressed, below steps to be followed:

1. Apply the parking brake first
2. Carefully squeeze & remove the below (1) by pulling it in upward direction as shown in area by arrows
3. Press & hold the release button provided on shifter housing till you move the shift lever from P (park) mode to other mode by simultaneously press-

ing the knob button (2)

4. Carefully insert the bellow lugs & snap fit in console cutout highlighted as dotted area
5. Ensure the system is inspected by authorized dealer or service partner

STARTING AND DRIVING

Automatic Gear Shifter Lever Movement and Conditions

Lever Position Movement	Driver Intervention For Shift	
	Brake Pedal	Driver Shift
	P ->>R	
	R->>N	Not required
	N->>D	Not required
	D->>M/S	Not required
	M/S->>D	Not required

STARTING AND DRIVING

Lever Position Movement	Driver Intervention For Shift		
	Brake Pedal	Driver Shift	
	D->N	Not required	Not required
	N->R	Not required	
	R->P	Not required	



Brake Pedal Pressed



Shifter Lever Knob Pressed

NOTE

- *Before engaging in any mode (P-R-N-D), Apply brake first then knob button to be pressed for safety reason.*
- *Before selecting the 'M' mode (manual mode), Ensure shift lever is placed in D mode first. Then engage M mode smoothly & vice versa. This sequence to be followed to ensure safety of system.*

WARNING

- To avoid damage of transmission, do not accelerate the engine in R (Reverse) or any forward gear positions with the brakes ON.
- When stopped on an incline roads, Use the service brake or the parking brake, do not hold the vehicle stationary with engine power.
- Do not shift from N (Neutral) or P (Park) into D (Drive), or R (Reverse) when the engine is above idle rpm.
- Always shift the gears inline in sequence of (P-R-N-D). Do not try to shifts abruptly.

Shift Lock System

For your safety, the Dual Clutch Transmission has a shift lock system which prevents shifting the transmission from P (Park) into R (Reverse) unless the brake pedal is depressed.

To shift the transmission from P (Park) into R (Reverse):

1. Press and hold the brake pedal.
2. Start the engine or turn the ignition switch to the ON position.
3. Move the shift lever to R mode.

(i) NOTE

If the brake pedal is repeatedly depressed and released with the shift lever in the P (Park) position, noise may be heard. This is a normal condition.

Key Interlock System for DCT

1. For Mechanical Lockset

Shift the GSL to P position and then switch OFF Ignition and take out the key.

2. For PEPS

Shift GSL to P position and then only Ignition will be switched else vehicle will move to accessory on till GSL is moved to P position.

(i) NOTE

If the Brake pedal is repeatedly depressed and released slowly with the shift Lever in R (Reverse) position, noise may be heard. This is a normal condition.

WARNING

Always depress the brake pedal fully, before and while shifting out of the P (Park) mode into another position. This is to avoid unintended motion of the vehicle which could injure the passengers inside or around the vehicle.

(i) NOTE

Good Driving Practices (DCT)

- *Never move the shift lever from P (Park) or N (Neutral) to any other position with the accelerator pedal*

depressed.

- *Never move the shift lever into P (Park) when the vehicle is in motion.*
- *Be ensure the vehicle is completely stopped before shifting into R (Reverse) or D (Drive).*
- *Always use the parking brake. Do not depend on placing the transmission in P (Park) to keep the vehicle from moving.*
- *Optimum vehicle performance and fuel economy is obtained by smoothly depressing and releasing the accelerator pedal.*

STARTING AND DRIVING

REVERSE GEAR

To engage reverse gear, shift to reverse position as shown on the gear lever knob.



DRIVING

Climbing Sharp Gradients on Loose Surfaces

Start off smoothly in a suitable gear. Accelerate smoothly so that there is no loss of traction by over-revving of the engine.

Choose a smooth slope and select the appropriate gear so that gear changing in the middle of the climb is not required.

Changing gears in the middle of the climb can cause loss of momentum and engine stalling. Shifting to lower gear has to be done cautiously to avoid loss of traction.

Under no conditions should the vehicle be moved diagonally across a hill. The danger is in loss of traction and side-ways slippage, possibly resulting in toppling over. If unavoidable, choose a mild angle and keep the vehicle moving.

If the tyres start to slip within few feet at the end of the climb, keep the vehicle stable by steering left and right. It gives increased grip to the tyres.

If the vehicle stalls or losses headway while climbing a steep hill, make a quick

shift to reverse and allow the vehicle to move back with the help of engine braking.

Descending Sharp Gradients

Depending on the severity of the gradient, shift into appropriate gear. Use engine braking judiciously without over-revving the engine.

Brake gently in such situations.

WARNING

When descending on sharp gradients, do not turn the ignition key to the 'OFF' position. The braking assist and steering assist may malfunction and the emission control system may be damaged.

STARTING the ENGINE

Make sure that parking brake is engaged and vehicle is in neutral gear.

Press the clutch pedal fully and crank the engine. Do not press the accelerator pedal when starting the engine.

Release the key as soon as the engine starts. Repeat if engine does not start.

WARNING

The engine emits poisonous exhaust gases such as carbon monoxide. Inhal-
ing these exhaust gases leads to poi-
soning. There is a risk of serious health
problems. Therefore, never leave the
engine running in enclosed spaces
without sufficient ventilation.

NOTE

*The engine emits poisonous exhaust
gases such as carbon monoxide. Inhal-
ing these exhaust gases leads to poi-
soning. There is a risk of serious health
problems. Therefore, never leave the
engine running in enclosed spaces*

without sufficient ventilation.

BRAKING

Your vehicle has vacuum assisted brakes.

The distance needed to bring the vehicle to a halt increases with the speed of the vehicle. Start applying brake anticipating the distance and slow down gradually.

WARNING

- Do not use the brake pedal as a footrest.
- If you rest your foot on the brake pedal while driving, the braking system can overheat and cause fading of brake pads. This the stopping distance and can even cause the braking system to fail. There is a risk of an accident.
- Do not press the brake pedal and the accelerator pedal at the same time.

If you have driven for a long time in heavy rain without braking, there may be a delayed reaction from the brakes when you brake for the first time. This may also occur after the vehicle has been washed.

STARTING AND DRIVING

Brake performance may become poor and unpredictable if brakes are wet.

After you drive through water or if you wash the underside of the vehicle, test the brakes at slow speeds to see if the brakes work fine. If the brakes are less effective than normal, dry them by repeatedly applying the brakes at slow speeds until the brakes have regained their normal effectiveness.

Check traffic conditions before doing the above activity.

Braking on Downhill Gradients

When you drive on downhill slopes, reduce the load on the brakes by shifting to a lower gear. This is called as engine braking and aids to reduce overheating and wear of brakes.

⚠ WARNING

- Do not shift to lower gears on a slippery road surface to increase the engine's braking effect. By doing so, the tyres could lose their grip.
- There is an increased danger of skidding and accidents.

DRIVE MODE (If equipped)



Drive mode selection switch

These modes can be used to adjust engine characteristics and vehicle performance in line with desired requirement.

Drive mode selection switch is provided on center console for activation.

According to engine type the car is equipped with 'City' (Default) and 'Eco'.

City is being default mode in each ignition cycle.

Variant wise applicable drive modes are as below:

Engine	Mode 1 (default)	Mode 2
Diesel	City	ECO
Petrol (NG NA)	City	ECO
Petrol (NG TC)	Sport (Default)	

Drive Mode	Performance
CITY	Increased engine Torque and Power output for BALANCED performance
ECO	Optimum engine Torque and Power output for FUEL EFFICIENT performance
SPORT	Driver can use maximum torque from engine.

CENTER LOCK UNLOCK (If equipped)



All the doors can be lock and unlock from inside the vehicle by pressing this switch.



(i) NOTE

Ensure that all doors are closed while using the center locking switch.

CURRENT GEAR INDICATION

The Driver Information display (DIS) in the Instrument Cluster indicates the current gear position engaged. **2** or **3**

STARTING AND DRIVING

GEAR RECOMMENDATION

Up or down arrow will be displayed in DIS, recommending whenever gear should be shifted to up or down




IDLE STOP START (ISS) (if equipped)



Idle Stop Start system is a Green Environment initiative.

Your vehicle is equipped with fuel saving ISS feature to shut off the engine to conserve fuel and emit less carbon dioxide.

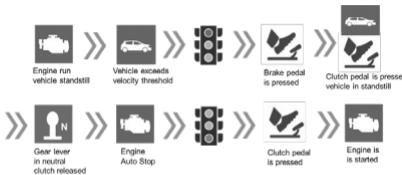

ISS function

Working

Starting the vehicle initially will be by conventional method (key start or push button start). When the vehicle is stationary and engine is idle (in a traffic light, traffic jam, toll gate, etc.) it will turn-off automatically. When the clutch pedal is pressed, the engine will restart automatically. Engine may also restart automatically without Clutch pedal press due to other preconditions which are captured below.

Sequence Of Function

1. Vehicle started through Ignition key or Push button switch.
2. Vehicle is in standstill and Engine is running.
3. Vehicle moves forward and exceeds speed threshold values.
4. When vehicle is to be stopped (scenario: Red signal), press the brake and then, press the clutch. The vehicle comes to a halt. Shift the gear to neutral and release the clutch. Engine will be automatically stopped.

- When you want to move (Scenario: Green signal), Press Clutch pedal to start.
- Engine will automatically start when Clutch is pressed fully.

This system enables the ISS functions automatically when Ignition is turned ON. If you do not want to use this feature, you can switch it off by pressing the ISS OFF switch provided in the vehicle.



Following Conditions Will Prevent ISS Function Standby not Enabled

- Engine hood (bonnet) is open
- Reverse Gear is engaged.
- Outside temperature is too low or too high
- Battery system is unhealthy.
- Engine coolant temperature is too low

- Driver presence is not detected (Seat belt is not fastened)
- Driver door is open
- Any system fault

Warning light will be displayed on the instrument cluster to indicate the healthy status of this function.

Special Feature of Automatic Restart

This system is equipped with a special feature of Automatic Restart. Under certain conditions, the Engine will automatically restart on its own in order to meet your Safety and Comfort requirements.

This can occur especially when the vehicle is standstill and following conditions occurred,

- Battery is being discharged too low.
- Vehicle started rolling forwards/ backwards
- Brake has been pressed repeatedly for several times/brake Pressure too low
- When the Cabin temperature is too hot/too cold
- Defrost button is pressed

NOTE

- Your vehicle is equipped with ISS function which may automatically Stop and Restart the engine. Do not panic and follow the messages on the display to understand the event.*
- Use an alternator that has been approved by TATA MOTORS. Otherwise your ISS function may not work. Contact nearest TATA MOTORS authorized dealer for alternator replacement.*
- ISS will be available only when driver's seat belt is fastened at all times.*
- Use a battery that has been approved by TATA MOTORS. Otherwise your ISS function may not work as intended. Contact nearest TATA MOTORS authorised dealer for battery replacement or any issues in battery.*
- ISS function may not be active when the Safety (Example: Seat Belt) and Comfort (Example: AC in*

STARTING AND DRIVING

high demand) conditions are not met. Do not panic and follow the messages on the display to understand the event.

- Do not remove the Battery Sensor from Battery. Removal of Battery sensor will result loss of function. Function will be automatically restored when the vehicle is parked for a period of three hours.*
- In the event of traffic, ISS function may work with delay in auto-stop which is intended logic.*
- Use a battery sensor that has been approved by TATA MOTORS. Otherwise your ISS function may not work as intended. Contact nearest TATA MOTORS authorized dealer for battery sensor replacement.*
- Engine will be automatically started again when the following safety conditions are met: driver presence, gear in neutral, bonnet and doors should be closed. In case if any of these criteria are not met, a mes-*

sage will pop-up on the screen to indicate the user to start the car manually.

- To fill up fuel, the engine must be stopped by turning OFF the ignition key / ISS button.*
- Switch the engine off before you perform any operation in the engine compartment.*

Frequently Asked Questions

1. What are the advantages of this feature?

This feature helps to reduce the fuel consumption, CO₂ emission by automatically shutting down the Engine when the Vehicle is in standstill conditions like traffic signal, Traffic jam, etc.

2. When the Vehicle is in Engine Idle stop start Phase, how can I start the Vehicle to move?

Simply press the Clutch fully down to Start the Vehicle. No need to use Key / Push Start Switch.

3. Can I start the Engine only by press-

ing the Clutch Pedal for the first time when I enter in Vehicle?

No. Always the first start has to be through Ignition Key or Push button.

4. How can I activate / deactivate this feature?

This feature will be active as default when Ignition is ON. If you wish to switch it OFF, press the ISS switch.

5. Whether AC will work when the Engine is in Idle stop start mode?

No. AC function will not be available when the Engine is in Idle stop start mode. Only Blower will be functional.

6. How to start the Engine if feeling too hot / too cold when Engine is in Idle stop start mode?

In the event of higher temperature difference, Engine will automatically restart without any user input. As an alternate user can start the Vehicle by pressing the Clutch pedal fully.

7. What will happen If press the Clutch continuously in traffic signals?

System will not shut down the Engine automatically when the Clutch is pressed continuously.

8. Whether I am allowed to crank the Vehicle normally when the system is in Idle stop start mode?

Yes. You can perform the normal cranking by switching off and Switch ON the Ignition Key / Push button.

9. Whether the vehicle will stop and restart when the Vehicle in Gear condition?

No. Idle Stop and Start function will not work when the Gear level is not in Neutral.

Smart Alternator Management

Smart Alternator management (applicable if equipped with Intelligent Alternator Control feature) – a Green Environment initiative.

Your vehicle is equipped with fuel saving smart alternator management system to recuperate the brake energy to charge the Battery to help conserve fuel, CO2.

Working

When the Vehicle is running, if the acceleration demand is higher than threshold, smart alternator management system will allow the Battery discharge to reduce the load on the Engine.

When the Vehicle is in deceleration and the accelerator demand is lower than threshold, smart alternator management system recuperates the brake energy and charges the Battery.

Battery discharge and charge behavior is dynamic behavior during the Vehicle running.

Following Conditions Will Prevent Smart Alternator Function Standby/not Enabled

- Head Lamp ON (Low / High)
- Battery System is unhealthy
- Any System fault.



Alternator function

STARTING AND DRIVING

Frequently Asked Questions

1. What are the advantages of this feature?

This feature helps to reduce the fuel consumption, CO₂ emission by balancing the Battery discharge and charge during the Vehicle running.

2. Do I need to adjust my driving pattern to enable this function?

No. This smart function will automatically perform this smart alternator function and adjust to your driving pattern.

3. Is there any issue to my Battery charging due to this function when I follow aggressive driving cycle?

No. This smart function is capable enough to manage the Battery charging according to your drive cycle.

4. Do I see any variation in my head lamp performance when the Battery charge / discharge behavior which is dynamic?

No. This smart function will accommodate the charge / discharge behavior according to the head lamp status.

5. Do I see any perceivable variation in my system function when this function executed?

No. This smart function won't create any functional issue to the vehicle system. You may see some difference in air flow of blower when it is in higher speed when this function is active. But this won't affect the quality of the vehicle function.

PARKING BRAKE

Mechanical parking brake acting on the rear wheels is provided on the vehicle.



Parking brake applied

To apply the parking brake, pull the lever up fully. The parking brake tell-tale light comes on in the instrument cluster.



Parking brake released

To release it, pull the lever up slightly, press the release button and push the lever down. The parking brake tell-tale in the instrument cluster will turn 'OFF' when the lever is fully released.

① NOTE

Apply the parking brake properly before leaving the vehicle and release it before moving.

VEHICLE PARKING

- Park the vehicle in a safe place. Switch on the indicator signal before turning to park.
- Apply the parking brake.
- Make sure that all window glasses are closed and all lamps are turned 'OFF'.
- At night, put on the parking lights if required.
- Remove the key from the ignition switch and lock the vehicle.
- Use wheel chocks if the vehicle is parked on a slope.

① NOTE

When parking on a downhill gradient, place the gear lever in 'Reverse' position. While parking on uphill gradient, place the gear lever in the '1st' position.

⚠ WARNING

Never leave children unsupervised in the parked vehicle. They could also operate the vehicle's equipment. There is

a risk of an accident and injury.

① NOTE


Do not use parking brake for braking unless unavoidable circumstances like when service brake is not working properly. The braking distance is considerably longer and the wheels could lock. There is an increased danger of skidding and accidents.

STARTING AND DRIVING

REVERSE PARK ASSIST WITH SENSOR (if equipped)

Reverse Park Assist system is an electronic parking aid that will assist you to park your vehicle safely when in reverse gear mode. It provides audio and visual information through the vehicle's infotainment system.

Always look out for kids, pets and elderly people behind the vehicle before reversing.

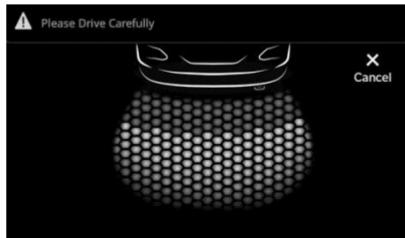

There are ultrasonic sensors placed on the rear bumper. Number of sensors may vary depending on the variant.

Once the system is activated, the sensors will detect how near the obstacle is from the bumper, and this information is would

be displayed on the vehicle's infotainment system. In base variants, only audio warning shall be given through a buzzer.

When the Reverse Park Assist system activated, an audio will be heard for the first two seconds to indicate that the system is working fine. After that, system will resume its usual function. If no audio warning is heard for first two seconds, it means that RPAS system is faulty. Please take the vehicle to your nearest TATA MOTORS authorized service center.

Approximate Distance From Bumper (in Cm)	Tone Information
25-40	Continuous Beep
41-80	Fast Beep
81-120	Slow Beep

Variant where infotainment display is not present and audio warning is given through a buzzer, on activating the Reverse Park Assist system, a tone will be played within first two seconds to indicate the proper functioning of the system. After these two seconds, normal functioning of the system will continue. If no tone is heard for first two seconds, it shall mean that RPAS system is faulty. The owner should, in that case, go to the nearest dealer for rectification.

⚠ WARNING
Due to ultrasonic sensor technology limitation, detection of obstacles from 0-25 cm is not guaranteed.

Park Assist Indications

In case reverse park assist system malfunctions, the following message may appear on the infotainment screen.

Reason for this fault may be

- Park Assist Controller / Body Control Module Failure"
- Sensor Malfunction
- Partner components such as Infotainment music system, Instrument Cluster failure.



Reverse Park Assist Limitations

Reverse Park Assist system is not a collision avoiding system. It is solely the driver's responsibility to park the vehicle safely.

Reverse Park Assist feature works on ultra sound echo technology, due to which performance is not guaranteed in following scenarios:

- If the object has a sharp edge surface, where surface may divert echoes from sensor reception.
- If object is mesh fence made up of thin wires, where echoes can't be given by the surface.
- Fast moving objects passes in the sensor's field of detection, where echoes are not processed by the system.
- If object is made/covered by foam or sponge or snow where ultrasonic sound signals are absorbed.
- Objects close to the rear bumper can go undetected by the Reverse Park Assist's field of detection. Driver should use extreme caution while

parking the vehicle.

- If height of the bumper is changed due to alteration to the suspension or other causes
- If the sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
- If Sensors are covered by a hand, sticker, accessory, etc.
- If ultrasonic noise is present around Vehicle due to other vehicle sensors, horn, engine, air braking system (large vehicles), Exhaust Fans, Wireless transmitters or mobile phones
- If the vehicle speed exceeds 10kmph, the system will not warn you even though objects are detected, error message 'Vehicle Speed is high, drive slowly!' will appear.
- Driving on uneven road surfaces e.g. Gravel, unpaved roads, Artificial Speed Breakers, or gradient.

STARTING AND DRIVING

⚠ WARNING

Due to any reason, if the sensor gets misaligned or loses its intended fitment position, contact your dealer for refitment.

ⓘ NOTE

Turning the ignition 'OFF' while the park assist feature is active would disable it.

Reverse Park Assist System Preventive Maintenance

- Regularly clean the sensors and keep them free from dust, ice, mud, water, chewing gum etc. for proper working of the system. Use a smooth cloth for cleaning.
- Do not use water at high pressure for cleaning the sensor or camera.
- Do not cover the sensors surface with any additional fitment. This will interrupt park assist performance.

REAR VIEW CAMERA (if equipped)

Option I:



Display screen

Option II:





Display Screen

Rear View Camera is a visual reverse guiding system. When reversing or parking, make sure that there are no persons, animals or objects in the area where you are reversing.

Activation

This system will start, if reverse gear is engaged, or park assist button (if available) is pressed or manual activation is done through Infotainment screen.


Deactivation

System will stop, if reverse gear is disengaged, or park assist button (if available)

is pressed.

If started through infotainment, the system can be stopped using a cross button on infotainment screen.

Understanding Guidelines Indication

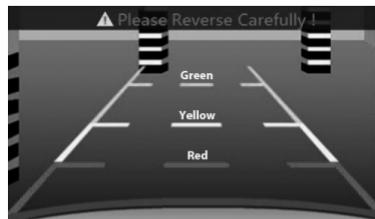

Green Line

You can safely reverse the vehicle, but be cautious if objects fall in this zone.

Yellow Line

You have to take utmost care if objects fall in this zone. However, the objects may not hit vehicle.

Red Line

Red line indicates that you have to stop reversing the vehicle. If you still go backwards, the car will hit the obstacle.

Do's and Don't

- Do not use camera when tailgate is open. If tailgate is open, visual information may not be the actual rear view of the vehicle & system will warn with message 'Tail Gate Open, Please close.'
- When the camera is operated under fluorescent lights, sodium light or mercury light etc., illuminated areas on the lens may appear to flicker in the display.
- Do not attach any advertisement or styling or any kind of stickers on top of camera. If this happens, camera cannot provide you the visual image and it may damage the camera.
- Do not add any accessory, which will cause blockage to the camera's field of view.

STARTING AND DRIVING

Cleaning Camera

1. Due to environmental reasons like snow, dust, mud or fog may accumulate on the camera lens. So regularly clean the camera lens.
2. Use water to clean the camera lens. Do not use extreme cold or hot water. Rapid changes in temperature may brittle the camera lens. Do not apply High Pressure water for cleaning.
3. Wipe the camera lens with soft cloth.
4. Do not use hard cloth or material to wipe the camera lens. This will cause scratches on the camera, and leads to deteriorated visual image on the display.
5. Do not apply organic solvent, car wax, window cleaner or glass coat to clean the camera. If this is applied, wipe it off as soon as possible.
6. Do not apply heavy force on lens, while cleaning.
7. Do not remove mud, snow on the camera lens using stick or hard material. Use normal water and soft cloth.

⚠️ WARNING

- The camera uses fish eye lens. So the size of the objects or in the display may differ from the actual size and distance. In low light conditions, the screen may darken or image may appear faint.
- If the tire sizes are changed, the position of the fixed guidelines displayed on the screen may change.
- During rainy conditions, image may get obscured. In such conditions, do not depend on camera view. The camera used in the vehicle, may not reproduce the same color of the real object.
- In case of damage of the rear portion of the vehicle, camera position may change. Which causes wrong visual information on display. In case of damage, make sure that, camera is fitted properly at the intended location.
- In case of uneven road conditions or up-hill or downhill conditions, do not

depend on rear view camera park aid.



- Do not apply any kind of force on the camera.
- Always use rear View mirrors along with Rear View Camera for confirming the safety of the rear and the surrounding conditions.
- High humidity and variation in ambient temperature may result into condensation inside the camera lens, which may further result into degradation of camera video feed on the screen. It is recommended that not to rely on camera video feed for parking assistance in such scenario. This phenomenon is temporary and will be automatically recovered with reduction in humidity and less variation in ambient temperature.
- The area displayed by the rear view camera is limited. The camera does not display objects that are close to or below the bumper, underneath the vehicle, or objects out of the

camera's field of view. The area displayed on the screen may vary according to vehicle orientation or road conditions.

Rear View Camera System Precautions

Area Displayed on Screen

The rear view camera system displays an image of the view from the bumper of the rear area of the vehicle.

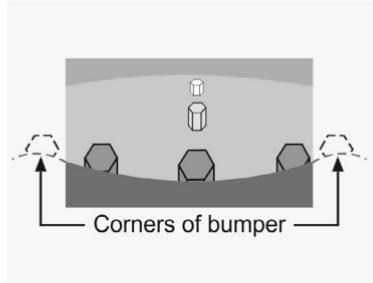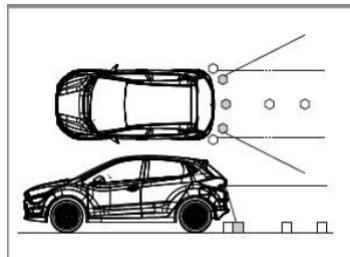


The area displayed on the screen may vary according to vehicle orientation conditions.

Objects, which are close to either corner of the bumper or under the bumper, cannot be seen on the screen.




The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance. The camera may not display items that are located higher than the camera's field of view.

STARTING AND DRIVING

When Sharp Up Gradient Behind the Vehicle

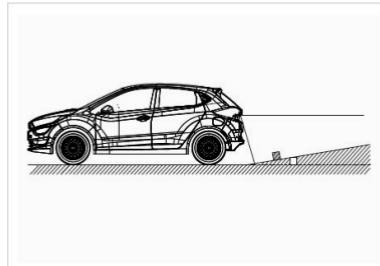

When Sharp Down Gradient Behind the Vehicle

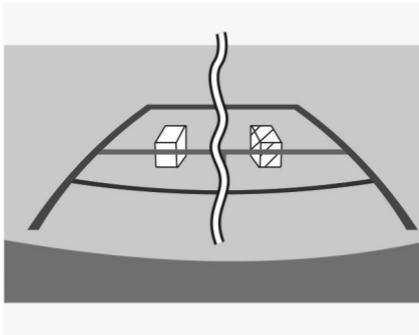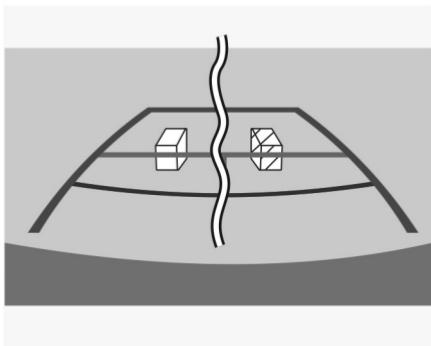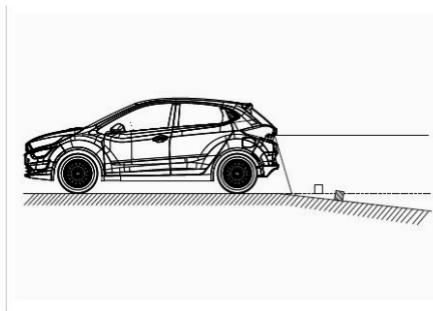


(i) NOTE

The distance guidelines will appear to be further from the vehicle than the actual distance.

Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

When Any Part of the Vehicle Sags

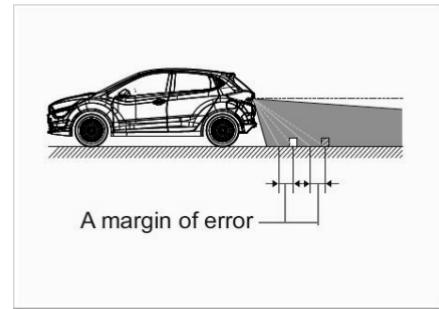



When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error

between the fixed guide lines on the screen and the actual distance/course on the road.

When Approaching Three-dimensional Objects



The distance guidelines are displayed according to flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the distance guidelines. When approaching a three-dimensional object.

a. Distance guideline

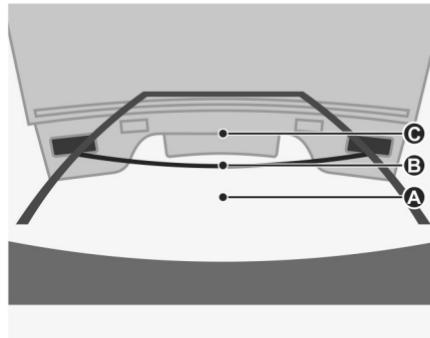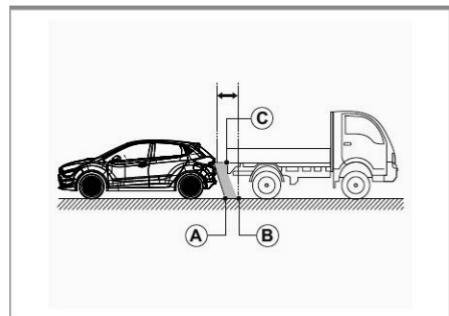

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parked at point B. However, in reality if you back up to point A, you will hit the truck. On the screen, it appears that A is closest and C is furthest away. However, in reality, the distance to A and C is the same, and B is further away from A and C.

b. Vehicle width guidelines

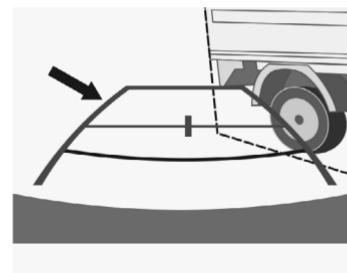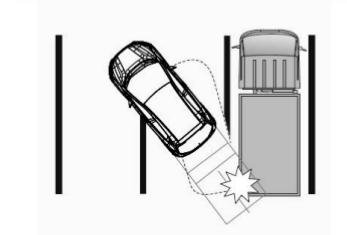

Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the vehicle width guidelines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may

STARTING AND DRIVING

actually cross over the vehicle width guidelines. In reality if you back up as guided by the vehicle width guidelines, the vehicle may hit the truck.

SURROUND VIEW SYSTEM (SVS) (If equipped)

Surround view system displays the surroundings around the vehicle to the driver for safe and comfortable drive.

SVS assists the driver while reversing and maneuvering the vehicle at lower speeds.

Camera Locations As Shown In The Images




Front Camera



Left Side Camera



Right Side Camera

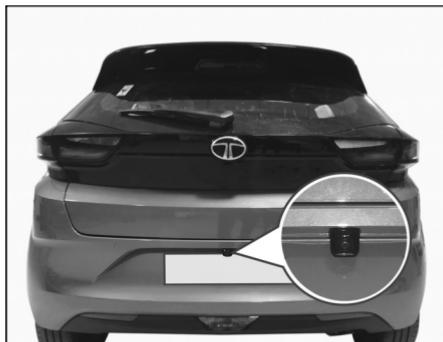

Rear Camera


Activation of SVS

The function is activated when:

1. Surround view hard switch is pressed



2. Surround view soft switch is pressed from infotainment screen

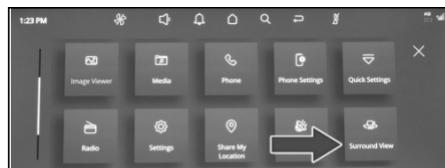

3. The shift lever is in D (Drive), N (Neu-

tral) or R (Reverse) and vehicle speed is under 17 kmph and surround view switch is pressed.

4. Engage the reverse gear and vehicle speed is below 17 kmph.

Deactivation of SVS

SVS function is deactivated when one of the following step is performed.

1. Surround view switch is pressed again
2. Vehicle speed is more than 17 kmph
3. Disengage the reverse gear

(i) NOTE

- When vehicle speed is more than 17 kmph, the SVS function will turn off. The function will not automatically turn on again, even though vehicle speed gets below 17 kmph. Press the switch again, to turn on the function.
- When vehicle speed is more than 17 Kmph SVS screen will be switch to only rear view during reverse gear.

STARTING AND DRIVING

- During vehicle speed is more than 17 Kmph and driver activate SVS switch, rear view shall display to user.

Surround View System Features

The Surround view system has the following features

1. 2D View
2. 3D View
3. Front Corner View
4. Rear Corner View
5. Full View
6. Settings
7. Cancel Icon

2D View

By selecting 2D Icon which is available on the right corner side of the infotainment screen, cameras provide about 360 degree 2D top view of vehicle's surrounding.

In 2D top view mode 4 camera icons will be present around the model car image to switch to different sides of view. The different 2D views are as follows.


- I. 2D Top view + Front view
- II. 2D Top view + Rear view
- III. 2D Top view + Left view
- IV. 2D Top view + Right view



2D Top + Front view



2D Top + Right view

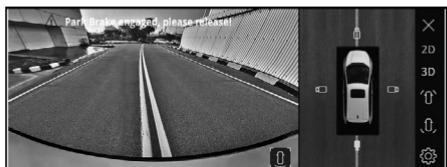

2D Top + Rear view



2D Top + Left view

3D View

By selecting 3D Icon, cameras provide about 360 degree 3D view of vehicle's surrounding on the Infotainment screen

In 3D mode view 8 camera icons will be present around the model car image to switch to different angle of view.



3D view with 8 different views

Front Corner View

If driver wants to focus on the front corner view, then the icon can be pressed to select the view.

By selecting front corner view icon, camera provides a focused view on the front left and right corners to provide a better visibility for safe maneuver.



Fig 3. Front corner view

Rear Corner View

If driver wants to focus on the rear corner view, then the icon can be pressed to select the view.

By selecting rear corner view icon, camera provides a focused view on the rear left and right corners to provide a better visibility for safe maneuver.



Fig 4. Rear corner view

Full View

I. 2D Full front view

STARTING AND DRIVING

By selecting 2D front view Icon which is available on the model car image, cameras provides about wide 2D front view of vehicle's surrounding on the Infotainment screen.

Press full view button to view front objects closer and press the same button to go back to the normal 2D front view.



2D Full Front view

II. 2D Full Rear view

By selecting 2D rear view Icon which is available on the model car image, cameras provides about wide 2D view of vehicle's surrounding on the Infotainment screen.

Press full view button to view rear objects closer and press the same button to go back to the normal 2D rear view.



2D Full Rear View

III. 2D Full Left view

By selecting 2D left view Icon which is available on the model car image, cameras provides about wide 2D view of vehicle's surrounding on the Infotainment screen.

Press full view button to view left objects closer and press the same button to go back to the normal 2D left view.



2D Full left view

IV. 2D Full Right view

By selecting 2D right view Icon which is

available on the model car image, cameras provides about wide 2D view of vehicle's surrounding on the Infotainment screen.


Press full view button to view right objects closer and press the same button to go back to the normal 2D right view.




2D Full Right view

Settings


- By selecting the settings icon available on the infotainment screen, driver can change the settings as required.
- User can change the content settings based on the user choice.
- User can change the front and rear default view to any of the view i.e., either normal view or top view

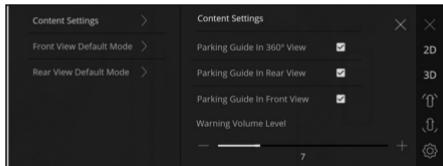

SVS content settings

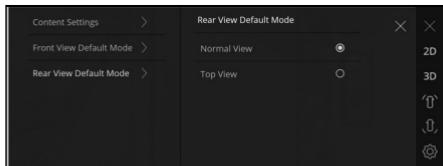

SVS front view default mode settings

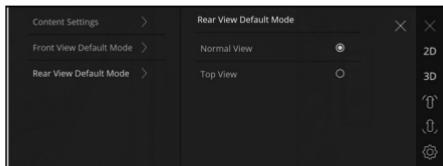

SVS rear view default mode settings

Cancel Icon

By selecting the cancel icon which is available on the top right corner of the infotainment screen, user can exit from the surround view system function.

It can be used for all the SVS features such as 2D, 3D, front & rear corner views.

It cannot be visible when vehicle gear state is reverse gear.




Understanding Guidelines Indication Static Guidelines



Red Line

Indicates, if rear objects are in this colored zone, you have to stop the vehicle and not allowed to go backward. If you still go backward, your vehicle will hit the object.

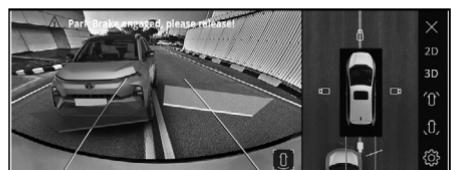


Yellow Line

Indicates, if rear objects are in this colored zone, you have to take utmost care. However, objects fall in this zone, may not hit vehicle.


Dynamic Guidelines

STARTING AND DRIVING

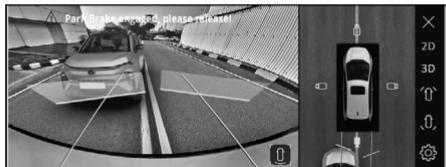

Green Line

Indicates, if rear object is in this colored zone, you have to be cautious. Still you can go backward safely.

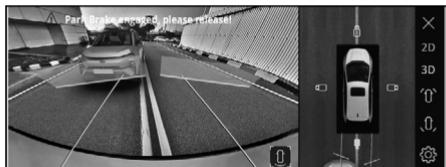

PDC Guidelines Settings

User can change the timer settings for PDC guidelines which is available on the infotainment display

By selecting the infotainment settings icon available on the infotainment screen user able to open the settings options available in the system.




The system will display the below screen when user select the settings icon. Select the driver assistance icon which is available on the screen.



In driver assistance system will provide many other options in that user should select the park assist delay timer. System will provide three different option such as 0sec, 5 sec and 10sec.

Based on the user choice he/she can select any option from the three.

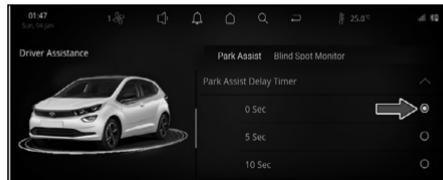


Blind View Monitor

Blind view monitor will help to reduce the crashes that happens when driver is being overtaken or changing the lanes.

This system should work in ignition on and run condition irrespective of the vehicle speed.

We can enable/disable the blind view monitor in HMI settings based on the user choice.

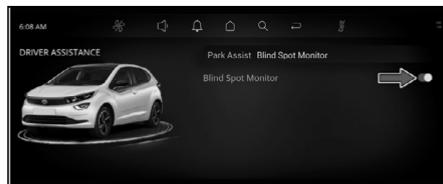

Activation Of Blind View Monitor

- This feature is activated when user

- turn on the left/right turn indicator.
- On activating the right turn indicator, right side rear view should be displayed on the infotainment along with static overlays.



Right rear side view when turn on the right indicator

- On activating the left turn indicator, left side rear view should be displayed on infotainment along with the static overlays.



Left rear side view when turn on the left indicator

ⓘ NOTE

The above images are for reference purpose only.

Deactivation Of Blind View Monitor

- This feature is deactivated when user turn off the left/right turn indicator.

Understanding Static Overlays Indication

Red Line: Indicates, if rear objects are behind this colored line, you are not allowed to change the lane. If you still change the lane, your vehicle will hit the object.

Yellow Line: Indicates, if rear objects are behind this colored line, you have to take utmost care. However, objects fall in this zone, may not hit vehicle.

Green Line: Indicates, if rear object is behind this colored line, you have to be cautious. Still you can safely change the lane.

ⓘ NOTE

- When SVS is in active condition then user turn on the left/right turn*

indicator then system should display the blind view monitoring and if user turn off the turn indicator then system return back to the SVS screen.

- When SVS is not in active condition, user turn on the left/right turn indicator then system should display the blind view monitoring. Once user turn off the turn indicator then system return back to infotainment home screen.*

Camera Precautions

⚠ WARNING

- As the camera is, IP protected, do not detach, disassemble or modify in any manner from the actual position. This will show required visual information in display.
- Do not use camera when tailgate is open. If tailgate is open, visual information may not be the actual rear view of the vehicle & system will warn with message 'Tail Gate Open,

STARTING AND DRIVING

Please close.

- Do not use camera when driver/pas-senger door is open. If any one of the door is open, visual information may not be the actual view of the vehicle & system will warn with mes-sage 'Door Open, Please close'. And also corresponding door side display shall be in dark image.
- Do not use camera when ORVM is folded. If ORVM is folded, visual infor-mation may not be the actual view of the vehicle & system will warn with message 'ORVM Folded'.
- When the camera is operated under fluorescent lights, sodium light or mercury light etc., illuminated areas on the lens may appear to flicker in the display.
- Do not attach any advertisement or styling or any kind of stickers on top of camera. If this happens, camera cannot provide you the visual image and may damage camera.
- Do not add any accessory, which will obstruct camera field of view.

Cleaning Camera

1. Due to environmental reasons, dust, mud or fog may accumulate on the camera lens. So regularly clean the camera lens.
2. Use water to clean the camera lens. Do not use extreme cold or hot water. Rapid changes in temperature may brittle the camera lens. Do not apply High Pressure water for cleaning.
3. Wipe the camera lens with soft cloth.
4. Do not use hard cloth or material to wipe the camera lens. This will cause scratches on the camera, and leads to deteriorated visual image on the display.
5. Do not apply organic solvent, car wax, window cleaner or glass coat to clean the camera. This may damage the lens
6. Do not use chemical solvents such as strong detergents containing high alka-line or volatile organic solvents (gaso-line, acetone etc). This may damage the camera lens

7. Do not apply heavy force on lens, while cleaning.
8. Do not remove mud, snow on the cam-ERA lens using stick or hard material. Use normal water and soft cloth.

WARNING

- The camera uses fish eye lens. So the size of the objects or in the dis-play may differ from the actual size and distances in low light condi-tions, the screen may darken or image may appear faint.
- If the tyre sizes are changed, the po-sition of the fixed guidelines dis-played on the screen may change.
- During rainy conditions, image may get obscured. In such conditions, do not depend on camera view.
- The camera used in the vehicle, may not reproduce the same color of the real object.
-

- Do not apply any kind of force on the camera.
- High humidity and variation in ambient temperature may result into condensation inside the camera lens, which may further result into degradation of camera video feed on the screen. It is recommended that not to rely on camera video feed for parking assistance in such scenario. This phenomenon is temporary and will be automatically recovered with reduction in humidity and less variation in ambient temperature.
- The area displayed by the camera is limited. The camera does not display objects that are close to or below the bumper, underneath the vehicle, or objects out of the camera's field of view. The area displayed on the screen may vary according to vehicle orientation or road conditions.

WARNING

SVS system is an aid only. User need to check surrounding for safety.

EMERGENCY EQUIPMENT

You should be familiar with the location of the emergency equipment provided in the vehicle and how to use it.

Do a check of this equipment periodically and make sure that they are in proper working condition and stowed at their locations.

First Aid Kit

The first aid kit is kept inside the glove box compartment.

The kit contains items that can be used in case of minor injuries only.

(i) NOTE

Examine contents of the first aid kit periodically and replenish consumed or expired items.

Tool Kit, Tow Hook, Jack and Spare Wheel

Tool kit and Jack are accommodated in Tool bag located in the rear boot.




- Jack handle
- Tow hook
- Wheel spanner
- Jack

(i) NOTE

The jack should be used only to change wheels. It is important to read the instructions in this section before attempting to use the jack.

Advance Warning Triangle

An advance warning triangle is kept in the luggage compartment beside the spare wheel.

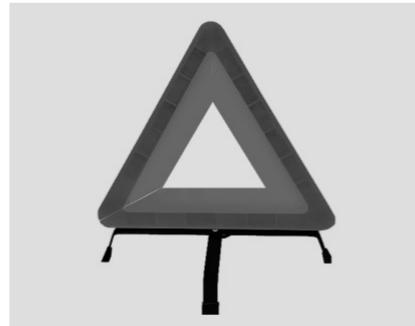

Use advance warning triangle to warn the approaching traffic in case of vehicle break-down or during emergency, where your vehicle could become a potential traffic hazard.

Keep the warning triangle at an approximate distance of 50-150 m behind your vehicle in the same lane of traffic. The reflecting side of the triangle should face the oncoming traffic and it should be free from

EMERGENCY AND BREAKDOWN ASSISTANCE

any obstacles.


Remove the advance warning triangle carefully from the bag and assemble. Refer instructions given on the bag.

NOTE

After using the warning triangle tie it firmly and keep it inside the bag to avoid rattling noise.

Hazard Warning Switch

Press the hazard warning switch to activate the hazard warning. All the turn signal lamps will flash simultaneously. To turn OFF, press the switch again.

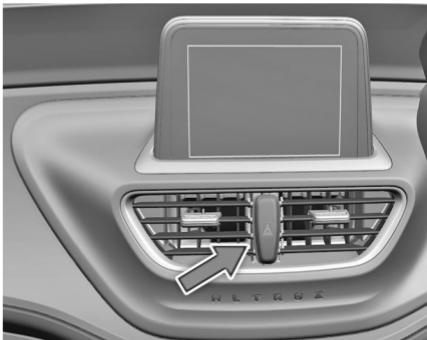

Use the hazard warning to warn the traffic during emergency parking or when your vehicle could otherwise become a traffic hazard.


The hazard warning lamps can operate even if the ignition is switched off.

SPARE WHEEL REMOVAL PROCESS

- To access the spare wheel, lift the carpet up.



- After lifting, hold the carpet to access the spare wheel.
- Take out the advance warning triangle kept beside the spare wheel.
- Take out the Tool kit bag along with contents.

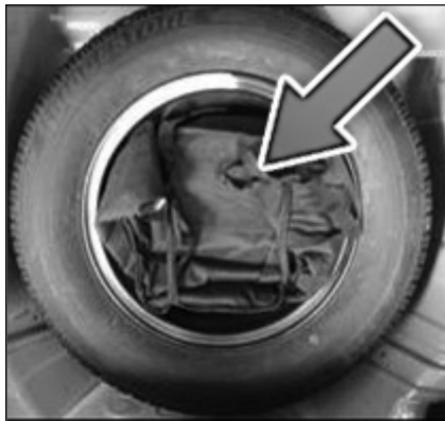

- To remove the spare wheel, unscrew and remove the retaining bolt.



IN CASE OF FLAT TYRE

- Reduce vehicle speed gradually, Avoid sudden steering movement or braking.
- Pay attention to the traffic conditions as you do so.
- Switch on the hazard warning lamps.
- If possible, bring the front wheels into the straight-ahead position.
- Stop the vehicle on solid, non-slippery and level ground, as far away as possible from traffic.
- Set the parking brake firmly and shift into "R" (Reverse) gear.
- Switch off the engine.
- Secure the vehicle against rolling away.
- Keep advance warning triangle at a suitable distance behind the vehicle as an indication of breakdown.
- Close all the doors.
- Use the Jack on level, hard ground. Avoid changing the wheel on uphill and downhill slopes. Chock the wheels, if the deflated wheel needs to be

EMERGENCY AND BREAKDOWN ASSISTANCE

changed on slope / ghat area.

⚠ WARNING

If you drive with a flat tyre, there is a risk of the following hazards:

- A flat tyre affects the ability to steer or brake the vehicle.
- You could lose control of the vehicle.
- Continued driving with a flat tyre will permanently damage the tyre and cause excessive heat buildup and possibly a fire. There is a risk of an accident.

Changing Flat Tyre

Loosen the nuts (as indicated) on the wheel in diagonal sequence. Do not unscrew the nuts completely before raising the vehicle using the jack.




Wheel nut removal

ⓘ NOTE


- *The jack is designed only to raise and hold the vehicle for a short time while a wheel is being changed. It is not suited for performing maintenance work under the vehicle.*

- *Use the jack on level, hard ground. Avoid changing the wheel on uphill and downhill slopes. Chock the wheels, if the deflated wheel needs to be changed on slope / ghat area.*
- *Before raising the vehicle, secure it from rolling away by applying the parking brake.*
- *Do not use wooden blocks or similar objects as a jack underlay.*
- *Do not place your hands and feet or lie under the raised vehicle when it is supported by a jack.*
- *Do not run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.*
- *Do not open or close a door or the tailgate when the vehicle is raised.*

Jack Up Point Location on Vehicle

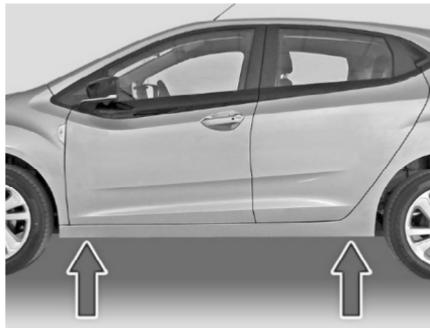

Jack up point location

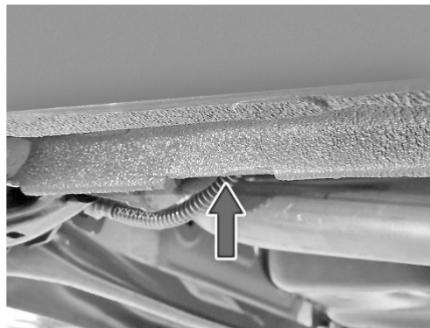

Jacking point location


WARNING

If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip over with the vehicle raised. There is a risk of injury. Also jack can be damaged.

Continue to raise the jack slowly and smoothly until the tyre clears the ground. Do not raise the vehicle more than required.



Lifting the front wheel using jack

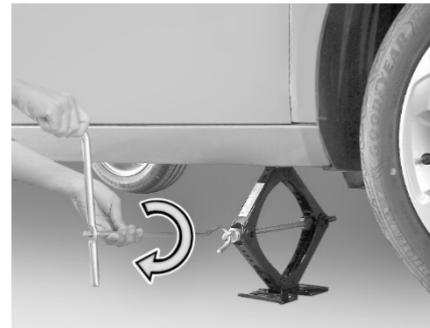

Lifting the rear wheel

Remove wheel nuts with the help of wheel spanner and take out flat tyre.

NOTE

Do not place wheel nuts in sand or on a dirty surface. Do not apply oil or grease on it.

Roll the spare wheel into position and align the holes in the wheel studs.

Tighten each nut by hand until the wheel is securely seated on the hub.

Lower the jack completely then tighten the wheel nuts one by one using wheel span-

EMERGENCY AND BREAKDOWN ASSISTANCE

ner.

Press fit the wheel cover back (if fitted).

Restore all the tools and jack at their respective locations.

Place the flat tyre at spare wheel location.

(i) NOTE

Do a check and correct the tyre pressure and wheel nuts tight-ness of the changed wheel at nearest authorised service station. Get the flat tyre repaired at the earliest

Place the jack only at recommended jacking locations.

JUMP STARTING YOUR CAR


For Diesel, Petrol NA & TC Non IAC/ISS Variants

Use only a battery of same rating & capacity to jump start your vehicle. Position the booster battery close to your vehicle so that the jump leads will reach both batteries.

When using a battery of another vehicle, do not let the vehicles touch. Apply the parking brake firmly and keep the gearshift lever in neutral.

Turn off all vehicle accessories, except those necessary for safety like hazard warning lamps.


If your vehicle is equipped with Battery sensor, then do not connect your jump start cable lead directly on the Sensor surface. Connect only on the negative cable surface as shown on the image. After jump start event, IAC function will be restored only when the Vehicle is parked in idle for 3-4 Hours.

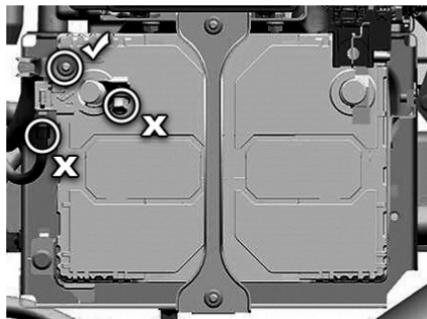

(For Diesel & Petrol)

Make jump lead connections as follows:

- Connect one end of the first jump lead to the positive (+) terminal of the discharged battery.
- Connect the other end to the positive (+) terminal of the booster battery.
- Connect one end of the second jump lead to the negative (-) terminal of the booster battery.
- Make the final connection (other end of the negative terminal) to an unpainted, heavy metal part (i.e. engine mounting stud/nut) of the vehicle of discharged battery.

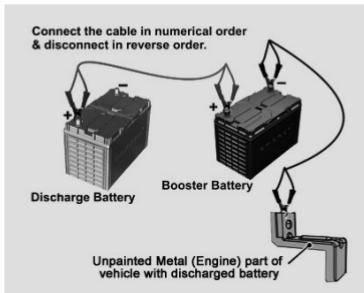

- Start the engine of the vehicle with the discharged battery.
- Before disconnecting the jumper cables, let the engine run for several minutes.
- If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- Remove the jump leads in the exact reverse order in which you connected them.

(i) NOTE

Do not disconnect the discharged battery from the vehicle.

WARNING

- Do not connect the jump lead directly to the negative (-) terminal of the discharged battery. This may lead to an explosion.
- Do not allow battery electrolyte to come in contact with eyes, skin, fabrics or painted surfaces. The fluid contains acid which can cause injury and severe damage. Wear protective apparel. Do not inhale any battery gases. Keep children away from batteries. In case if battery acid comes in contact with the skin, wash it off immediately with water and seek medical attention.
- During charging and jump-starting, explosive gases can escape from the battery. There is a risk of an explosion. Particularly avoid fire, open flames, creating sparks and smoking. Make sure that there is sufficient ventilation while charging and jump-starting. Do not lean over the battery.
- Make sure that the positive terminal of a connected battery does not come into contact with vehicle parts. Never place metal objects or tools on a battery.
- It is important that you observe the described order of the battery terminals when connecting and disconnecting a battery. If you are in doubt, seek assistance from qualified specialist workshop.
- Do not connect or disconnect the battery terminals while the engine is running.

For Petrol NA IAC/ISS Variants

Following method to be adopted while performing Battery disconnection for any service on Vehicle, Jump Start and external Battery charging.

EMERGENCY AND BREAKDOWN ASSISTANCE


- Always remove the Battery negative from Battery Sensor output side. Never remove the Battery Sensor directly from Battery. This will result Battery learning loss and this act will switch off the ISS function.
- While performing jump start, ensure that the jump start Battery negative terminal is connected to Battery Sensor output as shown below.
- While performing external charging, ensure that charging circuit ground is connected to Battery Sensor output as shown below.

- Use only authorized Battery
- Always disconnect the Battery sensor output for any service on vehicle

Don't

Do not remove the Battery sensor if it is not necessary.

- Do not mallet / hammer the Battery sensor to fix on Battery Pole.
- Do not place the Battery sensor on Positive Pole.
- Do not remove the Battery Sensor connector.

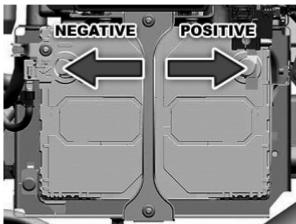

Do and Don't

Do

- Use only authorized Battery sensor.

TOWING



When towing a break down vehicle, certain precautions and procedures must be taken to prevent damage to the vehicle and/or components. Failure to use standard towing precautionary measures when lifting or towing a break down vehicle could result in an unsafe operating condition.

To correctly tow and prevent accidental damage to your vehicle, take help of a TATA MOTORS authorized dealer or a commercial tow-truck service.

(i) NOTE

Make sure that the parking brake is released; vehicle is in neutral and steering wheel is unlocked. The power steering functions only when engine is running. Hence, during towing the steering efforts will be more.

⚠ WARNING

- Do not get under your vehicle after it has been lifted by a tow truck.
- For towing a vehicle, the best way is to use a wrecker. Alternatively use a rigid tow bar.
- Switch 'ON' the hazard warning indicators of both the vehicles to warn other road users.
- Limit the speed to 20-30 kmph.
- In case of brake failure, use the parking brake to control the vehicle.
- Fasten the tow rope or tow bar at the towing eyes. Otherwise, the ve

hicle could be damaged.

- When towing, pull away slowly and smoothly. If the tractive power is too high, the vehicles could be damaged.

Recommended Towing

In case of break down, we recommend that your vehicle be towed with the driving wheels off the ground or place the vehicle on a flatbed truck as shown.

⚠ WARNING

- Do not tow your vehicle with the front wheels on the ground or four wheels on the ground (forward or backward), as this may cause serious damage to the transmission.
- When towing with the rear wheels on the ground or on towing dollies, place the ignition switch in the 'ACC' or 'ON' position, and secure the steering wheel in the straight-ahead position with a rope or similar device.



EMERGENCY AND BREAKDOWN ASSISTANCE

Tow Hook Fitment

- Open the tailgate and remove tow hook from the tool kit.



- Open the tow hook cover provided on the front bumper by pressing it at the bottom part and simultaneously pulling it at the top (as shown in fig).



- Screw in and tighten the tow hook in clockwise direction.
- After towing, remove the towing hook and press fit the cover properly.
- Place the towing hook in the vehicle tool kit.

NOTE

*During breakdown in DCT, User has to put the lever in Neutral (when Engine is OFF) + IGN ON for car to free roll.
In all other Gear lever positions auto park lock will be applied (Car can't be pushed to road side on 4 wheels).*


Towing to service station has to be done only with front 2 wheels lifted to avoid any damage to transmission.

EMERGENCY AND BREAKDOWN ASSISTANCE

FUSES

Your vehicle has fuse boxes at three locations.

The vehicles electrical circuits have fuses to protect the wiring from short circuits or sustained overload.

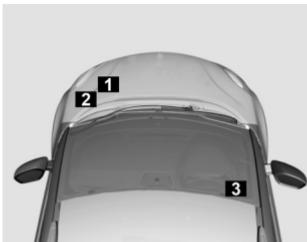

1. Battery Mounted Fuse Box.
2. Engine Compartment Fuse Box.
3. Cabin Compartment Fuse Box.


Checking and Replacing Fuses

If any electrical unit in your vehicle is not functioning, check the fuses first.

Please follow the steps below that will guide you to check and replace them.

- Apply parking brake

- Switch off all electrical accessories.
- Turn the ignition key to the 'LOCK' position.
- In the fuse box, identify the defective fuse from its melted wire.

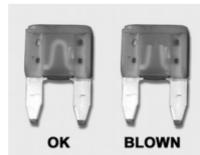

- Remove the defective fuse by "fuse puller". The fuse puller and spare fuses are provided in the engine compartment fuse box.
- Defective fuses must be replaced with fuses of same rating, which you can recognize by color and value.



(i) NOTE

Always make sure that the spare fuses are added.

- Make sure that all other fuses are pressed firmly in position.

- If a newly inserted fuse also blows, have the cause traced and rectified at nearest TATA MOTORS Authorized Dealer/Service Center immediately.

Battery Mounted Fuse Box (Diesel)

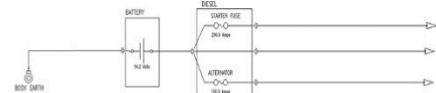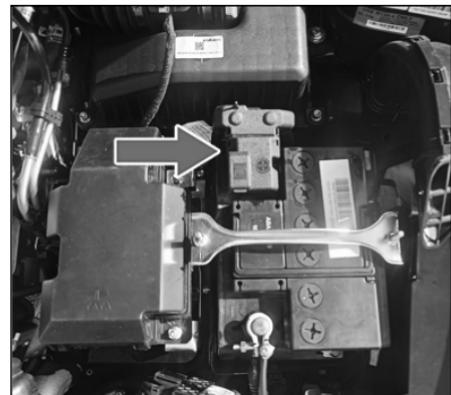


EMERGENCY AND BREAKDOWN ASSISTANCE



Fuse No	Function	Fuse Rating
PF1	Starter motor	200A

⚠ WARNING

If fuse box cover is removed for any reason, it should be refitted properly in its original position.

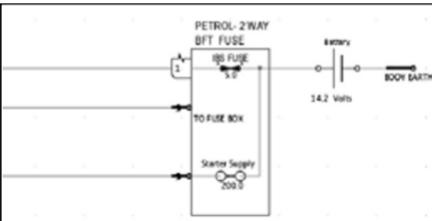


Battery Mounted Fuse Box (Petrol)

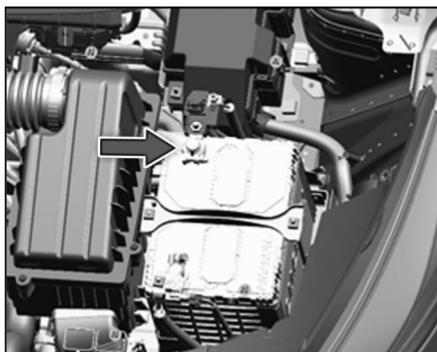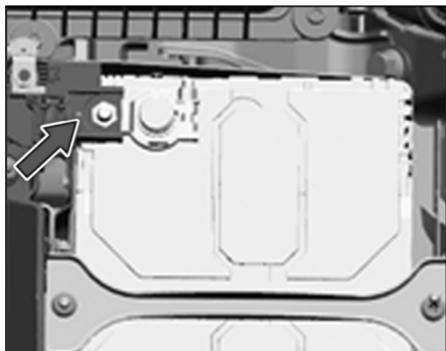

⚠ WARNING

If Fuse box cover is removed for any reason, it should be refitted properly in its original position.

Engine Compartment Fuse Box (diesel)

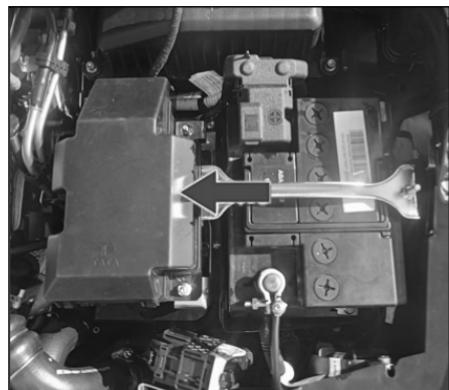


ⓘ NOTE

The fuse box layout is for reference purpose only. Please refer the sticker pro

EMERGENCY AND BREAKDOWN ASSISTANCE

vided inside the fuse box cover.

Fuses-engine Compartment (Diesel)

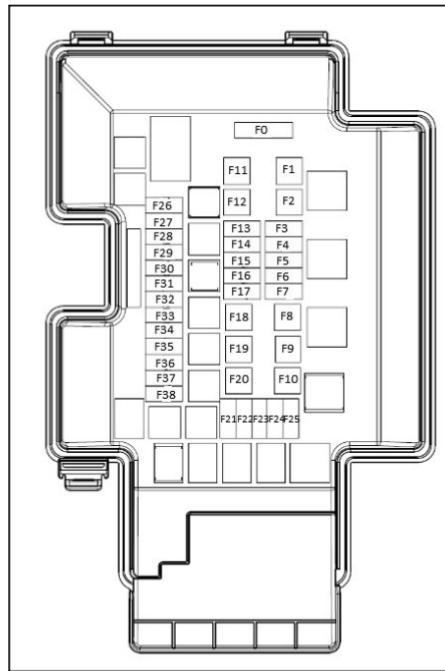

Fuse No	Function	Fuse Rating
F0	-	-
F1	COCKPIT F/B SUPPLY	60A
F2	RADIATOR FAN-1	40A
F3	STARTER SOLENOID BATT	25A
F4	HEAD LAMP HIGH BEAM	15A
F5	-	-
F6	-	-
F7	HEAD LAMP LOW BEAM	15A
F8	-	-
*F9	GLOW PLUG / DCT ECU	60A / 30A
F10	EPAS	60A
*F11	RADIATOR FAN-2	40A
F12	UNDER BONNET F/R BOX	50A
F13	EMS BATT	10A

Fuse No	Function	Fuse Rating
F14	COMPRESSOR	10A
F15	ABS ECU BATT	20A/25A
F16	HORN BATT	15A
F17	BRAKE LAMP BATT	10A
F18	ABS PUMP	40A
F19	INTERIOR F/B BATT	60A
F20	IGNITION LOAD	60A
F21	-	-
F22	-	-
F23	-	-
F24	ABS ECU IGNITION	5A
*F25	GLOW PLUG FB	5A
F26	-	-
F27	EMS RELAY COILS & SENSORS	15A
F28	EMS ECU SUPPLY	20A
F29	EMS INJ (Café Racer)	10A
F30	FRONT WIPER MOTOR	20A
F31	-	-



EMERGENCY AND BREAKDOWN ASSISTANCE

Fuse No	Function	Fuse Rating
F32	-	5A
*F33	-	-
F34	-	-
F35	REVERSE LAMPS/BRAKE SWITCH	10A
F36	-	-
F37	-	-
F38	-	-

Note:

* - if equipped

Fuses-engine Compartment (Petrol)

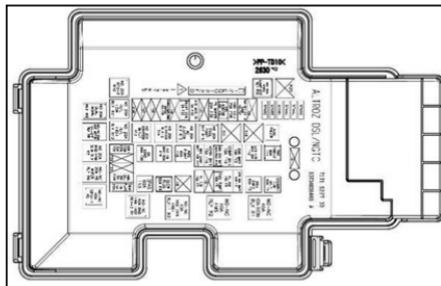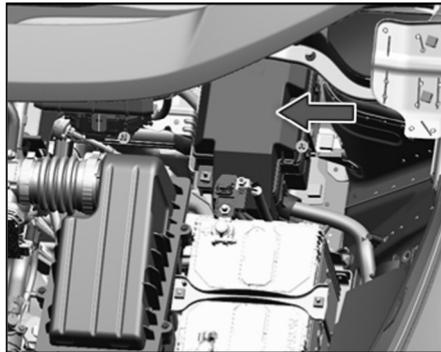

Fuse No	Function	Fuse Rating
F0	-	-
F1	COCKPIT F/B SUPPLY	60A
F2	RADIATOR FAN-1	40A
F3	STARTER SOLENOID BATT	25A
F4	HEAD LAMP HIGH BEAM (Café Racer)	15A
*F5	FUEL PUMP BATT	15A
F6	-	-
F7	HEAD LAMP LOW BEAM	15A
F8	-	-
*F9	GLOW PLUG / DCT ECU (Café Racer)	60A / 30A
F10	EPAS	60A
*F11	RADIATOR FAN-2	40A
F12	UNDER BONNET F/R BOX F/R BOX (Café Racer)	50A 60A

EMERGENCY AND BREAKDOWN ASSISTANCE

Fuse No	Function	Fuse Rating
F13	EMS BATT	10A
F14	COMPRESSOR	10A
F15	ABS ECU BATT	25A/25A
F16	HORN BATT	15A
F17	BRAKE LAMP BATT	10A
F18	ABS PUMP	40A
F19	INTERIOR F/B BATT	60A
F20	IGNITION LOAD	60A
*F21	IGNITION COIL	15A
F22	-	-
F23	-	-
F24	ABS ECU IGNITION	5A
*F25	DCT IGN	5A
F26	EMS CNG INJECTOR	10A
F27	EMS RELAY COILS & SENSORS	15A
F28	EMS ECU SUPPLY	20A
F29	EMS INJECTOR	10A
F30	FRONT WIPER MOTOR	20A

Fuse No	Function	Fuse Rating
F31	-	-
F32	STARTER MOTOR FEEDBACK	5A
*F33	-	-
*F34	CNG PRESSRE REGULATOR SOL	5A
F35	REVERSE LAMPS/BRAKE SWITCH	10A
F36	-	-
F37	-	-
F38	-	-

Note: * - if equipped

Cabin Compartment Fuse Box

Cover Removal Procedure

Fuse box is located inside the cover below steering column. To access the fuse box, remove cover as per procedure given below.

1. Fuse box cover is mounted on dash board with the help of lugs at the top and bottom of the cover from inside.




2. To remove the cover, gently pull the cover from upper side.

Re-fitment Procedure

Align bottom lugs and push upper part with


EMERGENCY AND BREAKDOWN ASSISTANCE

respective slots on dash board and press the cover firmly.

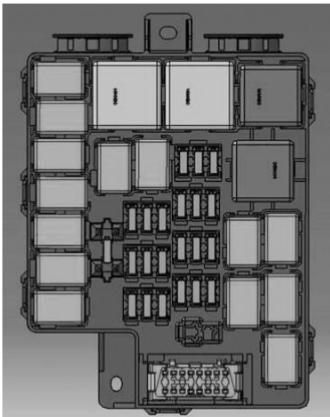

Cabin compartment fuse box

Fuse-cabin Compartment

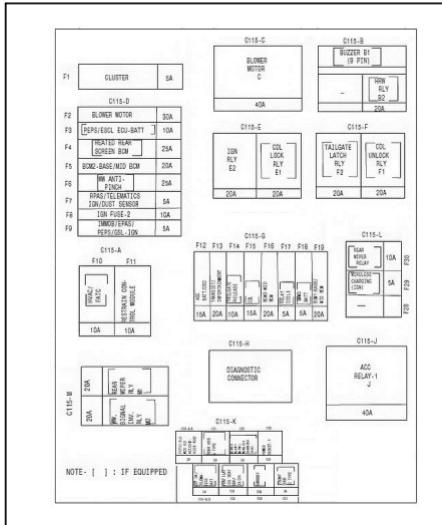

Fuse No	Function	Fuse Rating
F1	CLUSTER	5A
F2	BLOWER MOTOR	30A
F3	PEPS/ESCL ECU-BATT	10A

Fuse No	Function	Fuse Rating
F4	HEATED REAR SCREEN BCM	25A
F5	BCM2- MID BCM	20A
F6	WW ANTI-PINCH	25A
F7	RPAS/TELEMATICS/DUST SENSOR	5A
F8	IGN FUSE-2	10A
F9	IMMOB/EPAS/PEPS/GS L-IGN	5A
F10	HVAC/ETC/ FATC	10A
F11	RESTRAINTS CONTROL MODULE	10A
F12	ACC BATT/OBD	15A
F13	TRANSIST/INFOTAINMENT	20A
F14	TAILGATE RELEASE	10A
F15	CDL	15A
F16	BCM3-MID BCM	20A
F17	RELAY COILS	5A
F18	IMMOBILIZER BATT	5A

EMERGENCY AND BREAKDOWN ASSISTANCE

Fuse No	Function	Fuse Rating
F19	BCM1-MID BCM	20A
F20 B	PEPS/BLOWER RLY	5A
F20 A	ACCESSORIES FUSE	5A
F21	REAR USB A -TYPEF22	5A
F22	MIRROR ADJUST MOTOR/WIRELESS CHARGER(ACC)	5A
F23	POWER SOCKET-1	15A
F24 B	TELEMATICS BATT	5A
F24 A	KEY IN	5A
F25	NA	NA
F26	SUNROOF	20A
F27	FRONT USB C TYPE	5A
F28	NA	NA
F29	WIRELESS CHARGING (IGN)	5A
30	REAR WIPER RLY	10A


Fuse No	Function	Fuse Rating
C115 -B1	BUZZER	NA
C-115-B2	HRW RLY	20A
C-115-C	BLOWER MOTORS	40A
C115 -E	CDL LOCK RLY	20A
C-115-E	IGN RLY	20A
C115 F	CDL UNLOCK RLY	20A
C115 F	TAILGATE LATCH RLY	20A
C115 -J	ACC RELAY-1 40A	40A
C115 -M1	REAR WIPER RLY	20A

Fuse No	Function	Fuse Rating
C115 -M2	WW.SIGLE INV.RLY	20A

Note:

* - if equipped

Fuse-cabin Compartment (café Racer)

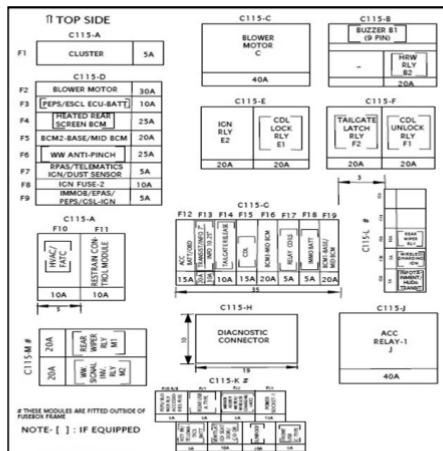

EMERGENCY AND BREAKDOWN ASSISTANCE

Fuse No	Function	Fuse Rating
F25	VENTILATED SEAT DDR / CO-DDR	10A
F28	HUD	5A

Note: For all other fuses refer table in
above section.

EMERGENCY AND BREAKDOWN ASSISTANCE

BULB SPECIFICATION

Sn	Description	Rating	Type	Qty.
1	HIGH BEAM	12V, 55W	H1	2
2	LOW BEAM	12V, 55W	H7	2
3	TURN SIGNAL FRONT	12V, 21W	PY21W	2
4	POSITION BULB	12V, 5W	W5W	2
5	SIDE REPEATER LAMP	12V, 5W	W5W	2
6	TURN SIGNAL (BSO)	12V, 16W	WY16W	2
7	STOP SIGNAL (BSO)	12V, 21W	P21W	1
8	POSITION SIGNAL (BSO)	12V, 5W	W5W	1
9	POSITION SIGNAL (BSO)	12V, 5W	W5W	1
10	REVERSE SIGNAL LH (ON TAIL GATE)	12V, 21W	P21W	1
11	HIGH MOUNTED STOP LAMP (CHMSL)	12V, 2W	LED	2
12	FRONT FOG LAMP	12V, 35W	H8	2
13	REAR FOG LAMP LH SIDE	12V, 21W	P21	1
14	REGISTRATION PLATE LAMP	LED	LED	2
15	ROOF LAMP (BULB)	W5W +W5W 12V, 10W		2
16	ROOF LAMP	LED	LED	1
17	LOAD AREA & GLOOVE BOX LAMP	12V, 5W	W5W	2
18	DRL	LED	LED	2
19	FOOTWELL ILLUMINATION	LED	LED	2

EMERGENCY AND BREAKDOWN ASSISTANCE

Sn	Description	Rating	Type	Qty.
20	CUBBY ILLUMINATION	LED	LED	1
21	CENTER FASCIA ILLUMINATION	LED	LED	1

Head Lamp Bulb Replacement

⚠ WARNING

- Do not run the engine when you change bulbs.
- If the engine has been running just prior to replacing bulbs in the headlight housing, please keep in mind that components in the engine compartment will be hot.

ⓘ NOTE

Your vehicle's headlamps have replaceable halogen bulbs.

Replacing The Low Beam Bulb

1. Lift the bonnet to access the bulbs.



2. Remove the Bulb Access cover by rotating as per the direction arrow shown on the cover.
3. Press the pin and pull the connector from the bulb.
4. To free the headlamp bulb from the socket, press and swing the retaining spring and pull it straight back.
5. Pull out the bulb from the socket.
6. Insert the new bulb (without touching the glass) into the socket.

7. Move the retaining spring up and push it slightly until it locks properly.
8. Refit the connector in to the Bulb & rotate the Bulb Access Cover as per the direction arrow shown on the cover.

⚠ WARNING

- It is dangerous if a halogen bulb breaks. These bulbs contain pressurized gas and if broken, will explode causing serious injury by the flying glass.
- Halogen bulbs can break if the glass portion is touched with bare hands, body oil could cause the bulb to heat unevenly and explode when lit.
- Never touch the glass portion of the bulb with your bare hands and always wear eye protection when handling or working around halogen bulbs. Always keep halogen bulbs out of the reach of children.

EMERGENCY AND BREAKDOWN ASSISTANCE

24 X 7 ROADSIDE ASSISTANCE

Dear Customer,

It is our responsibility and our endeavor to ensure that you have our complete service backup if ever, wherever and whenever you need the same. When you have a road network that spans wide area, the probability of a breakdown happening within hailing distance of a TATA MOTORS Authorized Workshop is very low.

It is precisely for this reason, we have tied up with TVS AA, who will provide breakdown assistance including towing to the nearest TATA MOTORS Authorized Workshop through their Authorized Service Providers (ASP).

The 24X7 Roadside Assistance Program shall be automatically available to your vehicle for the duration of Warranty period. The program shall also be available, if you avail the same post warranty.

Standard Procedure When Calling for On-Road Assistance in Case of a Breakdown:

- Dial the toll free help line number – **1800 209 8282**
- Identify your vehicle with the Vehicle chassis number that is available in the Owner's Manual.
- Explain your exact location with landmarks and tell us about the problem you face with the vehicle.
- Park your vehicle on the edge of the road, open the bonnet and put on the hazard warning signal.
- Place the advance warning triangle supplied with the vehicle approx. 3 m from the vehicle in the direction of on-coming traffic.



Coverage Under 24 X 7 Roadside Assistance Program

I. The **24x7 Roadside Assistance** Program Service covers the following services on your vehicle during warranty period.

- Wheel change through spare wheel.
- Arrangement of fuel. (Fuel cost will be chargeable at actual cost).
- Re-opening the vehicle in cases of key lock out.
- Rectification of electrical problems related to battery, fuses etc.
- On spot repairs for complaints repairable at site. ^
- Vehicle to vehicle towing or winching & towing for non-accident cases up to

EMERGENCY AND BREAKDOWN ASSISTANCE

the nearest TATA MOTORS Authorized Dealer/Service Center. Towing charges at actual cost beyond the same to be paid online to ASP. (Any ferry or toll charges levied in relation to the vehicle being towed to be paid by the customers in actuals in cash).

For accident cases, towing charges to be borne by the customer.

II. The 24x7 Roadside Assistance Program coverage on availing the 24X7 policy, post warranty is up to maximum of 6 instance of assistance in one year for both the plans- Basic and Premium. In the premium plan, this includes 2 instances of towing up to the nearest TATA MOTORS Authorized Dealer/Service Center.

Exclusions

24 X 7 Roadside Assistance Program does not Apply to

- Cost of parts consumables and labor for such repairs not covered under warranty*. These charges are to be settled with ASP in cash.
- Toll or ferry charges paid by ASP in

reaching to the breakdown site to be settled with ASP in actuals in cash.

- Cases involving accident, fire, theft, vandalism, riots, lightening, earthquake, windstorm, hail, tsunami, unusual weather conditions, other acts of God, flood, etc.
- Vehicles that are unattended, un-registered, impounded or abandoned.
- Breakdown/defects caused by misuse, abuse, negligence, alterations or modifications made to the vehicle.
- Lack of maintenance as per the maintenance schedule as detailed in the owner's manual.
- Cases involving racing, rallies, vehicle testing or practice for such events.

Disclaimer

- The Service is not available in Lakshadweep.

**The reach time is indicative & the actual reach time will be conveyed by the call center at the time of breakdown call.

- The reach time can vary depending on the traffic density & time of the day.

- The reach time indicated does not account for delays due to but not limited to acts of God, laws, rules & regulations for time being in force, orders of statutory or Govt. authorities, industrial disputes, inclement weather, heavy down pour, floods, storms, natural calamities, road blocks due to accidents, general strife and law & order conditions viz. fire, arson, riots, strikes, terrorist attacks, war etc.
- * The decision for free of charge repairs will be as per the warranty policy & procedures of TATA MOTORS PASSENGER VEHICLE LIMITED. and as per the interpretation of the same by ASP. You will be duly informed by the ASP & call center for the change applicable if any.

- ^ On spot repairs at breakdown site shall depend on nature of complaints & will be as per the discretion of the ASP.
- All charges wherever applicable need to be settled directly with the ASP.

EMERGENCY AND BREAKDOWN ASSISTANCE

Exclusion of Liabilities

- It is understood that TATA MOTORS shall be under no liability whatsoever in respect of any loss or damage arising directly or indirectly out of any delay in or non-delivery of, defect/deficiency in service/parts provided by ASP.
- In case vehicle cannot be repaired on-site, customers are advised to use the towing facility for taking their vehicle to the nearest TATA MOTORS authorized workshop only. In no condition shall the vehicle be towed to any unauthorized work-shop. TATA MOTORS will not be responsible for any repairs carried out in such unauthorized workshop.
- Customer are advised to take acknowledgement from the ASP for the list of accessories/extra fittings and other belongings in the vehicle as well as the current condition related to dents/scratches break-ages of parts/fitments of the vehicle at the time of ASP taking possession of the vehicle.

cle & to verify these items when delivery is taken back by them, Claim for loss of or damage to items, if any should be taken up with ASP directly. TATA MOTORS shall not be responsible for any such claims, damages/loss or any deficiency of service of the ASP.

- Vehicles will be handled, repaired & towed as per the customer's risk & TATA MOTORS shall not be liable for any damages / claims as a result of the same.
- Services entitled to the customers can be refused or cancelled on account of abusive behavior, fraudulent representation, malicious intent and refusal to pay the charges for any charges related services and spare parts during service or on previous occasions on part of the customer.
- On site repairs may be temporary in nature. The completion of repairs does not certify the road worthiness of the vehicle. The customer is advised to ensure temporary re-pairs carried out on-site is followed by permanent repairs

at a TATA MOTORS Authorised Dealer/Service Center at the earliest. Terms and conditions and service coverage, exclusions etc. are subject to change without notice

E-call and B-call Services

1. Emergency hard switch button is present on roof console to operate the E-Call / B-Call feature (Emergency Medical Assistance / Breakdown Assistance)
2. Emergency call gets triggered when user presses the hard switch button, if by chance call gets disconnected then user will get call back from Allianz agent within 3 mins. During this 3 minutes time duration user can not trigger another E-Call and green lights will remain ON.
3. E-call callback will work only with India profile E-SIM available in telematics unit.
4. Also, in case of vehicle crash, E-Call automatically triggers.
5. On pressing emergency call button, a popup message appears on HU stat-

EMERGENCY AND BREAKDOWN ASSISTANCE

ing: "Dialing emergency number in 5 seconds" & have a cancel button on the message box, so that user can cancel connecting to emergency number in case it was done unknowingly.

6. In case of breakdown B-Call can be triggered by pressing B-Call switch. In B-Call, no callback scenario is present. User has to again re-initiate the B-Call feature via hard switch or soft switch.
7. Once call is connected, user can cancel the call using hard press button.

Response Time ** For The E-call (roadside Assistance Program)		
	Municipal Area	Nonmunicipal Area
Reach time for medical assistance	45 Minutes	60 Minutes
Reach time for towing assistance	45 Minutes	60 Minutes
Reach time for vehicle custody	45 Minutes	60 Minutes

Response Time ** For The B-call (roadside Assistance Program)	
Within City Limits	60 minutes
Highways and Other Places	120 minutes +/-
States of North East, J&K and Himachal	Same Day (Within 24 Hrs.)
** The response time will depend on the location, terrain, traffic density and the time of the day.	

EMERGENCY AND BREAKDOWN ASSISTANCE

E-call And B-call LED Indications

Sr. No	Parameters	System Health Led- Red	Call Status Led- Green
1	During IGN ON	LED remains ON for 3 Sec	LED remains ON for 3 Sec
2	Subscription Active	OFF	OFF
3	Subscription Expired	Slow Blinking (0.5 Sec ON & 4 Sec OFF)	OFF
4	During Call Initiation	OFF	Fast Blinking (0.5 Sec ON & 0.5 Sec OFF)
5	Call Connected	OFF	Permanent ON
6	System Failure	ON	OFF

If RED light is continuously ON near E-Call (SOS) switch teen E-Call/B-Call will not work.
User has to contact nearest TATA MOTORS Authorized service Centre.

In case of call transfer from B-Call to E-Call, Call back case will not work

List of below cities coverage for E-Call support

Ambulance services will be provided only in the cities mentioned under the below mentioned categories. Allianz shall provide an ambulance with basic life support or advanced life support based on the availability at the time of emergency call received from the breakdown location. The criteria to choose the kind of ambulance shall be as per the requirement of the customer, distance from the breakdown location & the nearest hospital & subject to availability. The judgement of Allianz in all cases will be final.

EMERGENCY AND BREAKDOWN ASSISTANCE

Category A:

Ambulance services will be given under municipal limits of these cities varying from 15-25 Km radius.

Hyderabad	Vadodara	Coimbatore	Madurai	Noida
Bangalore	Kochi	Vijayawada	Kolhapur	Jaipur
Mumbai	Trivandrum	Vizag	Mysore	Jodhpur
Kolkata	Indore	Raipur	Aurangabad	Chandigarh
Chennai	Nagpur	Surat	Kozikhode	Patna
Delhi	Pune	Rajkot	Warangal	Amritsar
Gurgaon	Bhubaneshwar	Bhopal	Cuttack	Navi Mumbai
Faridabad	Lucknow	Ranchi	Goa	Thane
Ghaziabad	Kanpur	Nashik	Pondicherry	
Ahmedabad	Varanasi	Mangalore	Guntur	

Category B:

Ambulance services will be given under municipal limits of these within 15 Km radius.

Adilabad	Dahod	Khandwa	Rajnandgaon
Adityapur	Dakshin Dinajpur	Kharagpur	Ramanathapuram
Agartala	Daman	Kishanjang	Rampur
Agra	Dankuni	Koch Bihar	Raniganj
Ahmednagar	Darbhanga	Kollam	Ratlam
Aizawl	Darjeeling	Korba	Rewa

EMERGENCY AND BREAKDOWN ASSISTANCE

Ajmer	Davanagere	Kota	Rewari
Akola	Dehradun	Kottayam	Rishikesh
Alappuzha	Deoghar	Kovilpatti	Rohtak
Aligarh	Deoria	Kozhikode	Roorkee
Allahabad	Dhanbad	Krishnagiri	Rourkela
Ambala	Dhar	Kurnool	Rudrapur
Ambikapur	Dharamshala	Kurukshetra	Sagar
Ambur	Dharbhanga	Kutch	Saharsa
Amethi	Dharmapuri	Lakhimpur Kheri	Salem
Amravati	Dharmavaram	Lalitpur	Samastipur
Amreli	Dharwad	Latur	Sambalpur
Anand	Dhaultpur	Lonavala	Sangli
Anantapur	Dhule	Ludhiana	Sangrur
Ankleshwar	Dibrugarh	Maharajganj	Satara
Arakkonam	Dindigul	Mahbubnagar	Satna
Ariyalur	Dispur	Mahesana	Secunderabad
Arrah	Durg	Mainpuri	Sehore
Asansol	Durgapur	Malda	Shahdol
Auraiya	Eluru	Maldah	Shahjahanpur
Aurangabad	Ernakulam	Manaparai	Shajapur
Azamgarh	Erode	Mandsaur	Shikohabad
Badshahnagar	Etah	Manmad	Shillong

EMERGENCY AND BREAKDOWN ASSISTANCE

Bagbera	Etawah	Mansa	Shimla
Baghpat	Faizabad	Mapusa	Shimoga
Bahadurgarh	Farrukhabad	Margao	Sholihngur
Bahraich	Fatehpur	Mathura	Sholingur
Balaghat	Ferozpur	Mau	Siddharthnagar
Balasore	Firozabad	Mavelikara	Sikar
Baleshwar	Firozpur	Medak	Siliguri
Ballia	Gadwal	Medinipur	Sirsra
Baloda	Gandhidham	Meerut	Sitapur
Balrampur	Gandhinagar	Mehsana	Sivaganga
Bambolim	Gaya	Miryalaguda	Siwan
Banda	Ghazipur	Mirzapur	Solan
Bankura	Giridih	Moga	Solapur
Barasat	Godhra	Moradabad	Sonbhadra
Bareilly	Gonda	Morbi	Sonipat
Barwani	Gondia	Morena	Sri City
Basti	Gorakhpur	Motihari	Sri Ganganagar
Bathinda	Gudivada	Muktsar	Srirangam
Begusarai	Gulbarga	Murshidabad	Sullurupeta
Belgaum	Guna	Muzaffarnagar	Supaul
Bellary	Gurdaspur	Muzaffarpur	Suryapet
Bengaluru	Guwahati	Nadia	Tadepalligudem

EMERGENCY AND BREAKDOWN ASSISTANCE

Betul	Gwalior	Nagapattinam	Tambaram
Bhadohi	Hajipur	Nagercoil	Taregana
Bhadrak	Haora	Nainital	Tatanagar
Bhagalpur	Hapur	Nalgonda	Tenkasi
Bharatpur	Hardoi	Namakkal	Thalassery
Bharuch	Haridwar	Nanded	Thanjavur
Bhatinda	Hassan	Nandyal	The Nilgiris
Bhavnagar	Hathras	Navsari	Theni
Bhilai	Hazaribagh	Nawanshahr	Thiruchirapalli
Bhilwara	Hingoli	Nellore	Thiruvalla
Bhind	Hisar	New Farakka	Thiruvallur
Bhiwani	Hooghly South	Nizamabad	Thiruvananthapuram
Bhuj	Hoshiarpur	North Twenty four Parganas	Thiruvarur
Bhusawal	Hosur	Ooty	Thrissur
Bidhan Nagar	Hubli	Osmanabad	Thrivandram
Biharsharif	Imphal	Palamapur	Tindivanam
Bijapur	Jabalpur	Palampur city	Tiruchirappalli
Bijnor	Jaisalmer	Palanpur	Tirunelveli
Bikaner	Jalandhar	Pali	Tirupati
Bilaspur	Jalgaon (Chalisgaon)	Panaji	Tirupattur
Birbhum	Jalgaon	Panipat	Tiruppur
Bokaro	Jalpaiguri	Panjim	Tirur

EMERGENCY AND BREAKDOWN ASSISTANCE

Bolpur	Jammu	Panna	Tiruvanamalai
Brahmapur	Jamnagar	Pantnagar	Toothukudi
Bulandshahr	Jamshedpur	Parappanangadi	Tumkur
Buxar	Jaunpur	Paravur	Tundla
Calicut	Jehanabad	Parbhani	Udaipur
Chaibasa	Jhansi	Pathankot	Udupi
Chakradharpur	Jhunjhunu	Patiala	Ujjain
Chakulia	Jind	Perambalur	Unnao
Champa	Jorhat	Phagwara	Vaikom
Chandauli	Junagadh	Phaphund	Valsad
Chandil	Jyotiba Phule Nagar	Pithapuram	Vaniyambadi
Channapatna	Kaithal	Pollachi	Vapi
Chapra	Kancheepuram	Ponda	Varkala Sivagiri
Chengalpattu	Kanniyakumari	Port Blair	Vellore
Chhatarpur	Kannur	Prayagraj	Viluppuram
Chhindwara	Kanpur Nagar	Puducherry	Virudhampet
Chhota Gobindpur	Kanyakumari	Pudukkottai	Virudhunagar
Chitradurga	Karimnagar	Puri	Visakhapatnam
Chitrakoot	Karnal	Purna	Wardha
Chittoor	Katni	Purnia	Yavatmal
Churu	Katpadi	Rae Bareli	Yelahanka
Cooch Behar	Kaushambi	Raigar	Yemmiganur

EMERGENCY AND BREAKDOWN ASSISTANCE

Cuddalore	Kayamkulam	Raigarh	Yeswanthpur
Cuddapah	Khammam	Rajahmundry	

Category C:

For Outside city Limit cases & rest of the cities – Services will be aligned on best effort basis utilizing the service network from the nearest city or publicly available network.

AWP's liability for the provision of Assistance Services will cease once the emergency services have arrived at the breakdown location or on completion of towing or upon arrival of the Covered Vehicle at Authorized TATA Dealer or TATA Motors Authorized Service Centre.

MAINTENANCE AND SERVICE

Periodic maintenance is essential for ensuring long trouble free performance.

Have your vehicle serviced regularly from TATA MOTORS Authorized Dealer/Service Center.

There is a large network of TATA MOTORS Authorized Service Centre to help you with their professional servicing expertise. Scheduled maintenance information is provided which makes tracking routine service easy.

The following checks can be carried out between the recommended scheduled maintenance services. Take help of our authorized service center for assistance.

- Engine oil level
- Engine coolant level
- Brake fluid level
- Washer fluid level checking & top-ping up
- Battery electrolyte level
- Tyre inflation pressure including spare wheel

NOTE

Refer "Opening and Closing" section for engine bonnet opening.

WARNING

- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not work on a vehicle with the engine running in an enclosed space, unless you are sure of enough ventilation.
- Keep all open flames and other burning material (such as cigarettes) away from the battery and all fuel related parts.


If you need to do any work inside the engine compartment,

- Switch off the ignition
- Never reach into the area where there is a risk of danger from moving components, such as the fan rotation area.


- Keep clothing away from moving parts.

MAINTENANCE

ENGINE COMPARTMENT - DIESEL

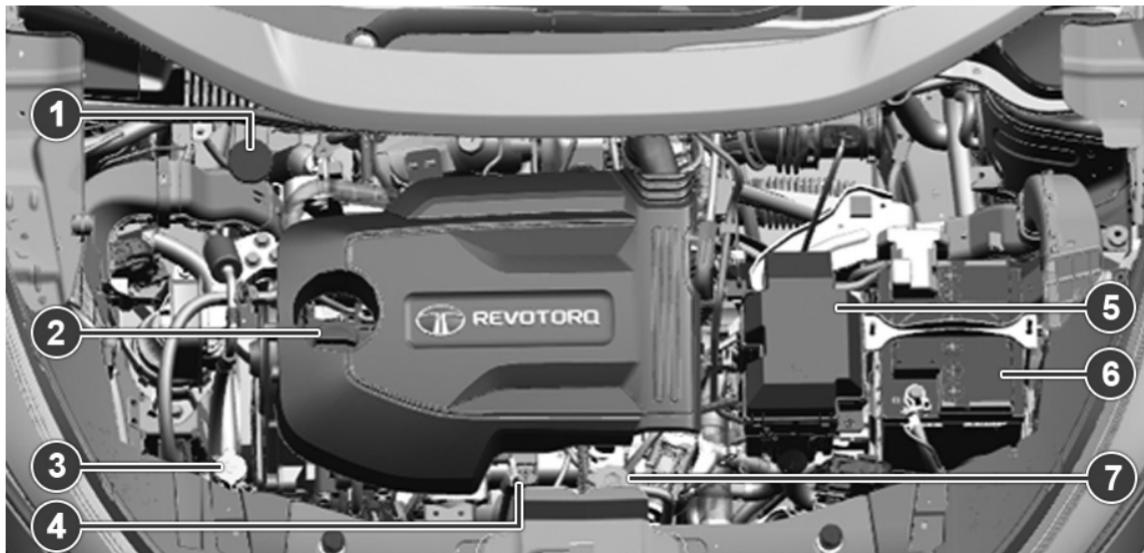

1. Brake fluid reservoir	5. Fuse box
2. Engine oil filling cap	6. Battery
3. Windshield washer container	7. Radiator cap
4. Dipstick - Engine oil	

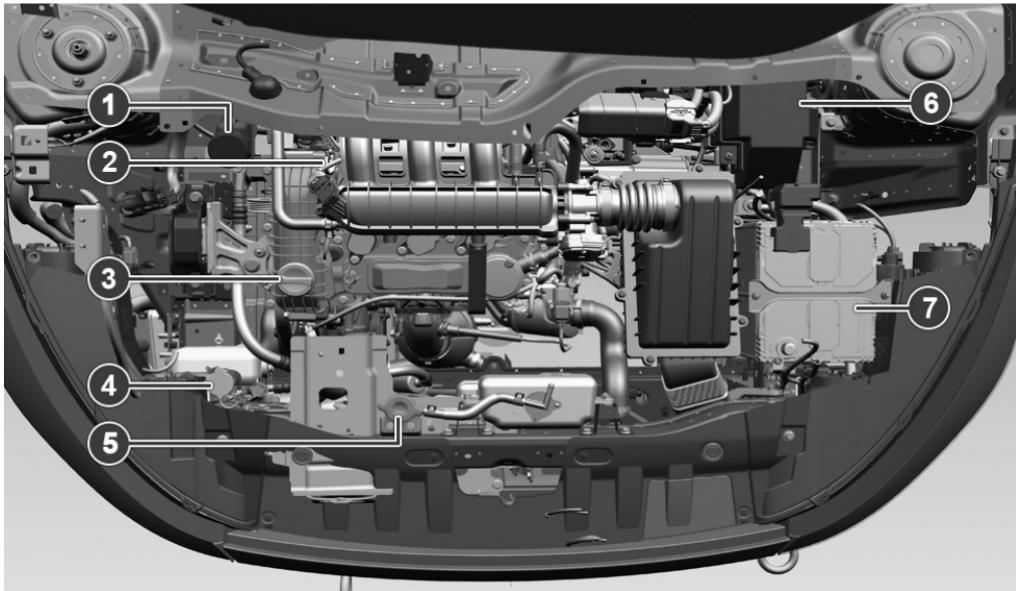ENGINE COMPARTMENT- PETROL (NA Engine)

- 1. Brake fluid
- 2. Dipstick - Engine oil
- 3. Engine oil filling cap
- 4. Windshield washer container
- 5. Radiator cap
- 6. Fuse box
- 7. Battery


MAINTENANCE

ENGINE COMPARTMENT - PETROL (TC Engine)




1. Dipstick - Engine oil
2. Brake fluid reservoir
3. Engine oil filling cap
4. Windshield washer container
5. Fuse box
6. Battery
7. Radiator cap

ENGINE OIL LEVEL

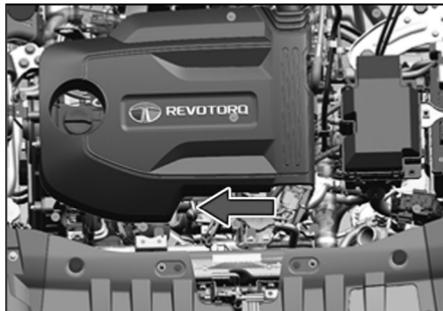

Dipstick location Engine oil (Diesel)

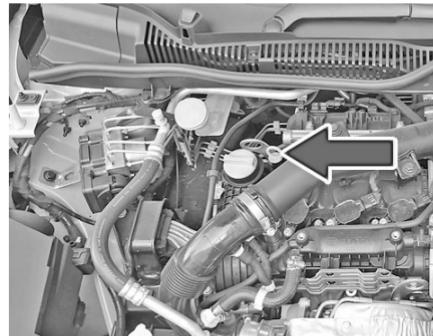


Dipstick location Engine oil (TC Petrol)

Warm up the engine to normal operating temperature.

Turn it 'OFF' and wait for 5 minutes for the oil to return to the oil pan. Be sure the vehicle is on a level surface.


Take out the dipstick, wipe it clean, and reinsert it fully. Pull it out again and examine the oil level. It should be between 'MIN' and 'MAX' level. If not, top up with recommended engine oil.

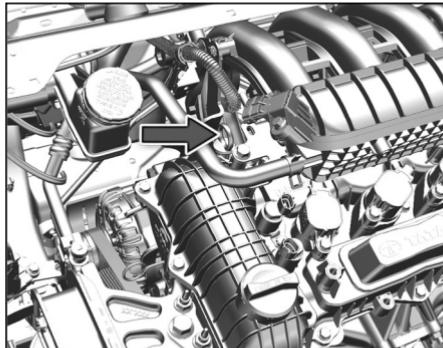

Dipstick location Engine oil (NA Petrol)


 **NOTE**

The oil consumption depends upon the driving style and the conditions under which the vehicle is used.

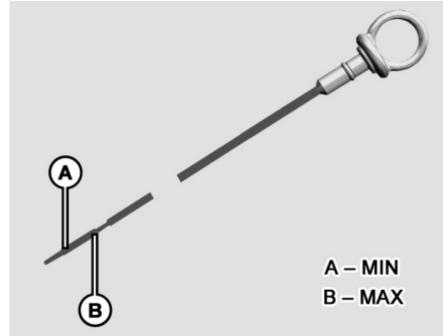

Dipstick (Petrol)

MAINTENANCE

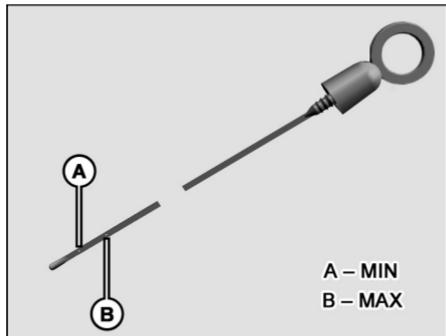

Dipstick (Diesel)


(i) NOTE

Do not remove the filler cap when the engine is running.


Do not add oil above than the MAX. mark. Oil level above the MAX. mark may cause engine damage.

For location of Engine oil filling cap and dip stick, please refer image of the respective Engine Compartment.


BRAKE FLUID LEVEL

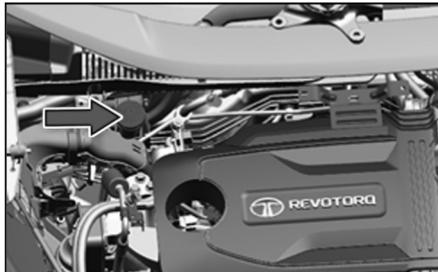


Brake fluid reservoir (Diesel)

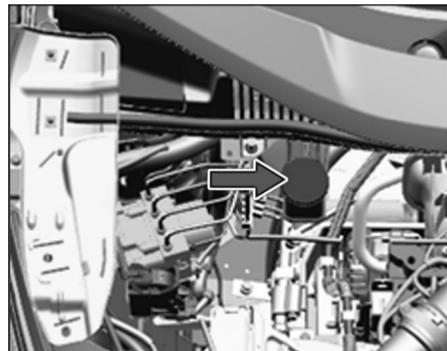

Brake fluid reservoir (TC Petrol)

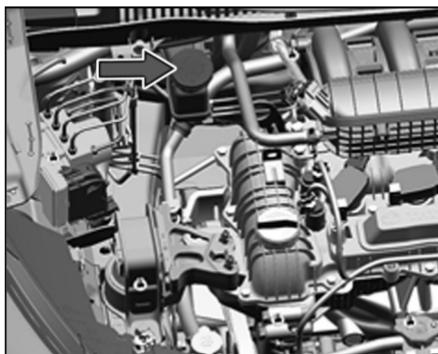

Brake fluid reservoir (Petrol)

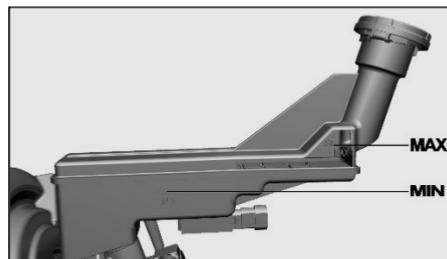

Brake fluid level

The level of the brake fluid should be between the 'MIN' and 'MAX' marks provided on the side of the brake fluid container. If

the level falls below the 'MIN' mark, add recommended brake fluid.


NOTE

Do not allow brake fluid to make contact with the skin or eyes.

Do not allow brake fluid to splash or spill on the paint surface as it will damage the paint. In case of spillage, wipe it off immediately.

For location of Brake Fluid Container and filling cap, please refer respective Engine Compartment.

ENGINE COOLANT LEVEL

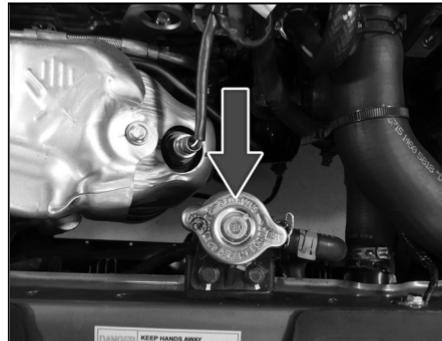

Examine whether the coolant level is between the 'MIN' and 'MAX' marks provided on the coolant reservoir.

When the coolant level is low, top up with recommended coolant through filler of No loss tank until the level approaches the max level line. Refer 'Technical information' section.

NOTE

In case of emergency, a large amount of water without engine coolant may be added in order to reach a vehicle service location.

Whenever coolant has been added, the coolant level in the coolant reservoir should be checked the next few times you drive the vehicle to confirm correct level.

For location of Engine coolant container and filler cap, please refer image of Engine Compartment.

NOTE

Topping up of the coolant should be done in the auxiliary tank only.

Make sure that only TATA MOTORS recommended coolant is used. Mixing of different coolants may harm your engine's cooling system and its components. Do not add extra inhibitors or additives to the coolant. These can be harmful and compromise the corrosion protection of the engine coolant.


MAINTENANCE

⚠ WARNING

The engine cooling system is pressurized, particularly when the engine is warm. When opening the cap, you could be scalded by hot coolant spraying out. There is a risk of injury.

Let the engine cool down before opening the cap. Wear eye and hand protection when opening the cap. Open the cap slowly half a turn to allow pressure to escape.

WINDSHIELD WASHER FLUID LEVEL

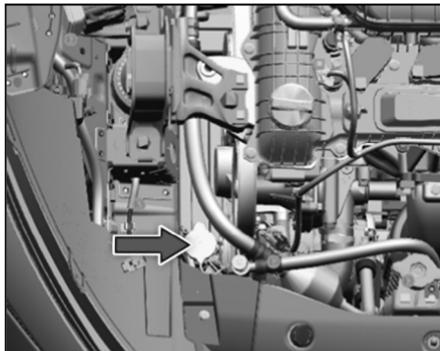

Examine if there is washer fluid in the tank. Fill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

ⓘ NOTE

Do not use detergent or any other additive in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.

Do not operate washer motor with no fluid in washer tank, washer motor will be damaged

For location of Windshield Washer Container and filling cap, please refer image of the respective Engine Compartment.

BATTERY

- Examine the battery for electrolyte level against the marking on the battery outer case.
- Examine the battery terminals for corrosion (a white or yellowish powder). To remove it, wash the terminals with a solution of baking soda. It will bubble up and turn brown.
- When this stops, wash it off with plain water. Dry off the battery with a cloth or paper towel.
- Apply petroleum jelly to the terminals to prevent further corrosion.
- Use a proper wrench to loosen and remove cables from the terminals.
- Always disconnect the negative (-ve) cable first and reconnect it last.
- If your vehicle is equipped with Battery Sensor, then disconnect only the Sensor Output Cable. Do not remove the Sensor, Sensor connector completely as this will result in the loss of sensor function temporarily. Sensor functionality will be restored when the Vehicle

is parked for 3 hours without any operation.

- Clean the battery terminals with a terminal cleaning tool or wire brush.
- Reconnect and tighten the cables, coat the terminals with petroleum jelly.
- Make sure that the battery is securely mounted.
- If you need to connect the battery to a charger, disconnect both cables to prevent damage to the vehicle's electrical system.
- If your vehicle is equipped with Battery Sensor, connect the jump start leads on output terminal of Battery Sensor. Do not connect the jump start leads on Sensor surface or Battery terminal. This will result of function loss of Battery sensor. Refer the Battery Sensor image for do's and don'ts.

For location of battery, please refer image of the respective Engine Compartment

***(i) NOTE***

Use only authorized Battery recommended by TATA MOTORS. Use of any other unauthorized Battery will result in malfunction of the ISS operation.

(i) NOTE

- *During normal operation, the battery generates gas which is explosive in nature. A spark or open flame can cause the battery to explode causing very serious injuries.*

MAINTENANCE

- Keep all sparks, open flames and smoking materials away from the battery.
- The battery contains sulphuric acid (electrolyte) which is poisonous and highly corrosive in nature. Getting electrolyte in your eyes or on the skin can cause severe burns. Wear protective clothing and a face shield or have a skilled technician to do the battery maintenance.

SPARK PLUG (PETROL)



For NG NA Engine

Spark Plug	Number	Gap
Federal Mogul (Champion)	RER8MC	0.7 to 0.8 mm

For NG TC Engine


Spark Plug	Number	Gap
BOSCH	YR5ME0	0.78 to 0.8 mm

Tightening Torque - 25Nm

NOTE

Use spark plug of recommended make & type for replacement.

TYRES

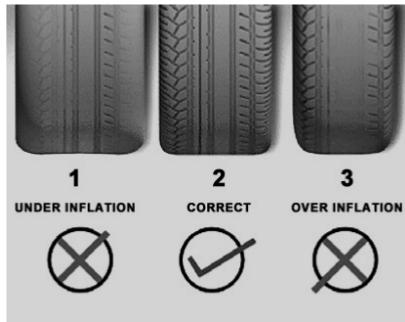

1	Under inflation	Excessive side tread wear
2	Correct tyre pressure	Uniform wear
3	Over inflation	Excessive center tread wear

Inflation

Do a check of the tyre pressure and the tyres condition periodically.

Examine the pressure in the tyres when they are cold.

Keep the correct pressure in the tyres for the best combination of riding com-fort, handling, tyre life and optimum performance.

Over inflation of tyres makes the vehicle ride bumpy and harsh. Tyres are more prone to uneven wear and dam-age from road hazards.

Under inflated tyres reduce comfort, af-fects handling and increases the operating temperature, which can result in failure. They also cause uneven wear and bring down the performance of the car.

(i) NOTE

Every time you check inflation pressure, you should also examine tyres for un-even wear, dam-age and trapping of foreign objects in the treads and wear.

Recommended Tyre Pressure

Tyre Size	Front (psi/bar)	Rear (psi/bar)
165/80 R14	35 / 2.4	35 / 2.4
185/60 R16	35 / 2.4	35 / 2.4

For ride comfort, refer below pressure table


Tyre Size	Front And Rear (psi/bar)	
	Laden	Unladen
165/80 R14	35	35
185/60 R16	35	35

(i) NOTE


This is for reference. Kindly refer Tyre pressure as indicated on tyre pressure sticker provided on vehicle.

MAINTENANCE

Tyre Pressure Sticker Location

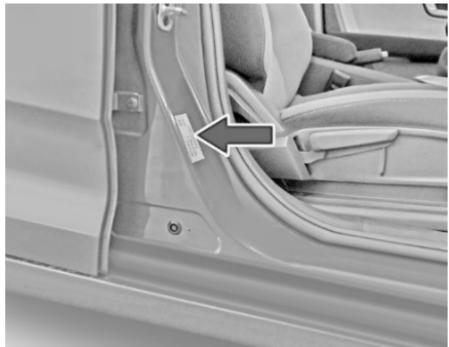

For 165/80 R14 Tyres

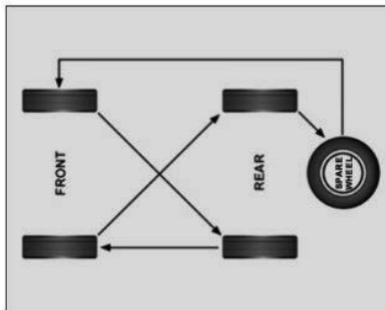


Tyre Rotation

To increase tyre life rotate the tyre at specified intervals or earlier depending on the operation of vehicle. The illustrations shows how to rotate tyres.

For Tyre with Temporary Spare Wheel (if equipped)

For 185/60 R16

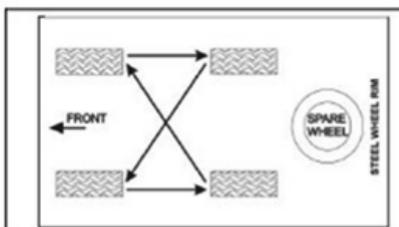

(i) NOTE

- *Do not use spare wheel for tyre rotation, in case of temporary spare wheel used.*
- *Two or more temporary tyres should not be used on one vehicle.*
- *Tyre pressure of temporary wheel is to be checked at least once in a month.*

Spare Wheel Specification

165/80 R14 for all variants

Wheel Covers (if equipped)



Insert a piece of cloth between the spokes of the wheel cover and pull it outwards. Take out detached wheel cover from the wheel rim.

When installing the cover, make sure that it is positioned so that it does not cover the air filling valve. Apply equal pressure at the circumference of the wheel cover to fix it in the wheel rim.

NOTE

Do not use any sharp tools (such as screw driver etc.) to remove the wheel cover.

Wheel Alignment

Incorrect wheel alignment causes excessive and uneven tyre wear. Check wheel alignment at specified intervals

Wheel Balancing

Wheels of your vehicle are balanced for better ride comfort and longer tyre life. Balancing needs to be done whenever tyre is removed from rim.

WARNING

If the vehicle vibrates abnormally on a smooth road, have the wheel balanced done immediately.

Special Care for Tubeless Tyres

- When you remove the tyre and install it back on the rim, take pre-cautions not to damage tyre bead. Use tyre removal and assembly machines. Damage or cut on tyre bead may cause gradual loss of air and deflation of tyre.
- Do not scratch the inner surface of tubeless tyre with metallic or sharp object. Tubeless tyres are coated with impermeable layer of rubber from the inner surface which holds the air in the tyre. Removal of this layer due to scratching may cause gradual loss of air and deflation.
- If wheel rim gets damaged in service, get the wheel rim repaired/ replaced immediately. Running the vehicle with damaged rim may cause deflation of tyre and subsequent dislodging of tyre from rim.
- Keep the recommended inflation pressure. Over-inflation, in particular, may cause puncture or bursting of tyre.

(i) NOTE

Life and wear pattern of tyres depends on various parameters like tyre pressure, wheel alignment, wheel balancing, tyre rotation, etc. It also largely depends on vehicle speed, load carried, usage, driving habits, road conditions, tyre quality, etc. In case fault is suspected to be due to poor quality of tyres, the same may be taken up with concerned tyre manufacturer.

SMART KEY BATTERY REPLACEMENT (for PEPS variant)

Procedure

1. Open rear side of key (battery cover).



2. Replace with new battery in the smart key battery slot.
3. Ensure that the "+" symbol on the battery is facing upwards. The correct polarity is shown on the battery cover.
4. Close the battery cover.
5. Make sure that the key cover is intact properly.

(i) NOTE


- Use CR 2032 battery only.
- An inappropriately disposed battery can be harmful to the environment and human health. Dispose the battery according to your local law(s) and regulation.

ON BOARD DIAGNOSTIC (OBDII) SYSTEM

On board Diagnostics or OBD, is an automotive term referring to a vehicle's self-diagnostic and reporting capability. The OBD system allows continuous diagnosis of the components of the vehicle correlated with emissions. This system warns the driver, by turning "ON" the Malfunction Indication lamp (MIL) on the instrument cluster, when a fault causes emission levels to increase.

The OBD system also has a diagnostic connector that can be interfaced with appropriate diagnostic tools, which makes it possible to read the fault codes stored in the Electronic Control Unit, together with a series of specific parameters for Engine operation and Diagnosis. This check can also be carried out by the traffic police.

On board diagnostic located in Engine compartment fuse box. (Refer below image)

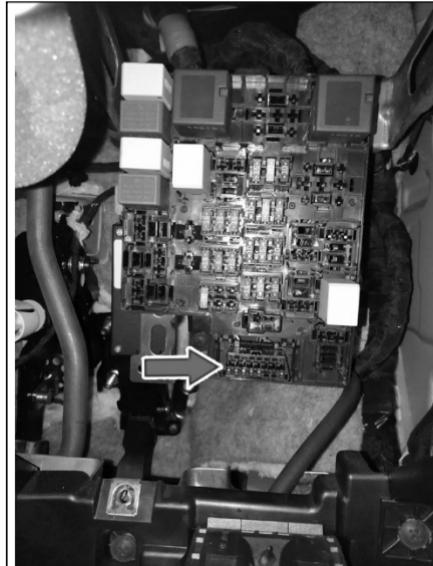

Location of on board diagnostic (OBD II)

MAINTENANCE

SERVICE INSTRUCTIONS

The TATA ALTROZ has been manufactured to give you economical and trouble free performance. To achieve this, please follow the instructions as stated.

Your vehicle is entitled to three free services (labour only). The free service coupons are attached to the sales invoice. Please present these coupons to the servicing dealer while availing free services.

1st free service - At 1,000-2,000km. OR 2 months, whichever is earlier.

2nd free service - At 7,000-8,000km. OR 6 months, whichever is earlier.

3rd free service - At 14,500-15,500km. OR 12 months, whichever is earlier.

All services other than free services are chargeable.

Servicing of the vehicle can be done at any TATA MOTORS Authorized Dealer Workshop or TATA MOTORS Authorized Service Centre (TASC).

Warranty claims can be settled by any TATA MOTORS Authorized Dealer Workshop or TATA MOTORS Authorized Service Centre (TASC).

SERVICE SCHEDULE

S/N	Operation	Km	2	1500	6	7500	12	15000	18	22500	24	30000	30	37500	36	45000	42	52500	48	60000	54	67500	60	75000	66	82500	72	90000	78	97500	84	105000	90	112500	96	120000	102	127500	108	135000	114	142500	120	150000
		Months	2	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	126	132	138	144	150	156	162	168	174	180	186	192	198	204							
GENERAL																																												
1	Wash the vehicle & Clean Condenser Fins	Every Service	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•												
2	Check & Top up Fluids (If required): Transaxle Oil, Coolant, Brake Fluid, Battery Electrolyte, Wind Screen washer fluid	Every Service	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•												
3	Check Fuel Lines for Leaks	Every Service	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•											
4	Check and Capture all DTC's Clear all faults and Erase the Codes.	Every Service	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•											
5	Check condition of Rubber bushes/ parts in lower link, front & rear coil spring seats, front & rear bump stoppers, anti-roll bar, rear twist beam,	7.5K / 6M				•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•									

MAINTENANCE

S/N	Operation	Months	Km																			
			2	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114
	front & rear dampers, rubber boot/dust cover/bellow in rack & pinion, steering and suspension ball joints, steering column. Replace if necessary (First at 15K/12M then at every service).																					
6	Check & Replace the exhaust system rubber hanger if found damaged (Rubber ageing/Cracks/enlarged mounting hole size/harden rubber/abnormal noise due to free moment of rod hanger)	30K / 24M				●				●					●			●			●	
7	Check All door latch & striker operations , Adjust & Apply grease If required	15K / 12M		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
8	Check for all bolts & nuts	7.5K / 6M	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

Z S	Operation	Km	2	1500	6	7500	12	15000	18	22500	24	30000	30	37500	36	45000	42	52500	48	60000	54	67500	60	75000	66	82500	72	90000	78	97500	84	105000	90	112500	96	120000	102	127500	108	135000	114	142500	120	150000
			Months	2	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	126	132	138	144	150	156	162	168	174	180	186	192	198	204						
ENGINE (Diesel)																																												
1	Clean air filter element (more frequently for vehicle operating in severe condition)	7.5K / 6M		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•											
2	Replace air filter element (@ 15K for Vehicle operating in severe condition)	30K / 24M					•																•										•											
3	Change engine oil & Oil filter	15K / 12M			•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•									
4	Drain water from Fuel Filter Bowl	15K / 12M			•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•									
5	Replace Fuel filter element	# 45K / 24 M					•																																					
6	Check AC & Alternator belt condition visually, replace if found damage	15K / 12M			•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•							
7	Check timing belt visual condition, replace if found damage.	# 105K / 24M																					•																					

MAINTENANCE

S/N	Operation	Km	2	1500	6	7500	12	15000	18	22500	24	30000	30	37500	36	45000	42	52500	48	60000	54	67500	60	75000	66	82500	72	90000	78	97500	84	105000	90	112500	96	120000	102	127500	108	135000	114	142500	120	150000
			Months	2	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	126	132	138	144	150	156	162	168	174	180	186	192	198	204	210	216				
8	Change coolant	# 60K / 36M										•								•																								
9	Replace timing drive kit (Timing belt, Auto tensioner and Idler)	# 150K /60M																																		•								
ENGINE (Gasoline) & TC Engine																																												
1	Clean air filter element (more frequently for vehicle operating in severe condition)	15K/ 12M				•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•									
2	Change engine oil & Oil filter	15K/ 12M			•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•									
3	Gasoline - Replace Gasoline Fuel Filter	# 75K/ 72M												•																					•									
4	Change Spark plugs - Natural Aspirated Engine	45K/ 36M									•										•												•											
5	Change Spark plugs - Turbocharger Engine	30K/ 24M							•		•	•	•	•						•		•		•		•										•								
6	Check accessory belt condition visually, replace if found	15K/ 12M				•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•									

N S	Operation	Km	2	1500	6	7500	12	15000	18	22500	24	30000	30	37500	36	45000	42	52500	48	60000	54	67500	60	75000	66	82500	72	90000	78	97500	84	105000	90	112500	96	120000	102	127500	108	135000	114	142500	120	150000
			Months	2	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	126	132	138	144	150	156	162	168	174	180	186	192	198	204						
	damage																																											
7	Replace air filter element (more frequently for vehicle operating in severe condition)	45K/ 36M								•																									•									
8	Change coolant	# 60K /36M									•																																	
BRAKES																																												
1	Check front brake pads & rear brake linings.	15K/ 12M			•		•		•		•		•		•		•		•		•		•		•		•		•		•		•											
2	Brake fluid, Check brake sys- tem components for Leakages	# 45K/ 24M							•																									•										
3	Inspect and if necessary ad- just handbrake setting	15K/ 12M			•		•		•		•		•		•		•		•		•		•		•		•		•		•		•											
WHEELS & TYRES																																												
1	Check,adjust wheel alignment	# 15K/ 18M																																										
	(For severe usage, above checks to be done at every 5,000 km or after every se- vere usage event)				•		•		•		•		•		•		•		•		•		•		•		•		•		•		•											

MAINTENANCE

Z S	Operation	Km	1500	2	6	7500	12	15000	18	22500	24	30000	30	37500	36	45000	42	52500	48	60000	54	67500	60	75000	66	82500	72	90000	78	97500	84	105000	90	112500	96	120000	102	127500	108	135000	114	142500	120	150000	
			Months	2	6	7500	12	15000	18	22500	24	30000	30	37500	36	45000	42	52500	48	60000	54	67500	60	75000	66	82500	72	90000	78	97500	84	105000	90	112500	96	120000	102	127500	108	135000	114	142500	120	150000	
3	Replace Combi PM2.5 filter	15K/ 12M			•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•
4	Vacuum Dust Sensor for satisfactory performance.	15K/12 M			•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•						
SUNROOF (if equipped)																																													
1	Check and clean the guide rails and drain holes.*	15K/12 M			•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•						

Note : # - Kms or months whichever occurs earlier

Severe conditions as below-

A: Repeatedly driving short distance of less than 7 km.

B: Extensive low speed driving for long distances.

C: Driving on rough, dusty, muddy, unpaved, graveled or salt-spread roads.

D: Frequently Driving in heavy traffic area & in stop & go condition

E: Driving only on uphill, downhill ,or mountain roads.

F: Vehicle towing , driving for petrol car , taxi, or other commercial use

G: Frequently driving under high speed & acceleration.

MAINTENANCE

VEHICLE PARKING FOR LONG DURATION (NON-USE MAINTENANCE)

If you want to park your vehicle at one place for long duration, following care is to be taken:

1. Park the vehicle in covered, dry and if possible well-ventilated premises. Engage a gear.
2. Remove the battery terminal cables (first remove the cable from the negative terminal). Ensure that battery is fully charged.
3. Use wheel chocks to prevent movement of the car.
4. Clean and protect the painted parts using protective wax.
5. Clean and protect the shiny metal parts using commercially available special compounds.
6. Sprinkle talcum powder on the rubber windscreens wiper and lift them off the glass.
7. Slightly open the windows.
8. Cover the vehicle with a cloth or perforated plastic sheet. Do not use sheets of imperforated plastic as they do not allow moisture on the vehicle body to evaporate.
9. Inflate the tyres to 0.5 bar above the normal specified pressure and check it at regular intervals.
10. Check the battery charge every six weeks.
11. Do not drain the engine cooling system.

PARK REGENERATION PROCEDURE

WARNING

- Park regeneration should be done only when DPF lamp  appears on instrument cluster
- Ensure the vehicle parked in open area & on flat road (avoid parking in enclosed space/ near grass/ inflammable material)
- Ensure adequate fuel availability
- Ensure parking brake engagement
- Open the bonnet to prevent engine overheat
- Switch off the A/C

⚠ CAUTION

Ensure following conditions for performing Park regeneration

- Engine should be warmed up to optimum level (coolant temperature gauge should be at Centre of C & H)
- Accelerator/ Brake/ Clutch pedal should not be pressed during the procedure
- Vehicle should be stationary

'If vehicle does not enter regeneration mode or if Park regeneration is interrupted, stop the engine (Key Off), wait for 20 seconds and repeat the Park regeneration procedure'

PARK REGENERATION PROCESS:

1. Stop the engine and wait for 20 seconds
2. Provide ignition toggle (Push button/ Key position ON↔ OFF) for 6 times within 20 seconds
3. Start the engine
4. Monitor engine state: Within 10 seconds, engine speed raises to 1600 rpm & further up to 2000 & 2500 rpm as the regeneration progresses. After the end of regeneration, engine speed drops to 1200 rpm and to idle after 1 minute. The process takes ~30-40 minutes to finish.
5. Stop the engine and wait for 20 seconds
6. Check DPF lamp status on instrument cluster (ON/ OFF)
7. If the DPF lamp does not turn off in spite of the procedure, visit authorized TATA MOTORS dealer.

FUEL SPECIFICATION

Fuel (Diesel)

Normal grade BS VI compliant diesel conforming to IS1460:2017 or equivalent is recommended to be used as fuel.

Do not use premium diesel available in the market for like extra premium / Turbojet etc.

Recommended Fuel Specification

Parameter	Unit	Bs Vi
Cetane Number (min)	CN	51
Sulphur content	Mg/kr	10
Lubricity (HFRR)	Micron	460

⚠ WARNING

Never use alcohol or mix diesel with alcohol based fuels including kerosene etc. It will damage the engine, fuel system and other related systems. If accidentally done so, do not start the vehicle. Contact TATA MOTORS dealer.

⚠ WARNING

During cold weather conditions/freezing weather, diesel fuel thickens due to formation of paraffin layer. This results in difficulty of engine starting as there will be interruption of fuel supply to engine. It is advised to use locally available diesel fuel appropriate for the cold temperature conditions which are available at the filling stations during winter season. Please check with your fuel retailer for further details.

ⓘ NOTE

It is recommended to maintain minimum of 10 liters of fuel in the fuel tank. Driving the vehicle till the fuel tank is empty is not advised. Always check fuel level before planning your journey.

Fuel (Petrol)

Unleaded Always use only unleaded fuel having an Octane Rating 91 / AKI (Anti-knock Index) 87 or higher.

Your vehicle is equipped with E20 compatible fuel system materials. It is recommended to use Petrol, Ethanol blends below 20% only. Make sure those blended fuel has no lower Octane Rating as recommended for Petrol



ⓘ NOTE

NEVER USE LEADED FUEL. This could deteriorate catalytic converter and damage emission control system and affect the environment.

TECHNICAL INFORMATION

LUBRICANT SPECIFICATION

Use following genuine fluids, coolants and lubricants recommended for optimum performance of your vehicle.

Item	Specification	Company	Brand	Quantity
Engine oil	0W20,SS6588	Castrol	GTX T 0W20	Petrol 3.5 L Diesel 5L
		Exxon Mobile	Mobil Super 3000 TM 0W20	
		Petronas	PETRONAS Syntium 7000 TM 0W20	
Coolant (pre-mixed Antifreeze agent + Softwater 40: 60 ratio)	Class II/JIS K2234 TATA SS7700S1	Ansysco	Puroblue	Petrol 4L (NA Engine) Petrol 5L (TC Engine) Diesel 5L
		Sunstar CCI	Golden Cruiser LLC2200NP	
		IOCL	TATA MOTORS GENUINE COOLANT KOOL PLUS	
Transaxle oil	EP80WLL (Next Gen) TATA SS6582	CASTROL	Next Generation Transmission oil EP80W	Petrol - 1.7 L Diesel - 2.1 L
		Petronas	PETRONAS TATA MOTORS Genuine -Gear oil New Gen 80 EP LL	
		IOCL	IOCL TATA MOTORS Genuine gear oil 80 WLL	
	-	FUCHS	Transmission oil FFL2 FUCHS/TITAN	Petrol DCT – 5.5 L
Brake fluid/ Clutch fluid	SAE J1703, DOT4	PETRONAS	Tutela Brake fluid DOT 4	As required
		Sunstar CCI	Golden Cruiser Tata Genuine Brake Fluid (DOT4)	
		CASTROL	Optional - CASTROL- Universal Brake Fluid DOT 4	
		ANCHEMCO ANAND	Ansysco Brake Fluid DOT 4	
Refrigerant	R-134 A			450 ±20 gm

TECHNICAL INFORMATION

Item	Specification	Company	Brand	Quantity
Compressor oil	SP10	Sandan Vikas	SP10	120 ± 15cc

TECHNICAL INFORMATION

TECHNICAL INFORMATION

Parameter	Diesel	Petrol (NA)	Petrol (TC)
Engine			
Mode/type	1.5 Common Rail Turbo Intercooled	Option I: 1.2 Revotron Petrol NA Engine	1.2P TC REVTRN21
Capacity	1497 cc	1199 cc	1199 cc
Max. Engine output	66 kW @ 4000 rpm	64.75 kW @ 6000 rpm (1.2 NG NA)	88.2 kW @ 5500 rpm
Max. Torque	200 Nm @ 1250 to 3000 rpm	115 Nm @ 3250 +/- 100 rpm (1.2 NG NA)	170 Nm @ 1750-4000 rpm
Transaxle			
Model	TA 5260	TA 65*	TA6300
Type	Synchromesh with Overdrive		
No. of gears	5-Forward, 1- Reverse		6 -Forward, 1- Reverse
Steering			
Type	Electric Power Assisted Steering System		EPAS collapsible with speed based assistance
Brakes			
Brakes	Front (Disc); Rear (Drum)		

TECHNICAL INFORMATION

Parameter	Diesel	Petrol (NA)	Petrol (TC)
Parking Brake	Hand Operated (Pull to Operate) on LHS of Driver		
Suspension			
Types	Front: Independent, lower wishbone, Mcpherson strut with coil spring and antiroll bar Rear: Semi-independent twist beam with coil spring and shock absorber		
Shock absorber	Hydraulic, gas filled		
Wheels and Tyre			
Tyres	Option I :165/80 R14 (Radial-Tubeless); Option II :185/60 R16 (Radial-Tubeless); Option I : 4.5jx14 (Steel wheel Rim) Option II : 6.5jx16 (Alloy wheel Rim) Option III : 6j X 16 (Steel wheel Rim)		185/60 R16 (Radial-Tubeless) 6.5jx16 (Alloy wheel Rim)
Fuel tank			
Capacity	37 liters		
Cab/body			
Type	Steel Monocoque body		Steel Unibody
Electrical system			

TECHNICAL INFORMATION


Parameter	Diesel	Petrol (NA)	Petrol (TC)
System Voltage	12 Volts (-ve earth)		
Alternator Capacity	Opt. 1: IAC - 13.5V 110A/14V 110A Opt. 2: Non IAC - 13.5 V 110A		
Battery	12V, 47.5 Ah	Option I : 12V, 60Ah	Option I : 12V, 52Ah
Main Chassis dimension (in mm)			
Wheel base	2501		
Track base	1510		
Track rear	1510		
Overall length	3990		
Overall height	1523		
Max. Width without ORVM	1755		
Max. Width with ORVM	1983		
Ground clearance (laden condition)	127mm	139mm	149mm

TECHNICAL INFORMATION

Parameter	Diesel	Petrol (NA)	Petrol (TC)
Performance			
Max Speed	166 kmph	154 kmph (1.2 NG NA)	160 kmph
Max. Recommended gradability	17.5	14.2	15.64
Minimum Turning Circle Dia. In meter as per IS: 12222	10	10 (1.2 NG NA)	10 m
Minimum Turning Clearance circle dia. in meters		10.6	
Weight (in kg)			
Gross vehicle weight (Laden)	1546-1604	1413-1515	1534 - 1555
Kerb weight (unladen)	1121-1177	988-1079	1109 - 1130


TECHNICAL INFORMATION

VEHICLE DIMENSIONS

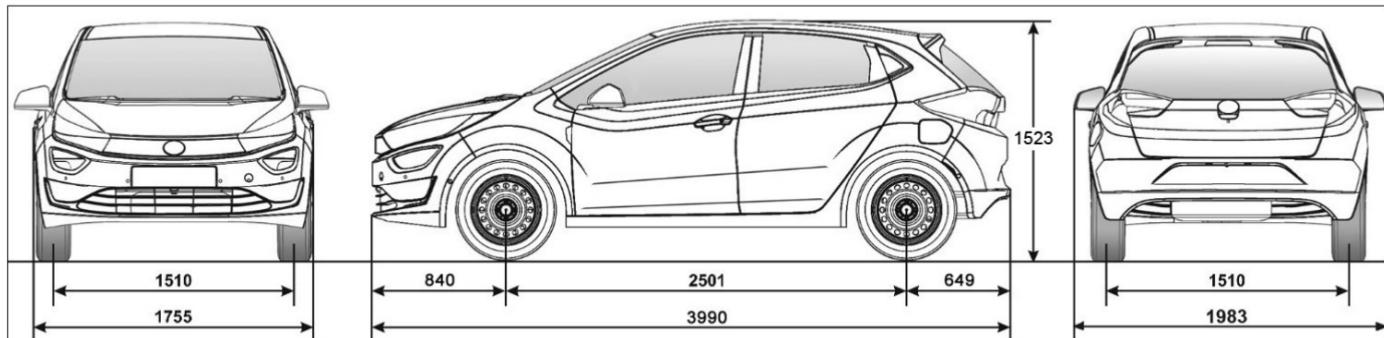


NOTE: Dimensions are in mm and under Unladen condition


AGGREGATE IDENTIFICATION NUMBERS

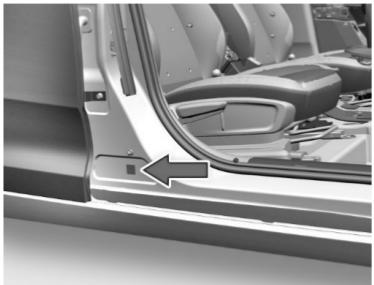


Chassis No. punching near driver seat

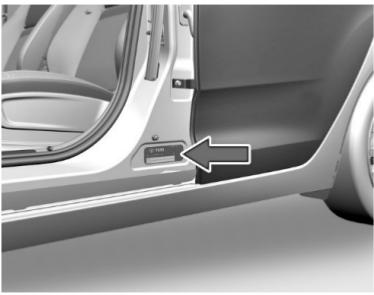


VIN plate location near front passenger seat

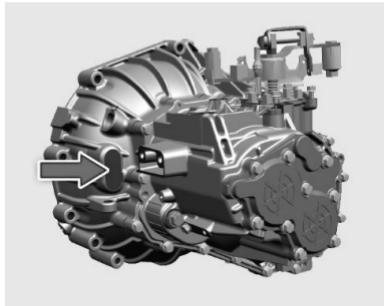


Transaxle No. Punching (TA 5260)

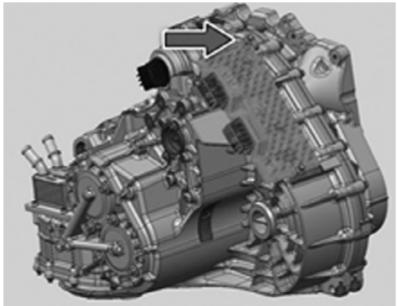

Transaxle No. Punching (DCT)

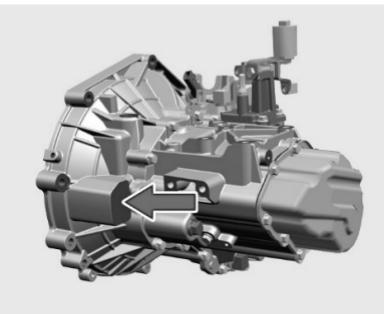


Transaxle No. Punching (TA 65)*

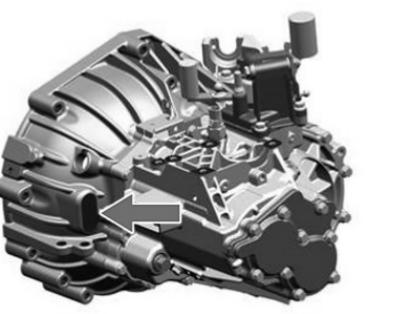


Transaxle No. Punching (TA 6300)


TECHNICAL INFORMATION

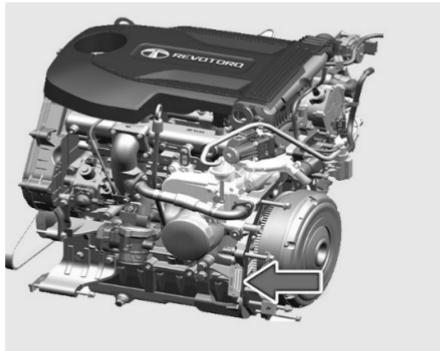

Engine No. Plate - Diesel

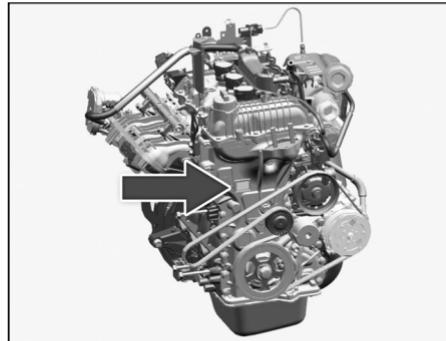

Engine No. Plate Petrol (TC)

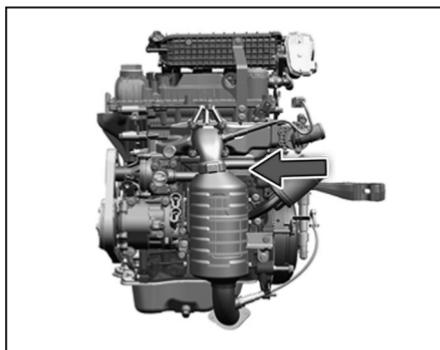

Engine No. plate Petrol (NA)

CAR CARE

Your vehicle is subjected to many external influences such as climate, road conditions, industrial pollution and proximity to the sea. These conditions demand regular care of the vehicle body. Dirt, insects, bird droppings, oil, grease, fuel and stone chippings should be removed as soon as possible.


Washing

Following these tips while washing your vehicle.

1. Always wash your vehicle in shade and ensure surface is at room temperature.
2. Wash with mild vehicle wash soap like 'Car Shampoo' and use a soft bristle brush, sponge or soft cloth and rinse it frequently while washing to avoid scratches.
3. To avoid scratches, please wear soft gloves. Remove finger rings, nails, wrist watch while washing.
4. To remove stubborn stains and contaminants like tar, use turpentine or

cleaners like 'Stain remover' which are safe for paint surfaces.

5. Avoid substances like petrol, diesel, kerosene, benzene, thinner, acids or other solvents that cause damage to paint.
6. Dry your vehicle thoroughly to prevent any damp spots.
7. Rinse all surfaces thoroughly to prevent any traces of soap and other cleaners as this may lead to the formation of stains on the painted surface later.
8. During washing of the vehicle, do not apply water jet OR pressure water from pipe directly on any rubber material or Seal surface. This is to avoid damage to Rubber sealing parts in the sunroof system or in the vehicle. The damage to the sunroof sealing or any other seal in the vehicle will cause water ingress inside the vehicle.

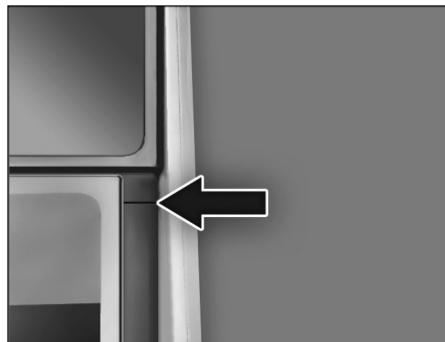

(i) NOTE

- *Avoid parking the car under trees without proper cover, it will reduce the amount of bird droppings, tree sap and pollen contact on paint surface. Regularly remove the twigs, leaves and vegetation near the windshield areas, to avoid water stagnation.*
- *Always close the sunroof while washing the vehicle.*

WARNING

Do not direct high pressure washer fluid/ water jets (Pressure above 0.5 bar) at electrical devices and connector during washing. This is to prevent malfunction / failure of electrical system due to water ingress.

After drying the vehicle, inspect it for chips and scratches that could allow corrosion to start. Apply touch up paint where necessary.

Cleaning of Carpets

Vacuum clean the carpet regularly to remove dirt. Dirt will make the carpet wear out faster. Periodically, shampoo the carpet to keep it looking new.

Use carpet cleaners (preferably foam type). Follow the instructions that come with the cleaner. Apply it with a sponge or soft brush. Keep the carpeting as dry as possible by not adding water to the foam.

NOTE

Avoid wiping of painted surface in dry condition as it may leave scratches on the painted surface.

Cleaning of Windows, Front and Rear Glasses

Clean the windows inside and outside with commercially available glass cleaners.

This will remove the haze that builds up on the inside of windows. Use a soft cloth or paper towels to clean all glass and plastic surfaces.

Waxing

Waxing and polishing is recommended to maintain the gloss and wet-look appearance of your paint finish.

1. Use good quality polish and wax for your vehicle.
2. Re-wax your vehicle when the water does not slip off the surface but collects over the surface in patches.

Polishing

Polishes and cleaners can restore shine to the painted surface that has oxidized and become dull. They normally contain mild abrasives and solvents that remove the top layer of the finish coat. Polish your vehicle, if the finish does not regain its original shine after using wax.

Interior Fabric Cleaning Tips

1. Stains should be treated immediately. If left for a long time, they can leave a permanent mark.
2. Cleaning the stains immediately is important especially for stains, which contain artificial colors in the stain creating liquid or semisolid substance. The colorant may leave a stain if kept for longer time.
3. Stain should not be removed by rubbing. As far as possible, try to blot or lift the stain with cloth or plastic spatula and then clean the remaining stain with cloth or sponge.
4. If the stain has dried, then gently brush off the material and then press with

damp cloth or sponge till it disappears.

- Do not use household detergents to clean the fabric.
- Always use clean cotton cloth for cleaning.

Paint Care

Following guidelines will help you to protect your vehicle from corrosion effectively.

(i) NOTE

Avoid Spillage or Direct contact of Air freshener liquid/chemicals with painted plastic parts. These chemicals may cause damage to paint like blisters, peel off, wrinkles etc.

Proper Cleaning

In order to protect your vehicle from corrosion it is recommended that you wash your vehicle thoroughly and frequently in case:

- There is a heavy accumulation of dirt and mud especially on the underbody.
- It is driven in areas having high atmospheric pollution due to smoke, soot, dust, iron dust and other chemical pol-

lutants.

- It is driven in coastal areas.
- The underbody must be thoroughly pressure washed after every three months.
- In addition to regularly washing your car, the following precautions need to be taken.

Periodic Inspection

- Regularly inspect your vehicle for any damage in the paint film such as deep scratches and immediately get them repaired from an authorized service outlet, as these defects tend to accelerate corrosion.
- Inspect mud liners for damages.
- Keep all drain holes clear from clogging.

Proper Parking

- Always park your vehicle in shade do not expose the vehicle to direct sunlight for extended period of time.
- Extended exposure to sunlight may deform plastic parts like dashboard, leather surface etc.
- Item like cigarette lighter, perfume spray, soft drink can kept inside the vehicle in direct sunlight may result in fire explosion etc.
- Do not park your vehicle for long duration in front of glass building where direct sunlight is exposed on the glass which reflects and may transfer the heat on vehicle. In this case plastic parts may melt.

VEHICLE CARE AND VALUE ADDED SERVICES

Wiper Care

- To prevent damage to the wipers or windshield, do not operate the wipers when the windshield is dry.
- To prevent damage to the wiper arms and other components, do not attempt to move the wipers manually.

NOTE

We strongly recommended to avoid applying any external coating solution on vehicle glazing / glasses, especially on Front & Rear Windscreen Glass. This may affect the Wiper performance & lead to poor visibility while using Wipers in wet condition/Rainy season.

VALUE CARE - AMC

Value Care (AMC) is a fixed cost maintenance plan that guarantees protection against unexpected repairs & provides substantial savings through protection against inflation & price volatility of consumables during the running of the vehicle.

Our customers can choose from **Value Care Gold** and **Value Care Silver** plan as per the requirement & usage to ensure hassle free, reliable & economic maintenance of the vehicle.

Coverage – **Schedule Service and Wear & Tear.**

Advantages (Customer Benefits)

- Price protection against rising prices of lubes and parts.
- A higher resale value for your vehicle.
- Peace of mind with Cashless repairs & services.
- Vehicle servicing at a workshop of your choice pan India.
- Covers Repairs including Wear & Tear parts viz. Brakes, Suspension, Wiper, Clutch, Brake Pads, Brake Liners etc.
- Covers Scheduled maintenance services including Lubricants, Parts, Wheel Alignment and Balancing Labour.
- Available at unmatched value.... Huge Savings!!!
- Savings on Goods & Services Tax whenever vehicle attend under AMC.



VEHICLE CARE AND VALUE ADDED SERVICES

Equipped Offers (Types of AMC)

- Silver AMC
- Gold AMC

Silver AMC

Value Care Silver Plan covers the following:

- Scheduled maintenance services at periodic interval of Kms for Labor, Parts & Consumables.
- 1. Change of Oil Filter, Fuel Filter, Air Filter & Sedimentar.
- 2. Change of Engine Oil, Transmission Oil.
- 3. Change of Coolant, Brake Oil & Clutch Fluid*.
- 4. General Checkup, Wheel Alignment / Balancing (Excluding Balancing Weight).
- 5. Washing of Vehicle, Wheel greasing as applicable.

Gold AMC

The value care Gold Plan extends your scheduled maintenance cover to include any normal wear and tear items identified during the scheduled service and other vehicle parts that need to replace during the period of cover arising from proper and uniform usage.

- Scheduled maintenance services at periodic interval of Kms for Labor, Parts & Consumables.

In addition to coverage mentioned under Silver AMC, the Gold AMC also covers Repairs or Replacement of Wear & Tear Items for both Parts & Labour.

1. Brake Pads, Brake Lines, Wheel Cylinders
2. Clutch Disc, Clutch Cover, Cables, Mountings.
3. Suspension Bush, Wiper Blades, Auxiliary Belt & other Wear & Tear Items
4. Washing of Vehicle, Wheel greasing as applicable.

VEHICLE CARE AND VALUE ADDED SERVICES

(i) NOTE

- *AMC is available in the dealership from where you have purchased your vehicle.*
- *We strongly recommend purchase of AMC at time of purchase of your vehicle to get benefit for coverage of Scheduled Services and Wear & Tear parts.*
- *The Dealer Service Marketing Executive shall explain to you the Terms and conditions, Coverage and Owner's responsibility.*
- *One Time payment is to be made to avail AMC offer.*
- *Please read the offer eBooklet for further details about coverage and exclusions of various AMCs.*

Owner's Responsibility

- Proper use, maintenance and care of the vehicle in accordance with the instructions contained in the Owner's Manual and Service Booklet. The records of the same to be ensured in Owner's Manual.
- Retention of maintenance service bills.

I / We have been explained the Terms and conditions, Coverage and Owner's responsibility by the Dealer Service Marketing Executive.

I wish to avail / Do not wish to avail Value care AMC policy.

Customer's Signature

Dealer's Signature

VEHICLE CARE AND VALUE ADDED SERVICES

VALUE ADDED SERVICES

Why are Corrosion Protection Waxes necessary?

Corrosion is Caused by

Water/salt water, acid rain and atmospheric fallouts.

Critical Areas are

Cavities: joints, crevices, spot welds, underbody

- Corrosion is the most important factor when we talk about the vehicle life. If you treat your car well, you can prolong its life.
- It is very dangerous to drive around in a corroded vehicle.
- Corrosion creeps onto the vehicle internally and externally as well. The most dangerous kind of corrosion is often not discovered until it is too late.

Benefits of Anti - Rust Treatment

- A professionally applied range of world class products offering real value to the new and used vehicle customer.
- The treatment has been developed to withstand the harshest environmental and climatic conditions (rust. Pollutants, stone and gravel impact, etc.)
- Insulates the cabin from external noises..
- Expensive tin work, denting and painting can be avoided.
- Higher resale value for the vehicle.
- Higher safety – uncorroded vehicle
- 10 free checkups available



VEHICLE CARE AND VALUE ADDED SERVICES

TATA MOTORS has tied up with **M/s Wurth, M/s Autokrom, M/s 3M India Lt d & M/s Bardahl** for these world class treatment at affordable prices. These treatments are available in all authorized workshops. The Dealer Service Marketing Executive will explain to you the benefits and terms and conditions of this treatment.

I / We have been explained the Benefits, Terms and conditions and the prices of these treatments by the Dealer Service Marketing Executive.

I wish to avail / Do not wish to avail extended warrant policy.

Customer's Signature

Dealer's Signature

VEHICLE CARE AND VALUE ADDED SERVICES

VEHICLE INTERIOR ENRICHMENT

Why To Protect Your New Car's Fabric Interior?

- Someone will spoil your vehicle's fabric carpet or seats.
- A significant detractor from your vehicle's resale value.
- A permanent stain on your vehicle's interior fabric.

Vehicle Interior Gets Affected From:

Drink Spills - Food Stains - Mud - Ultraviolet Rays Pets - Traffic

Benefits: Vehicle Interior Enrichment

- Removal of medium stains and dirt from all interior parts of the car i.e., carpet, upholstery and roof lining.
- Cleaning of windshield and all windows (inside and outside).
- Dressing of all internal plastics (e.g.: door pad trims) and rubber parts.
- The treatment involves cleaning and dressing of all parts of the exposed interiors.
- Specialised protection for seat fabric from liquid spills.

TATA MOTORS has tied up with **M/s Wurth and M/s Autokrom** for this world class treatment at affordable prices. This treatment is available in all authorized workshops. The Dealer Service Marketing Executive will explain to you the benefits and terms and conditions of this treatment.

I / We have been explained the Terms and conditions, Coverage and Owner's responsibility by the Dealer Service Marketing Executive.

I wish to avail / Do not wish to avail Extended warrant policy.

Customer's Signature

Dealer's Signature

VEHICLE EXTERIOR ENRICHMENT

Why Vehicles are Painted?

- For Corrosion protection of the metal surfaces.
- Ease of application from other corrosion protection treatments.
- Cheaper than other corrosion protection methods eg. Galvanizing, anodizing.
- For decoration and identification.

Various Environmental Hazards Affecting Paints

Environmental hazards: destroy your vehicle's finish.

Even as your new vehicle rolls off the assembly line, the paint is not protected.

Vehicle Paint Gets Affected From:

Ultraviolet Rays, Pollution, Tree Sap, Bird Droppings, Car Wash Chemicals, Road Salt, Acid Rain.

Benefits: Vehicle Exterior Enrichment

- Removal of medium scratches, orange peel, oxidation, dust nibs etc. & swirl marks from painted surface.
- Restoration of original gloss levels, UV protection after gloss is restored.
- Cleaning & dressing of tyres, Bumpers & all exterior plastic moldings/trims.

TATA MOTORS has tied up with **M/s Autokrom, M/s 3M & M/s Wurth** for this world class treatment at affordable prices. This treatment is available in all authorized workshops. The Dealer Service Marketing Executive will explain to you the benefits and terms and conditions of this treatment.



ENVIRONMENT PROTECTION

TATA MOTORS PASSENGER VEHICLE LIMITED is committed to produce vehicles using environmentally sustainable technology. A number of features have been incorporated in TATA MOTORS passenger vehicles which have been designed to ensure environmental compatibility throughout the life cycle of the vehicle. We would like to inform you that your vehicle meets BS VI emission norms and this is being regularly validated at the manufacturing stages. As a user you too can protect the environment by operating your vehicle in a proactive manner. A lot depends on your driving style and the way you maintain your vehicle. We have given a few tips for your guidance.

Driving

- Avoid frequent and violent acceleration.
- Do not carry any unnecessary weight in the vehicle as it overloads the engine. Avoid using devices requiring high power consumption during slow city traffic condition.
- Monitor the vehicle's fuel consumption regularly and if showing rising trend get the vehicle immediately attended at the Company's Authorised Service Outlets.
- Switch off the engine during long stops at traffic jams or signals. If you need to keep the engine running, avoid unnecessary revving it or stopping and starting.
- It is not necessary to rev the engine before turning it off as it unnecessarily burns fuel.

- Shift to higher gears as soon as it is possible. Use each gear upto 2/3rd of its maximum engine speed.
- A chart indicating gear shifting speeds is given in this book.

Maintenance

- Ensure that recommended maintenance is carried out on the vehicle regularly at the Authorised Service Outlets.
- As soon as you see any leakages of oil or fuel in the vehicle we recommend to get it attended immediately. Use only recommended grades and specified quantity of lubricants.
- Get your vehicle checked for emission periodically by an authorised dealer.
- Check Air filter, fuel filter and oil filter periodically and replaced, if required, as recommended by TATA MOTORS.
- Do not pour used oils or coolants into the sewage drains, garden soil or open streams. Dispose the used filters and batteries in compliance with the current legislation.
- Do not allow unauthorized person to tamper with engine settings or to carry modifications on the vehicle. Never allow the vehicle to run out of fuel.
- Parts like brake liners, clutch discs should be vacuum cleaned. Do not use compressed air for cleaning these parts, which may spread hazardous dust in the atmosphere.

ENVIRONMENT PROTECTION

EMISSION AFFECTED COMPONENTS

While carrying out servicing or repairs of your vehicle, you should pay keen attention to some of the important engine aggregates and wiring harnesses, which greatly affect emission. These components are:

For Diesel

1. Fuel injection equipment- pump, rail, injectors, nozzles and high-pressure pipes.
2. Air Intake & Exhaust system, especially for leakages.
3. Cylinder head for valve leakage.
4. All filters such as air, oil and fuel filters (check periodically).
5. Turbocharger.
6. EGR Valve & Cooler
7. Intake throttle
8. Electrical connections.
9. If the 'Check Engine lamp', 'MIL' or 'DPF' lamp continuously glows, please take the vehicle to a TATA MOTORS Authorized Dealer/Service Center.
10. Catalytic Converter.(LNT - Lean NOx trap & DPF for Diesel)
11. EMS wiring harness i.e. electrical connections to all sensors and actuators.

For Petrol

1. Engine Management System (EMS)
 - ECU
 - EMS sensors & Corresponding wiring harness
 - Electrical connections to all sensors & actuators
2. Fuel Injection System
 - Fuel Pump
 - Fuel filter
 - Fuel Injectors
3. Air intake System
 - Air filter & connecting pipes
4. Exhaust after Treatment System
 - Catalytic Converter
5. Ignition System
 - Ignition coil
 - Spark plug

This Owner's manual contains further information on driving precautions and maintenance care leading to environment protection. Please familiarize yourself with these aspects before driving.

WARRANTY: TERMS AND CONDITIONS

We WARRANT each TATA ALTROZ vehicle and parts thereof manufactured by us to be free from defect in material and workmanship subject to the following terms and conditions:

1. This warranty shall be for a period of **3 years from the date of sale of the car or a mileage of 1,00,000 Kms whichever occurs earlier.**
2. Our obligation under this warranty shall be limited to re-pairing or replacing, free of charge, such parts of the car which, in our opinion, are defective, on the car being brought to us or to our dealers within the period. The parts so repaired or replaced shall also be warranted for quality and workmanship but such warranty shall be co-terminus with this original warranty.
3. Any part which is found to be defective and is replaced by us under the warranty shall be our property.
4. As for such parts as Tyres, Batteries, Audio and / or Video equipment (if any), etc. not manufactured by us but supplied by other parties, this warranty shall not apply, but buyers of the car shall be entitled to, so far as permissible by law, all such rights as we may have against such parties under their warranties in respect of such parts.
5. This warranty shall not apply if the car or any part thereof is repaired or altered otherwise than in accordance with our standard repair procedure or by any person other than from our sales or service establishments, our authorized dealers, service centres or service points in any way so as, in our judgment which shall be final and binding, to affect its reliability, nor shall it apply if, in our opinion which shall be final and binding, the car is subjected to misuse, negligence, improper or inadequate maintenance or accident or loading in excess of such carrying capacity as certified by us, or such services as prescribed in our Owner's Manual are not carried out by the buyer through our sales or service establishments, our authorized dealers, service centres or service points.
6. **This warranty shall not apply to the replacement of normal wear parts, including without limitation, spark plugs, drive belts, hoses, wiper blades, fuses, clutch disc, brake shoes, brake pads, cables and all rubber parts (except oil seal and glass run).**
7. This warranty shall not cover any inherent normal deterioration of the car or any of its parts arising from the actual use of the car or any damage due to negligent or improper operation or storage of the car.
8. This warranty shall not apply to normal maintenance services like oils & fluid changes, head lamps focusing, fastener retightening, wheel balancing and alignment, tyre rotation, adjustment of valve clearance, fuel timing, ignition timing and consumables like bulbs, fuel, air & oil filters and gas leaks in case of air conditioned cars.
9. This warranty shall not apply to any damage or deterioration caused by environmental pollution or bird droppings. Slight ir-

WARRANTY

regularities not recognized as affecting the function or quality of the vehicle or parts, such as slight noise or vibration, defects appearing only under particular or irregular operations are items considered characteristics of the vehicle.

10. This warranty shall be null and void if the car is subjected to abnormal use such as rallying, racing or participation in any other competitive sport. This warranty shall not apply to any repair or replacements as a result of accident or collision.

11. This warranty is expressly in lieu of all warranties, whether by law or otherwise, expressed or implied, and all other obligations or liabilities on our part and we neither assume, nor authorize any person to assume on our be-half, any other liability arising from the sale of the car or any agreement in relation thereto.

12. The buyer shall have no other rights except those set out above and have, in particular, no right to repudiate the sale, or any agreement or to claim any reduction in the purchase price of the car, or to demand any damages or compensation for losses, incidental or indirect, or inconvenience or consequential damages, loss of car, or loss of time, or otherwise, incurred or accrued.

13. Any claim arising from this warranty shall be recognized only if it is notified in writing to us or to our authorized dealer without any delay soon after such defects as covered & ascertained under this warranty.

14. This warranty is fully transferable to subsequent vehicle

owner. Only unexpired remaining period of warranty applies.

15. We reserve our rights to make any change or modification in design of the car or its parts or to introduce any improvement therein or to incorporate in the car any additional part or accessory at any time without incurring any obligation to incorporate the same in the cars previously sold

EXTENDED WARRANTY: TERMS & CONDITIONS

TATA MOTORS recommends the purchase of its extended warranty program.

Coverage - Mechanical + Electrical

Benefits

- Insures you against unforeseen break down repair bills.
- Documentation is simple and hassle free.
- Near cashless & speedy claim

Term

36 + 12 months or 1,00,000 kms whichever occurs first

OR

36 + 24 months or 1,25,000 kms whichever occurs first

Extended Warranty is available in the dealership from where you have purchased your vehicle. We strongly recommend purchase of Extended Warranty at time of purchase of your vehicle. Extended Warranty can be availed until warranty period from date of purchase of vehicle. The Dealer Service Marketing Executive shall explain to you the Terms and conditions, Coverage and Owner's responsibility.

Note:

- The extended warranty comes into force once the manufacturer's warranty expires.
- It is more restrictive as by the time it comes into force the vehicle is already 36 months old.



EXTENDED WARRANTY

What is Covered?

- Mechanical / Electrical break down as defined in this warranty and confirmed by the dealer within the stipulated terms and conditions.
- TATA MOTORS dealer shall either repair or replace any part found to be defective with a new part or an equivalent at no cost to the owner for parts or labour.
- Such defective parts which have been replaced will become property of TATA MOTORS PASSENGER VEHICLE LIMITED.

What is not Covered?

Please refer the Extended Warranty Booklet for details of the exclusion list. Soft copy can be available with the dealer.

Owner's Responsibility

- Proper use, maintenance and care of the vehicle in accordance with the instructions contained in the Owner's Manual and Service Booklet. The records of the same to be ensured in Owner's Manual.
- Retention of maintenance service bills.

I / We have been explained the Terms and conditions, Coverage and Owner's responsibility by the Dealer Service Marketing Executive.

I wish to avail / Do not wish to avail extended warrant policy.

Customer's Signature

Dealer's Signature

Customer's copy



PDI Coupon

Altroz BS VI

Pre Delivery Inspection

Dealer's copy



PDI Coupon

Altroz BS VI

Pre Delivery Inspection

AVAIL ALL SERVICES TO GET BENEFIT OF WARRANTY

This Coupon entitles for free labour jobs.(Refer maintenance section)

Owner's Name:

Owner's Name:

VIN No.:

VIN No.:

Engine / Motor No.:

Engine / Motor No.:

Reg. No.:

Reg. No.:

ODO Reading:

ODO Reading:

Date of Sale:

Date of Service:

Date of Service:

Service Dealer code:

I hereby certify that the PDI has been carried out to my entire satisfaction.

Service Dealer's Stamp & Signature

Customer's Signature

Service Dealer's Stamp & Signature

(Free Service coupons are valid at all TATA Authorized Service Centers in India)

Customer's copy



1st Free Service Coupon

Altroz BS VI

Valid for 1000 - 2000 kms. OR 2 months,
Whichever is earlier

Dealer's copy



TATA 1st Free Service Coupon

Altroz BS VI

Valid for 1000 - 2000 kms. OR 2 months, whichever is earlier.

AVAIL ALL SERVICES TO GET BENEFIT OF WARRANTY

This Coupon entitles for free labour jobs.(Refer maintenance section)

Owner's Name:

Owner's Name:

VIN No.:

VIN No.:

Engine / Motor No.:

Engine / Motor No.:

Reg. No.:

Reg. No.:

ODO Reading:

ODO Reading:

Date of Sale:

Date of Service:

Date of Service:

Service Dealer code:

I hereby certify that the service has been carried out to my entire satisfaction.

Service Dealer's Stamp & Signature

Customer's Signature

Service Dealer's Stamp & Signature

(Free Service coupons are valid at all TATA Authorized Service Centers in India)

Customer's copy



2nd Free Service Coupon

Altroz BS VI

Valid for 7000 - 8000 kms. OR 6 months,
whichever is earlier

Dealer's copy



TATA 2nd Free Service Coupon

Altroz BS VI

Valid for 7000 - 8000 kms. OR 6 months, whichever is earlier.

AVAIL ALL SERVICES TO GET BENEFIT OF WARRANTY

This Coupon entitles for free labour jobs.(Refer maintenance section)

Owner's Name:

Owner's Name:

VIN No.:

VIN No.:

Engine / Motor No.:

Engine / Motor No.:

Reg. No.:

Reg. No.:

ODO Reading:

ODO Reading:

Date of Sale:

Date of Service:

Date of Service:

Service Dealer code:

I hereby certify that the service has been carried out to my entire satisfaction.

Service Dealer's Stamp & Signature

Customer's Signature

Service Dealer's Stamp & Signature

(Free Service coupons are valid at all TATA Authorized Service Centers in India)

Customer's copy



3rd Free Service Coupon

Altroz BS VI

Valid for 14,500 – 15,500 kms. OR 12 months, whichever is earlier

Dealer's copy



TATA 3rd Free Service Coupon

Altroz BS VI

Valid for 14,500 – 15,500 kms. OR 12 months, whichever is earlier.

AVAIL ALL SERVICES TO GET BENEFIT OF WARRANTY

This Coupon entitles for free labour jobs.(Refer maintenance section)

Owner's Name:

Owner's Name:

VIN No.:

VIN No.:

Engine / Motor No.:

Engine / Motor No.:

Reg. No.:

Reg. No.:

ODO Reading:

ODO Reading:

Date of Sale:

Date of Service:

Date of Service:

Service Dealer code:

I hereby certify that the service has been carried out to my entire satisfaction.

Service Dealer's Stamp & Signature

Customer's Signature

Service Dealer's Stamp & Signature

(Free Service coupons are valid at all TATA Authorized Service Centers in India)



TATA MOTORS | SERVICE

RESPONSIVE • RELIABLE • BEST VALUE



